

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 141002

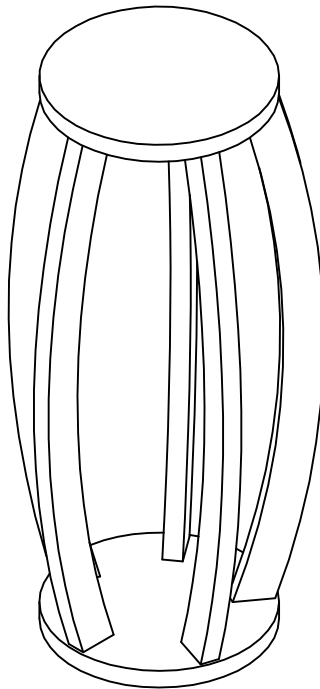

PARTS IDENTIFICATION







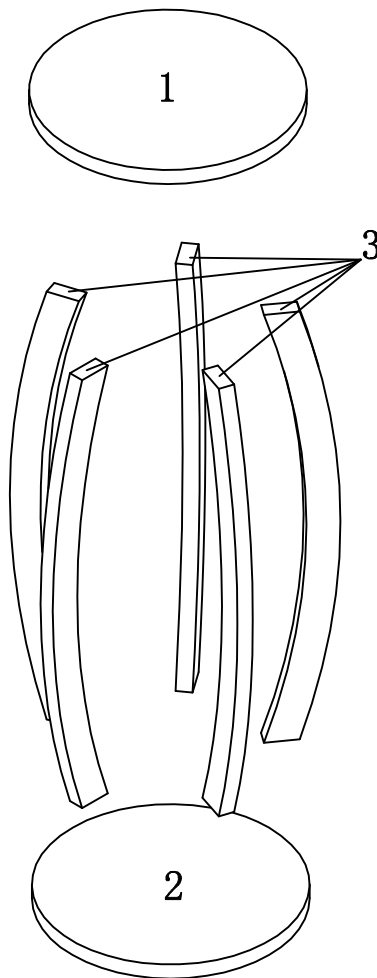








ITEM#:141002



- | | |
|-----|------|
| (1) | 1pc |
| (2) | 1pc |
| (3) | 5pcs |


HARDWARE IDENTIFICATION

ITEM#:141002

A		Ø6x55	5pcs
B		Ø15	5pcs
C		Ø8x25	10pcs
D		L29	5pcs
E		Ø15	5pcs
F		M4	1pc
G			5pc
H		Ø13	5pc
I		Ø20	5pcs
J		197×5×1	1pc
K		Ø4×25	1pc
L		Ø5×40	1pc
M		Ø8×40	1pc
N		12×12×1	2pcs
O		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

ITEM#: 141002

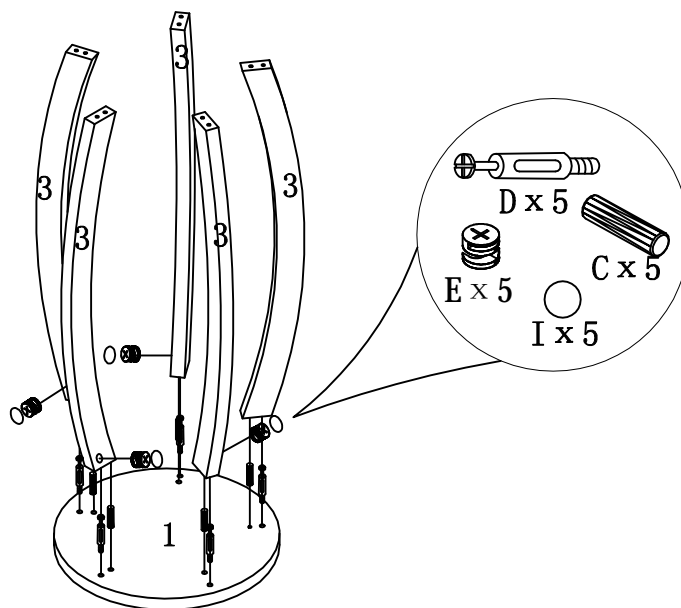


STEP1

STEP2

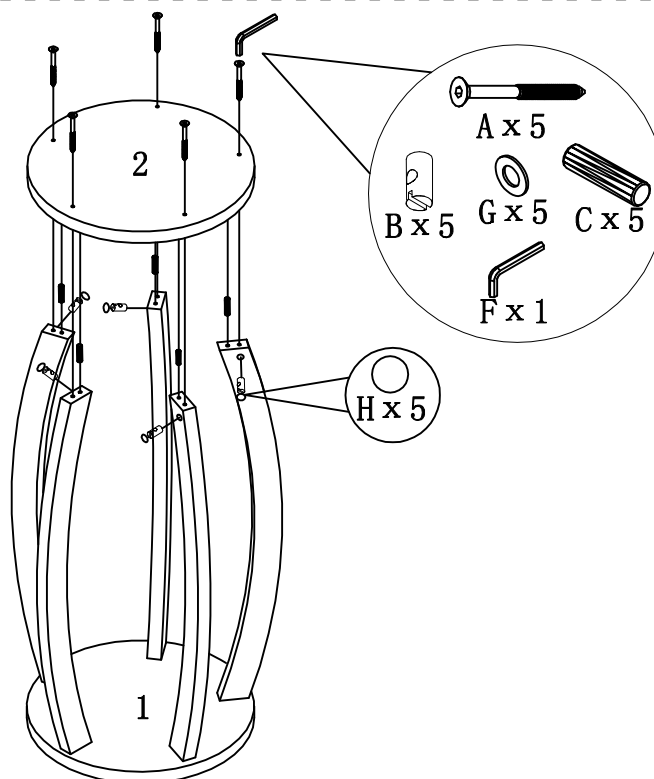


Anti-Tipping strap Instruction


Hardware List (Included):



Drywall Anchor 1PC



Metal Brackets 2PC



Drywall screw 1PC




Strap 1PC



Flathead Screw 1PC

Tools(Not Included):

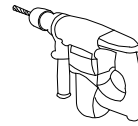


Drill & Drill Bit



Light Hammer


Note: Hardware included only compatible with standard drywalls.

STEP 1

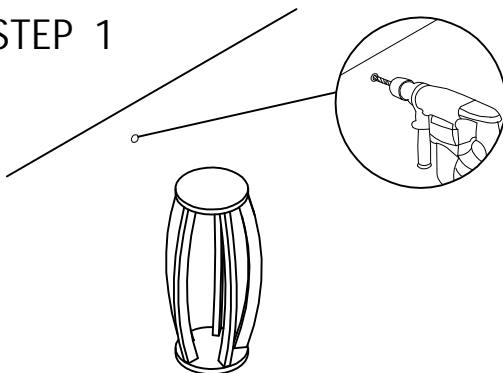


- 1.Find spot on wall 1" below top of item.
- 2.Using a drill bit slightly thinner than anchor ,drill hole into drywall.

STEP 2

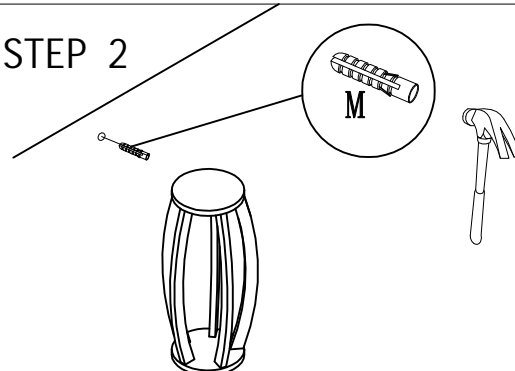


- 1.Use a light hammer to tap anchor into hole.
- 2.Anchor should fit snugly.If hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3

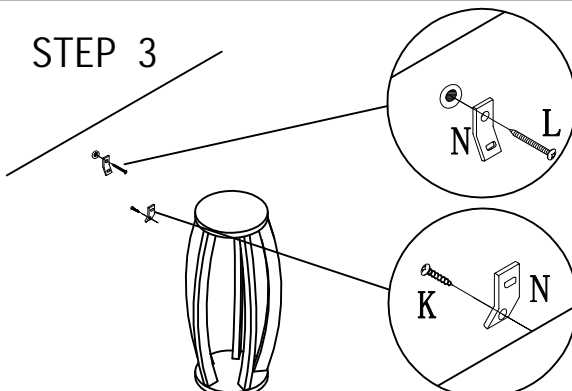

- 1.Insert drywall screw into metal bracket and into drywall anchor.
- 2.Insert flathead screw into second metal bracket and into back of item.along top edge.

STEP 4

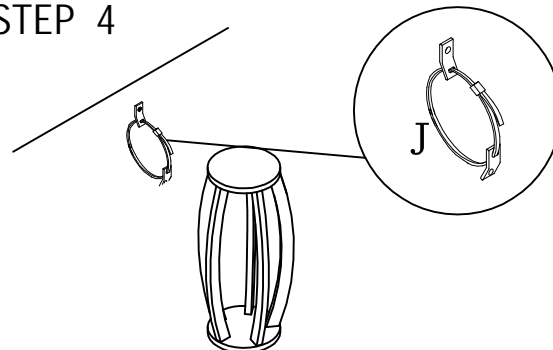

- 1.Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
 - 2.pull lightly til strap stops.
- Assembly is complete.**