


# ASSEMBLY INSTRUCTION

---

ITEM#: 161704

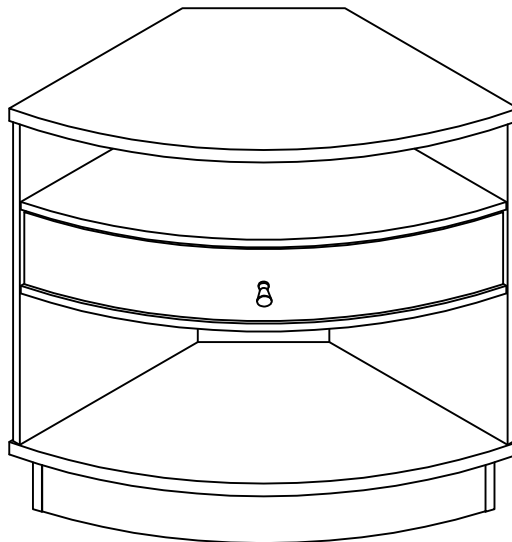

# ASSEMBLY INSTRUCTION

---


## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 161704

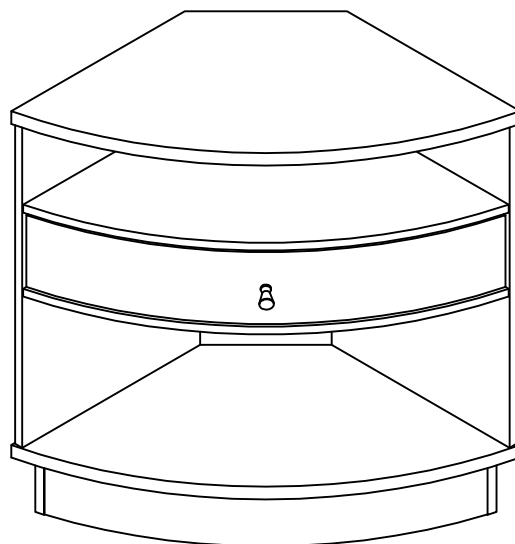

# PARTS IDENTIFICATION

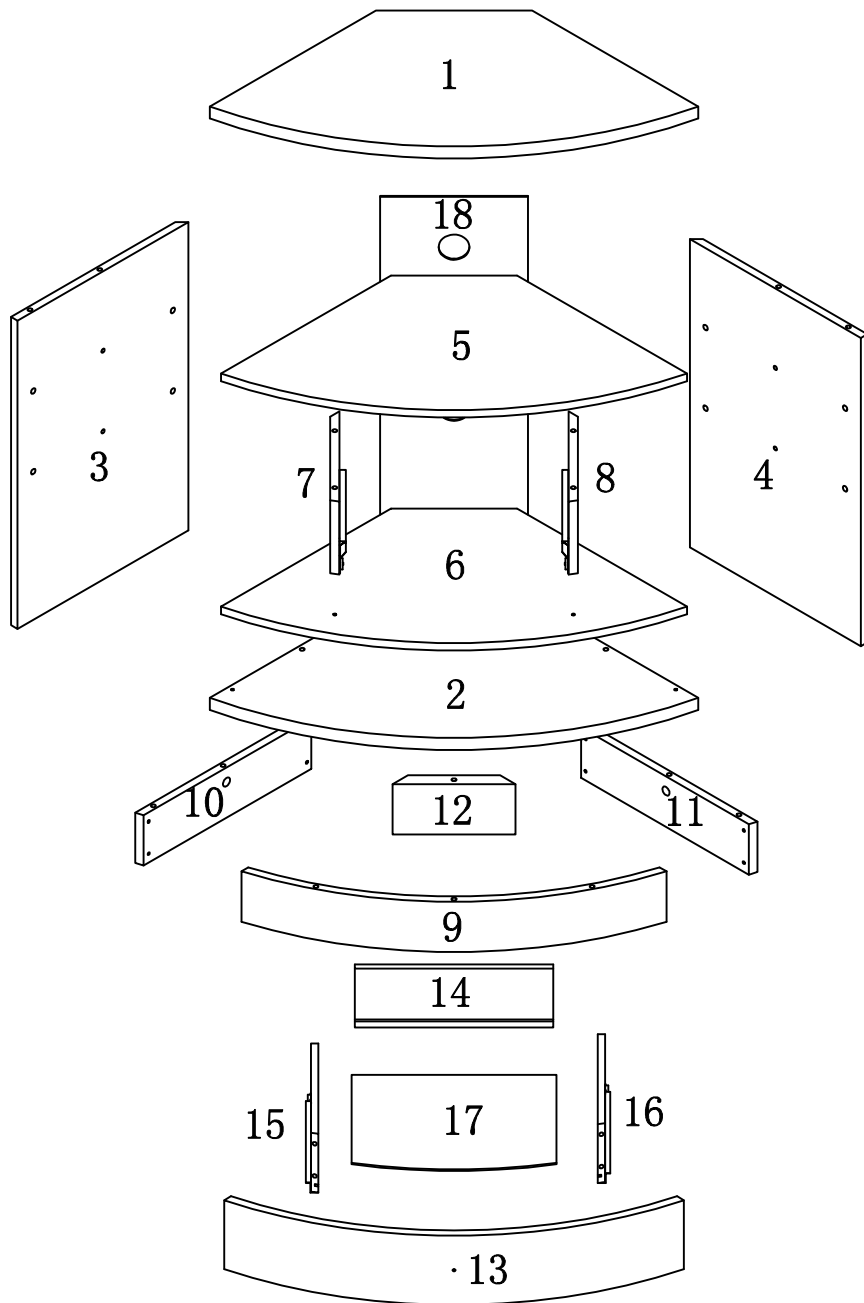
















ITEM#: 161704



(1)	1pc	(7)	1pc	(13)	1pc
(2)	1pc	(8)	1pc	(14)	1pc
(3)	1pc	(9)	1pc	(15)	1pc
(4)	1pc	(10)	1pc	(16)	1pc
(5)	1pc	(11)	1pc	(17)	1pc
(6)	1pc	(12)	1pc	(18)	1pc







# HARDWARE IDENTIFICATION


ITEM#: 161704

A		L29	21pcs
B		Ø15	21pcs
C		□4 x 30	16pcs
D		Ø8x25	13pcs
E		Ø4x40	4pcs
F			18pcs
G		L20	4pcs
H		Ø12	4pcs
I			1pc
J		Φ 4 x 22	1pc
K		Ø16	5pcs
L		Ø8x40	1pc
M		Ø12x12x1	2pcs
N		Ø5x40	1pc
O		Ø4x25	1pc
P		197×5×1	1pc
Q		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION


ITEM#:161704

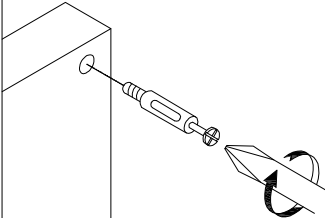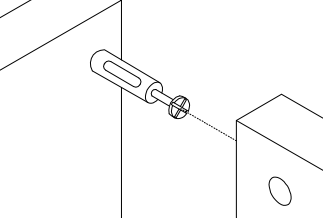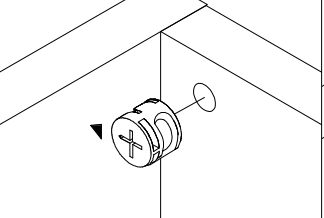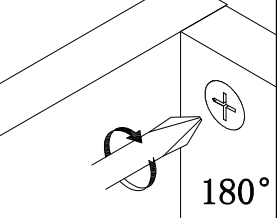HOW TO	1	2	3	4
				
Cam Bolt 	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.
Cam Lock 				

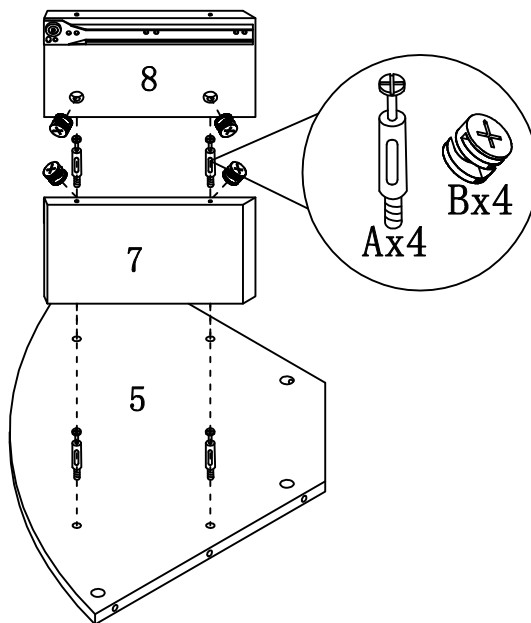


STEP1

STEP2

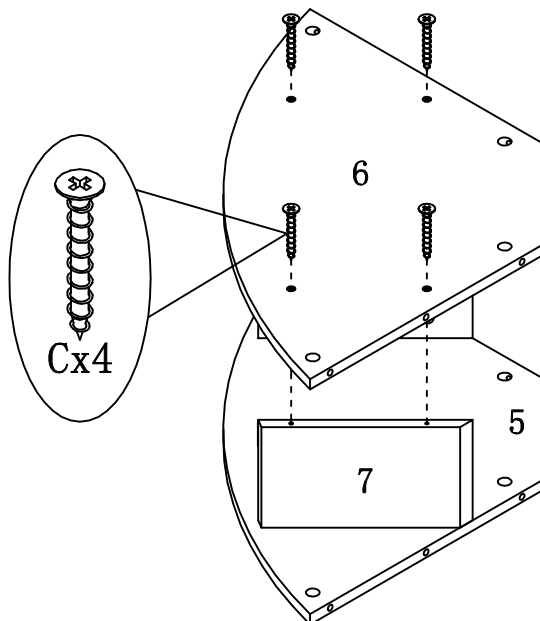


# ASSEMBLY INSTRUCTION

ITEM#:161704

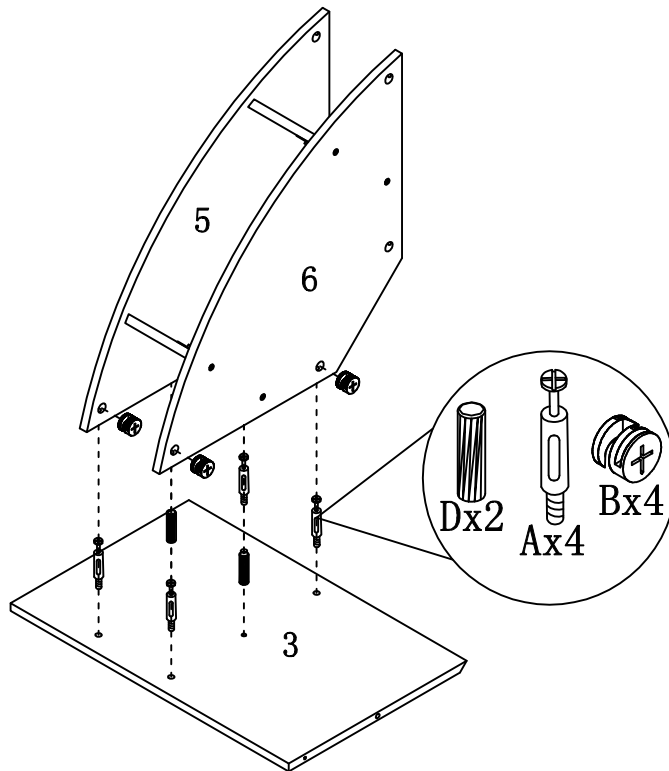


STEP3

STEP4

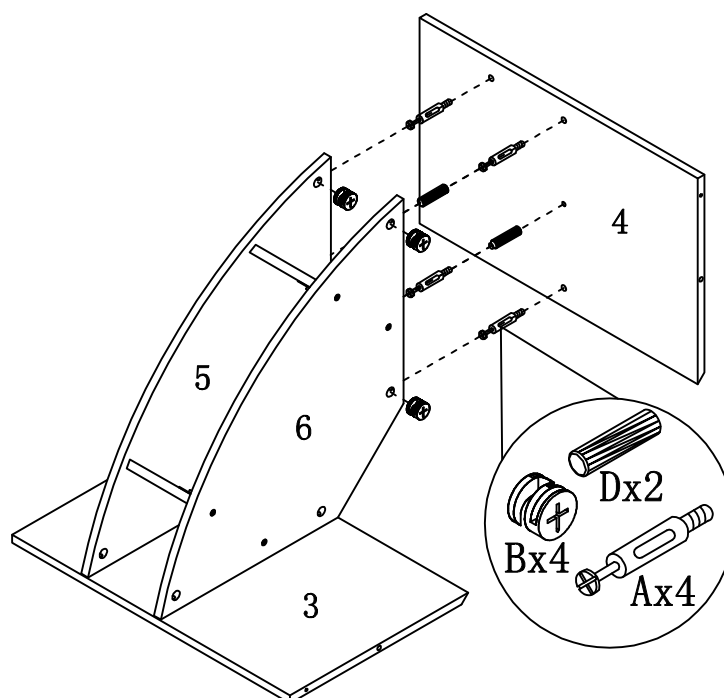


# ASSEMBLY INSTRUCTION

ITEM#:161704

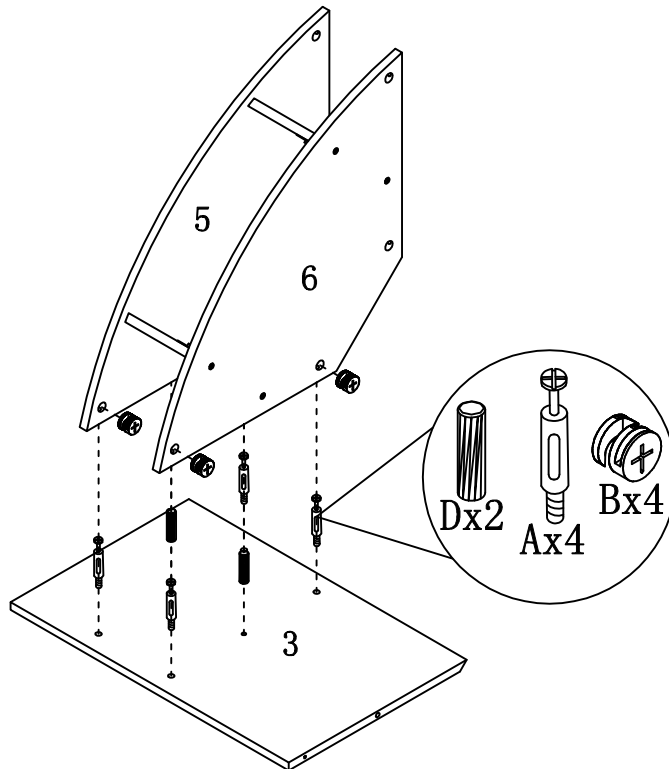


STEP5

STEP6

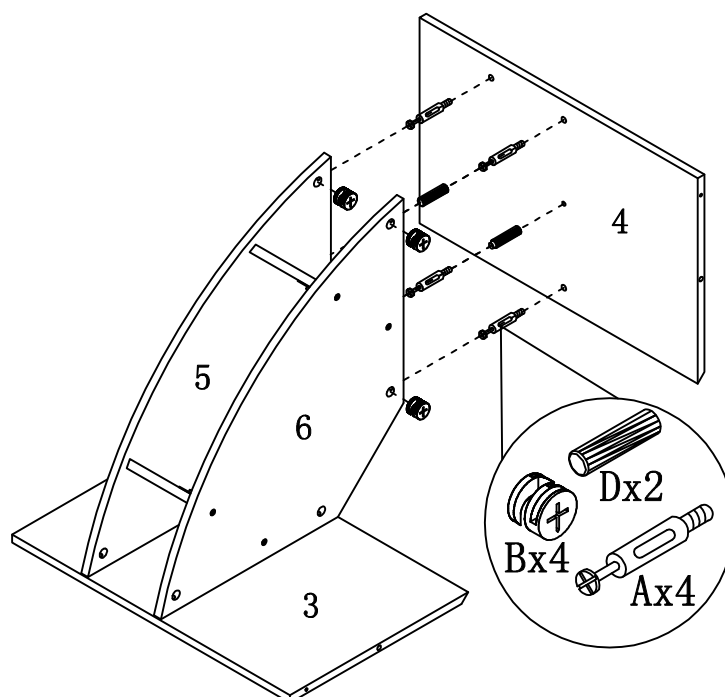


# ASSEMBLY INSTRUCTION

ITEM#:161704

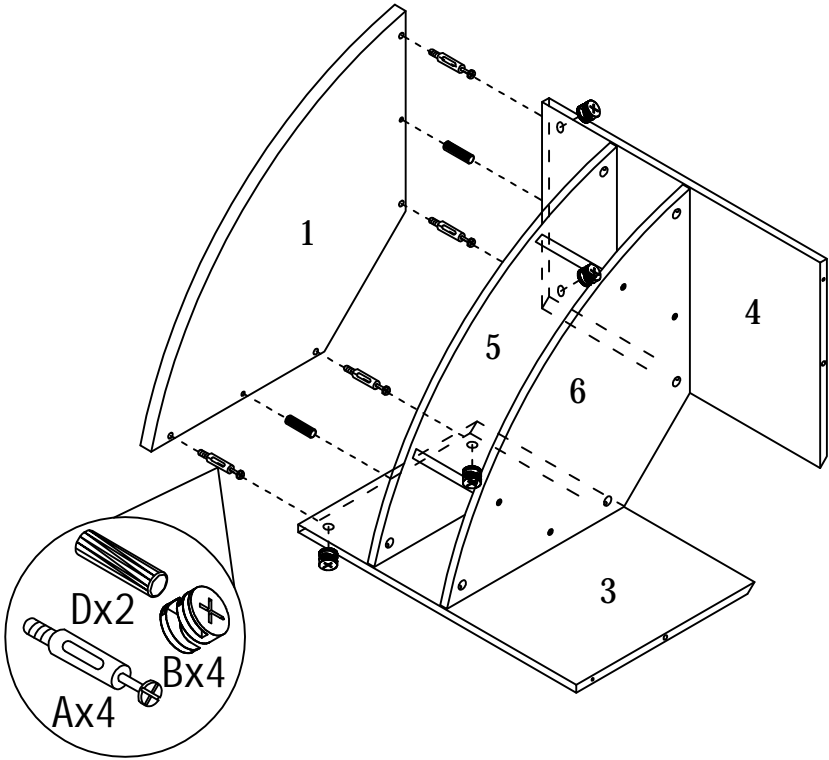


STEP7

STEP8

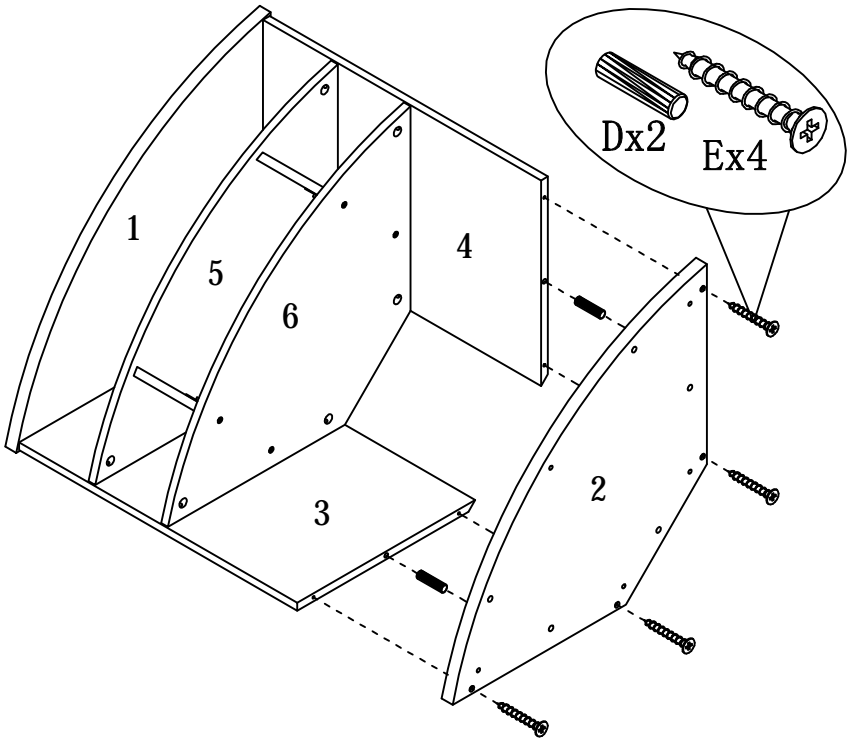


# ASSEMBLY INSTRUCTION

ITEM#:161704

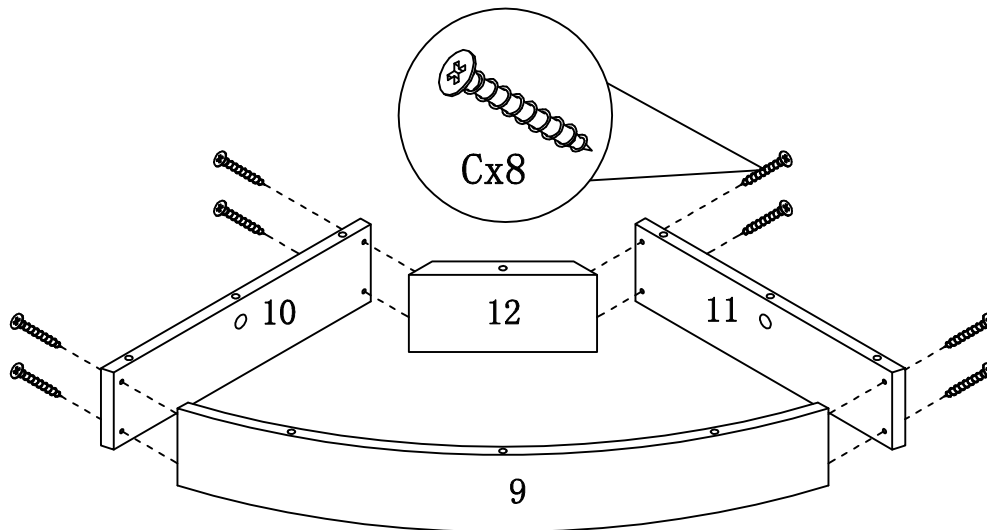


STEP9

STEP10

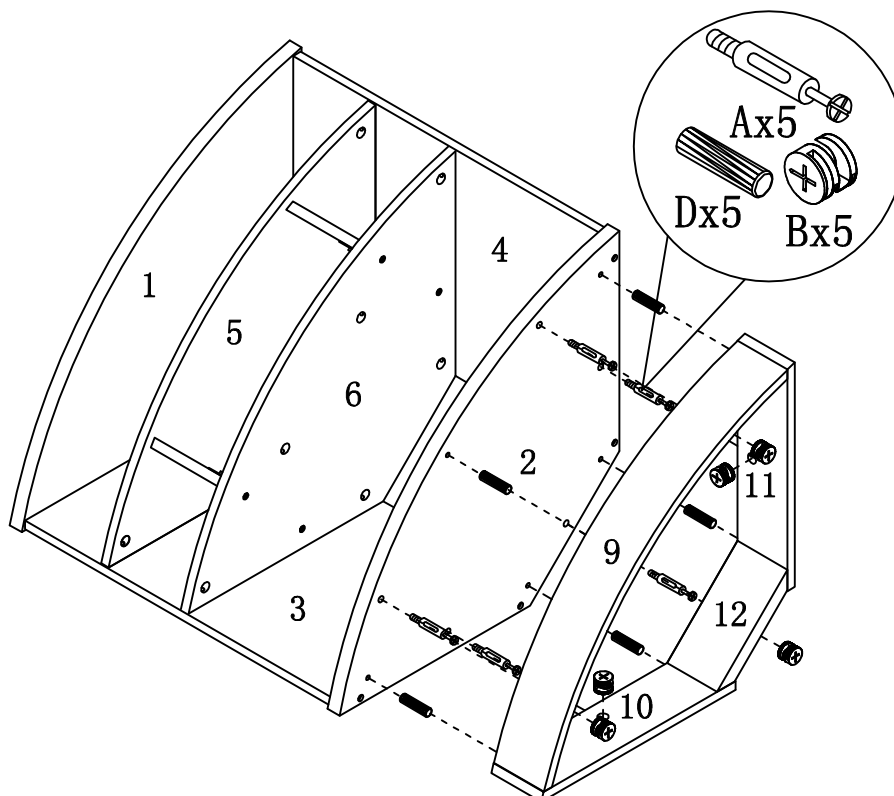


# ASSEMBLY INSTRUCTION

ITEM#:161704

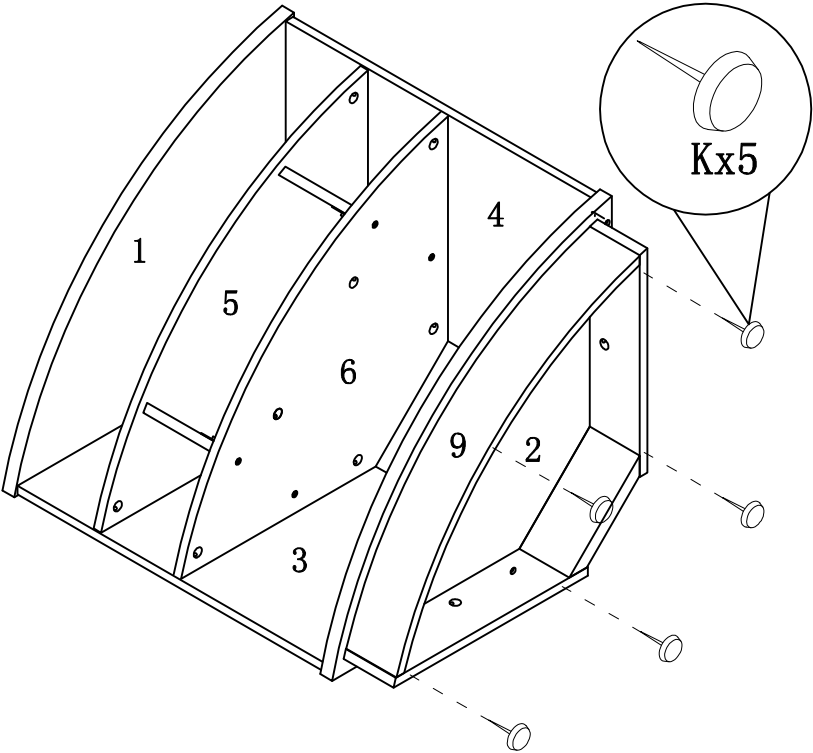


STEP11

STEP12

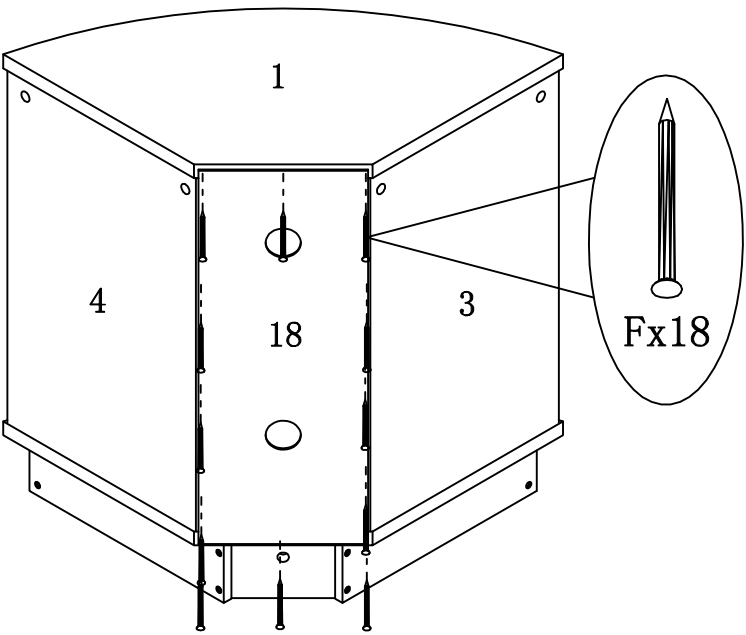


# ASSEMBLY INSTRUCTION

ITEM#: 161704

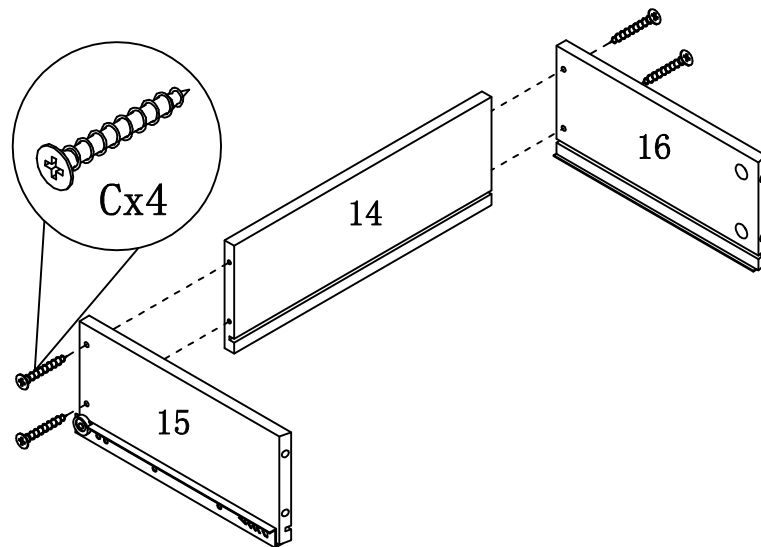


STEP13

STEP14

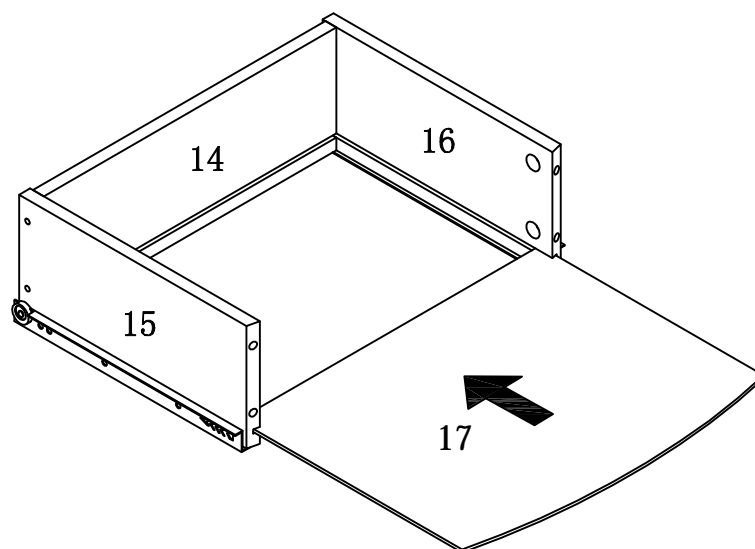



# ASSEMBLY INSTRUCTION

ITEM#: 161704

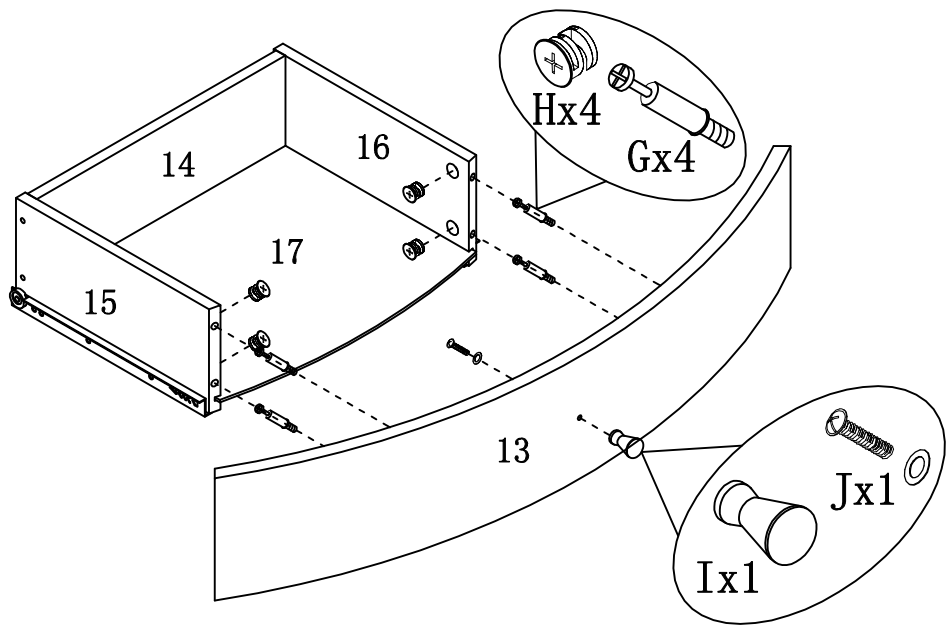

STEP15


STEP16

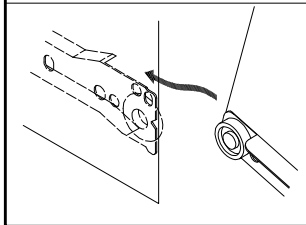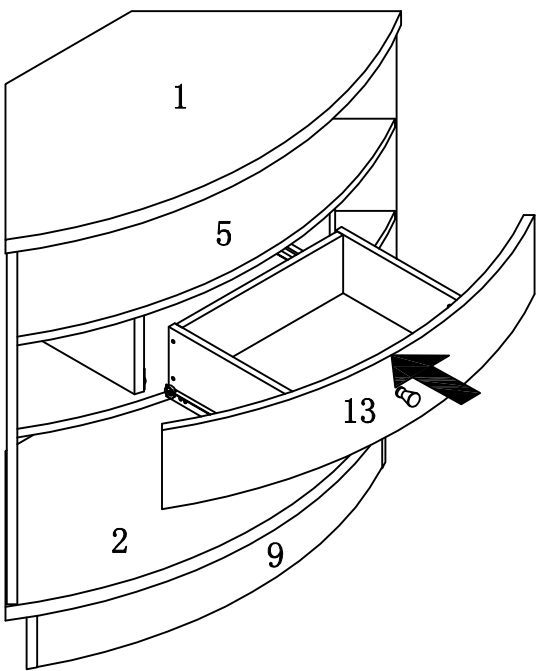


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :


## TOOLS NEEDED ( NOT INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS




DRYWALL SCREW  $\phi 5 \times 40$  X 1PC



STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

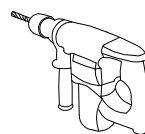


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

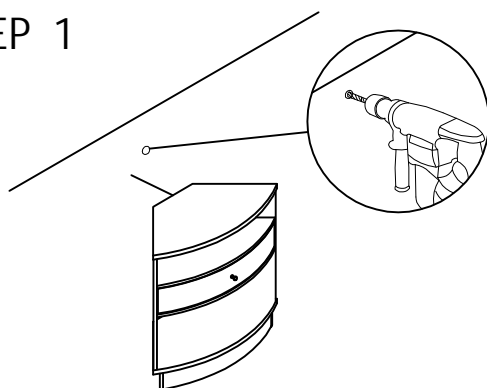


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

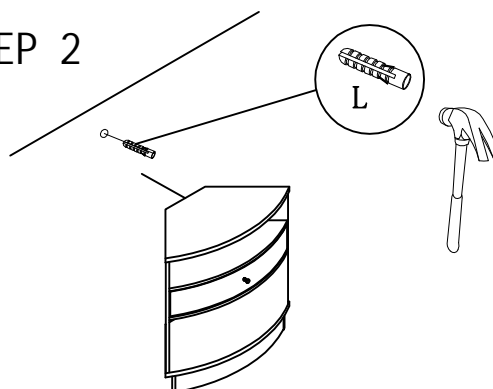


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

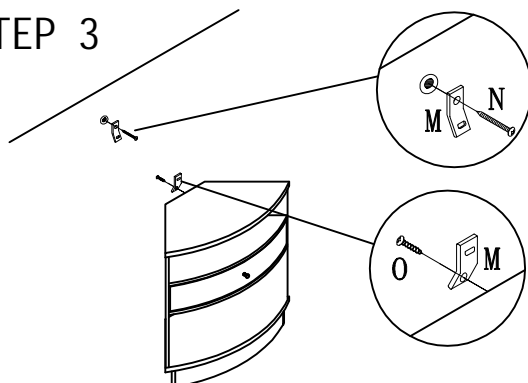

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

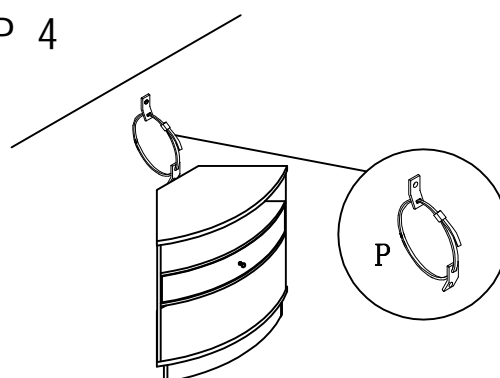

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.