


# ASSEMBLY INSTRUCTION

---

ITEM#:171971

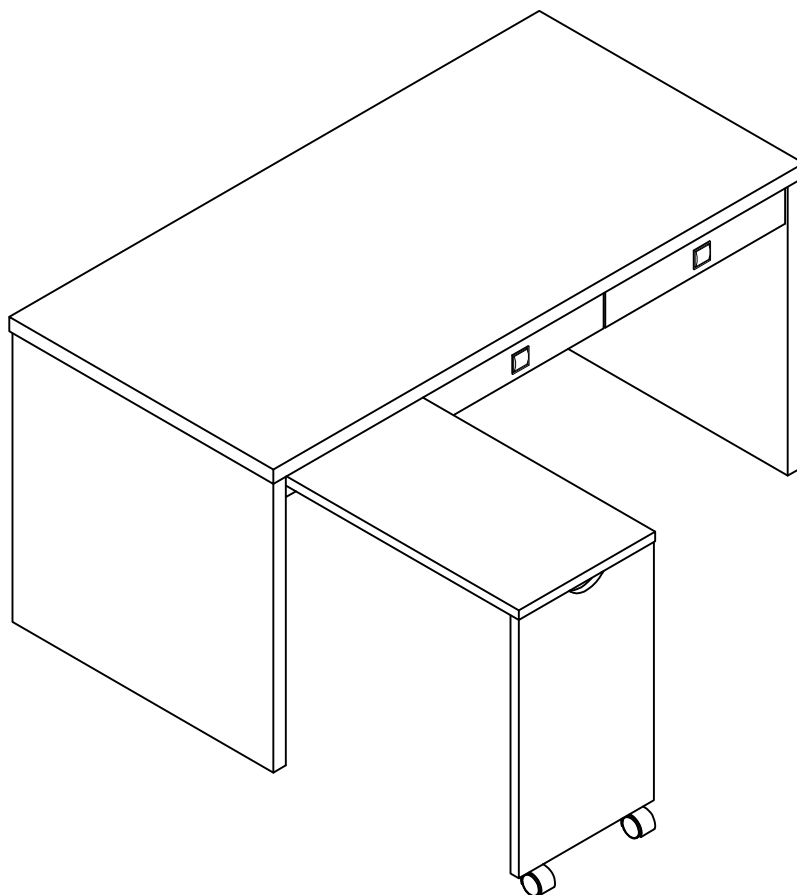

# ASSEMBLY INSTRUCTION

---


## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 171971

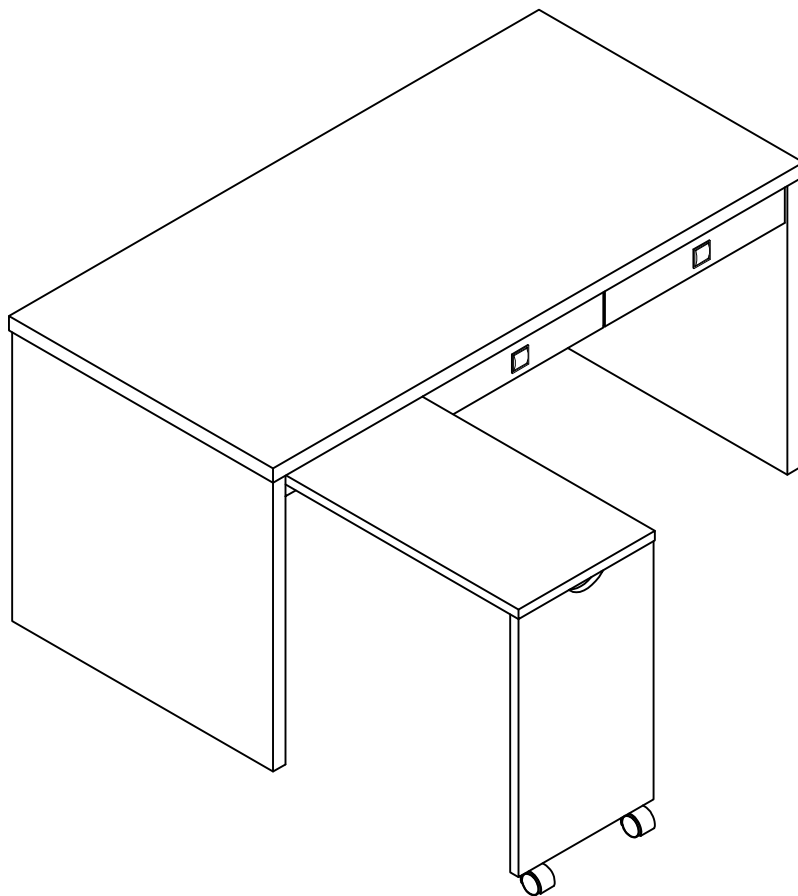

# PARTS IDENTIFICATION



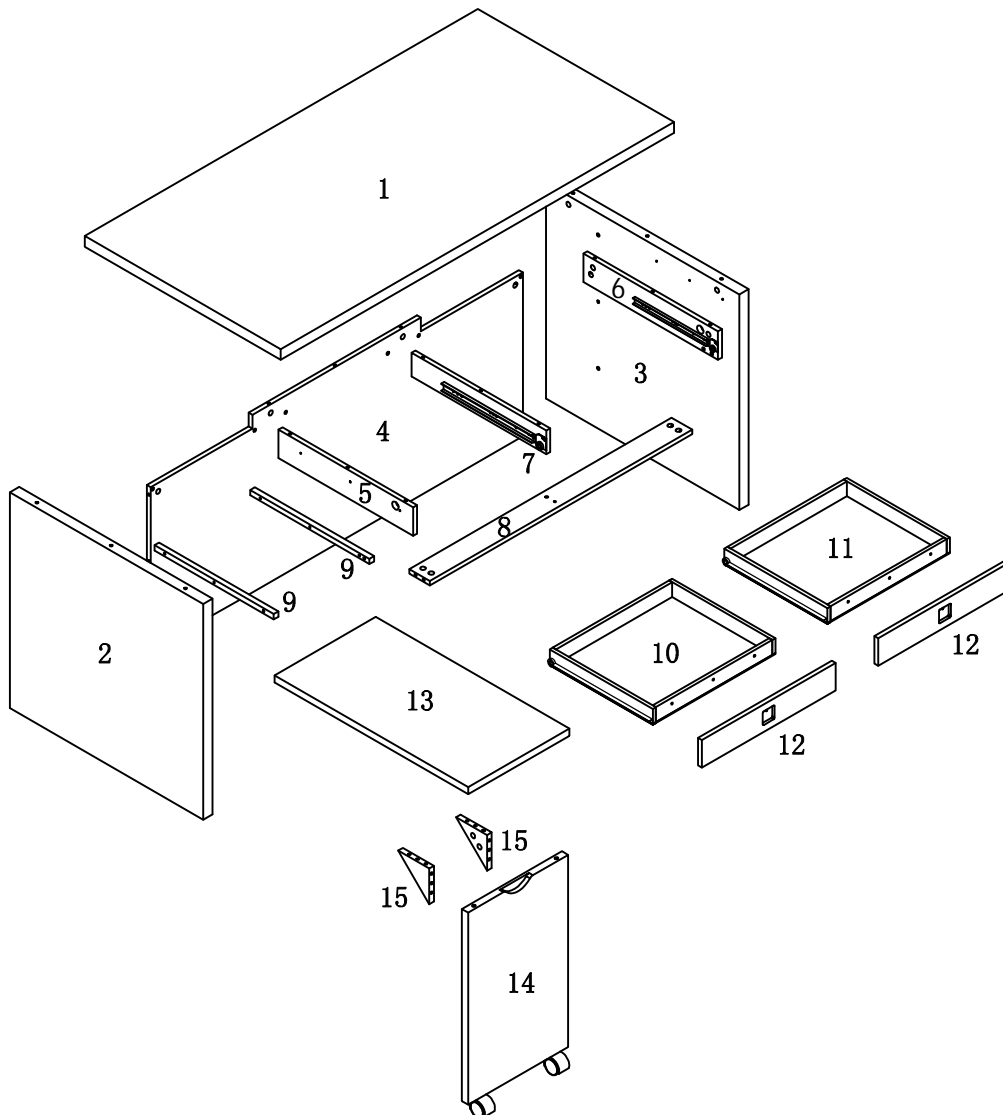















ITEM#:171971



(1)	1pc	(6)	1pc	(11)	1pc
(2)	1pc	(7)	1pc	(12)	2pcs
(3)	1pc	(8)	1pc	(13)	1pc
(4)	1pc	(9)	2pcs	(14)	1pc
(5)	1pc	(10)	1pc	(15)	2pcs

# HARDWARE IDENTIFICATION


ITEM#: 171971

A		L29	27pcs
B		Ø15	27pcs
C		Ø8x25	17pcs
D		Ø8x30	4pcs
E		Ø4x25	4pcs
F		Ø4x30	6pcs
G		Ø4x40	1pc
H		Ø20	12pcs
I		Ø45	2pcs
J		Ø8x80	2pcs
K		Ø35	2pcs
L		Ø8	2pcs
M		M13	1pc
N			2pcs
O		M4x22	2pcs
P		Ø16	4pcs
Q		H55	2pcs
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION

ITEM#:171971

## HOW TO




Cam Bolt




Cam Lock

1

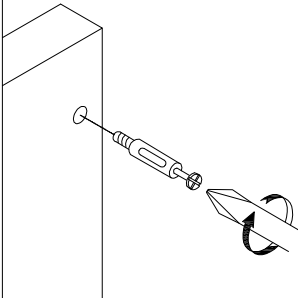


1. Screw Cam Bolt into panel.

2

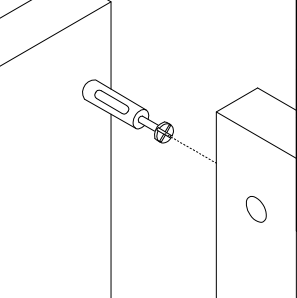


2. Insert Cam Bolt into bolt hole of joining panel.

3

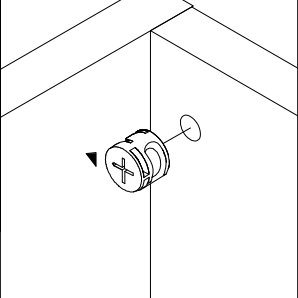


3. Insert Cam Lock. arrow facing bolt.

4

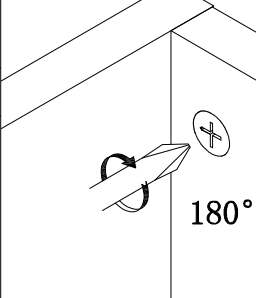


4. Gently turn Cam Lock clockwise to lock position.

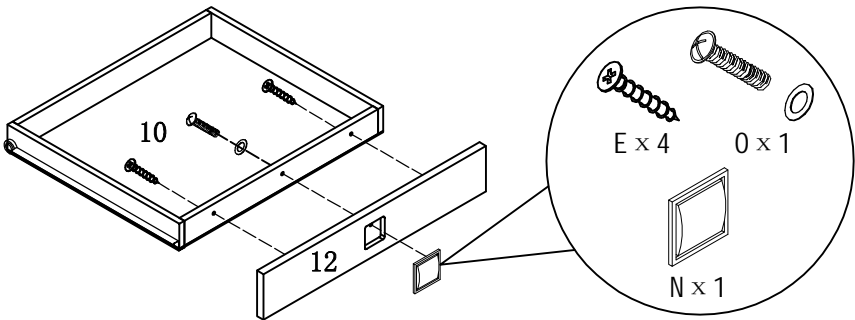

## STEP1


## STEP2

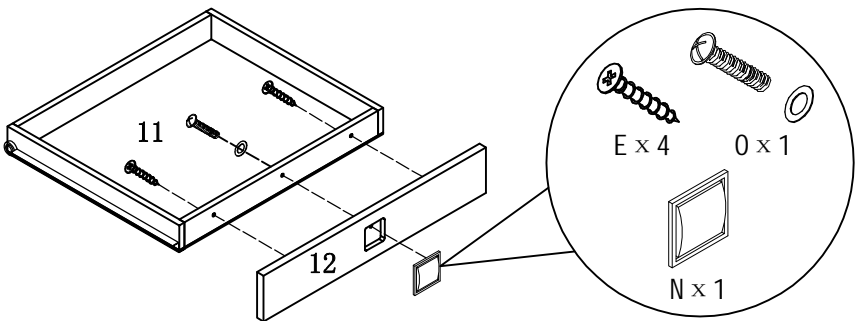

# ASSEMBLY INSTRUCTION


---

ITEM#:171971

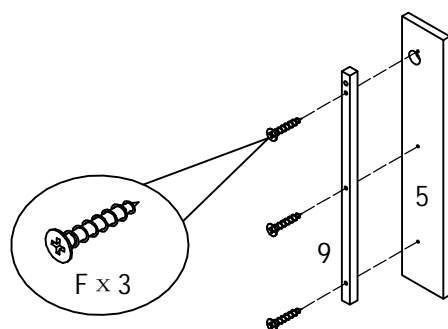


STEP3

STEP4

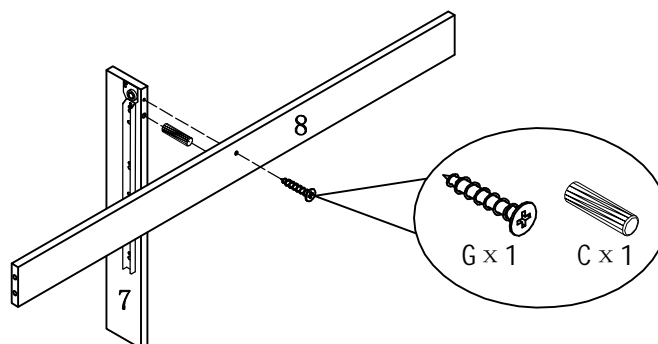


# ASSEMBLY INSTRUCTION

ITEM#:171971

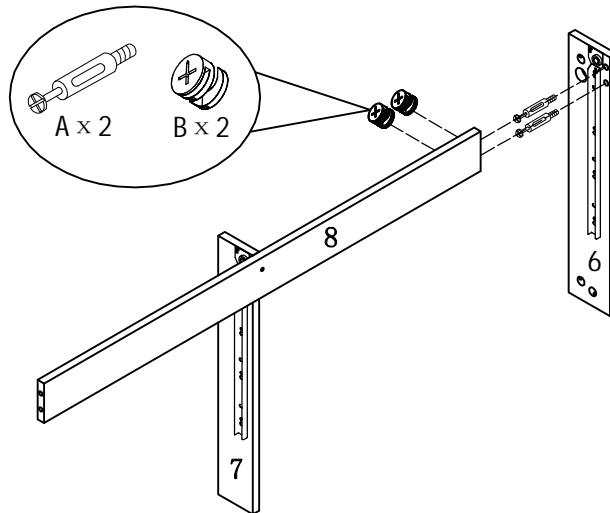


STEP5

STEP6

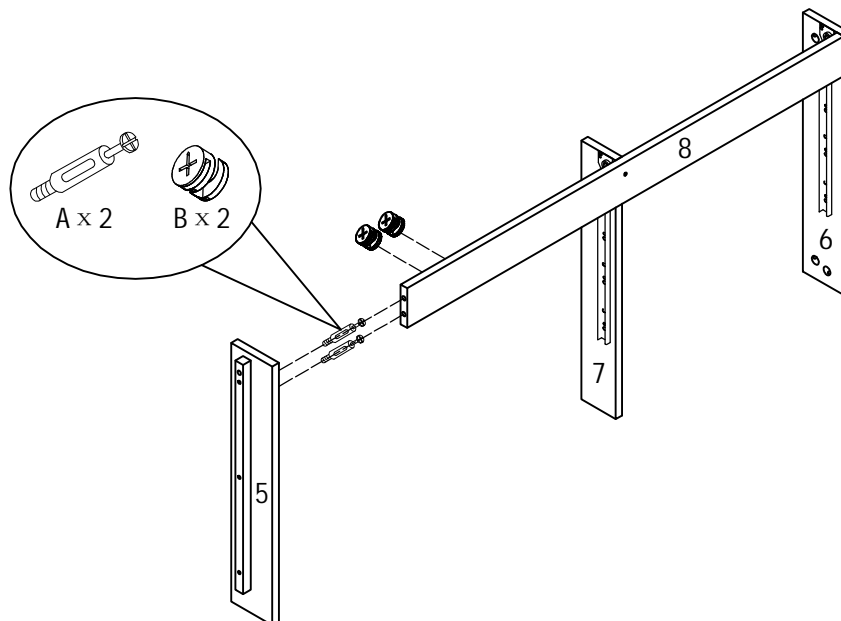


# ASSEMBLY INSTRUCTION

ITEM#:171971

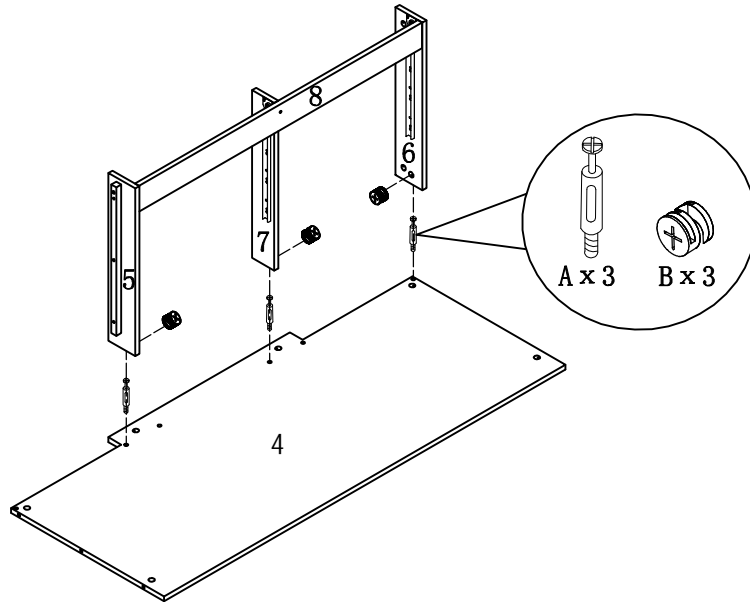

STEP7


STEP8

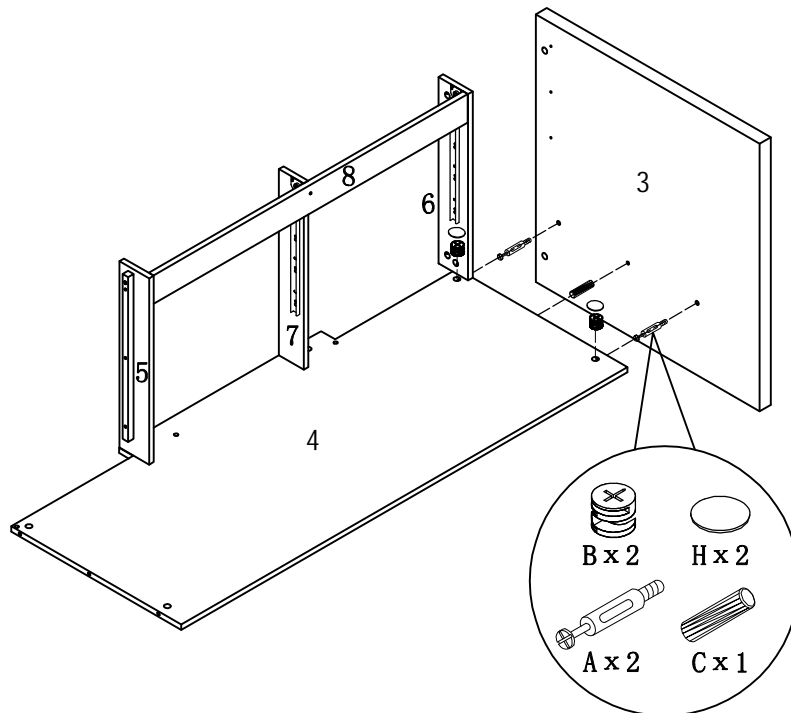




# ASSEMBLY INSTRUCTION

ITEM#:171971

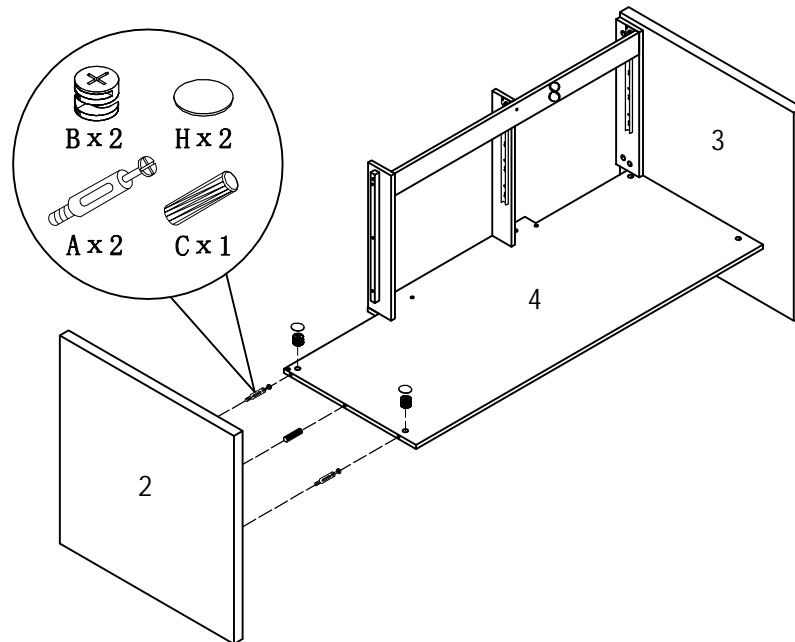


STEP9

STEP10

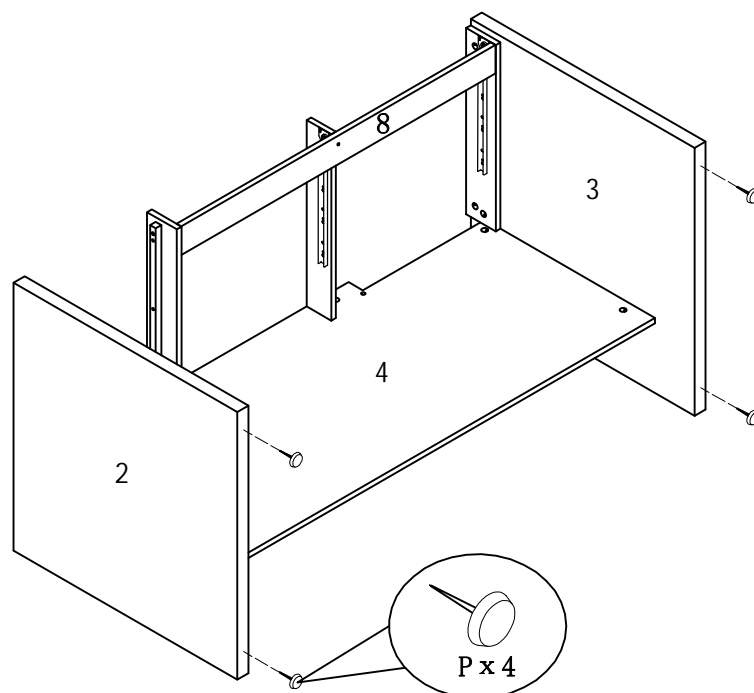


# ASSEMBLY INSTRUCTION

ITEM#:171971

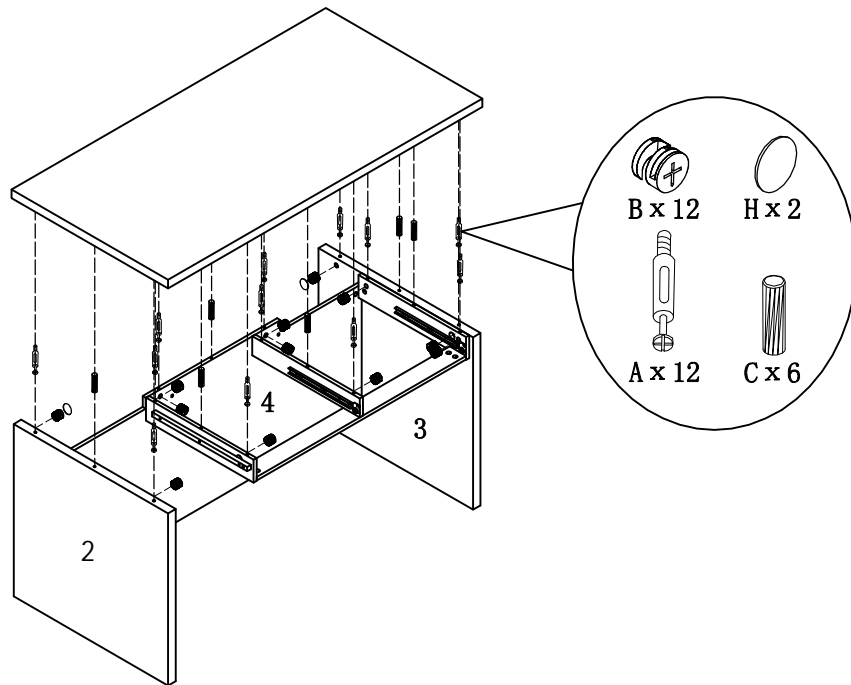


STEP11

STEP12

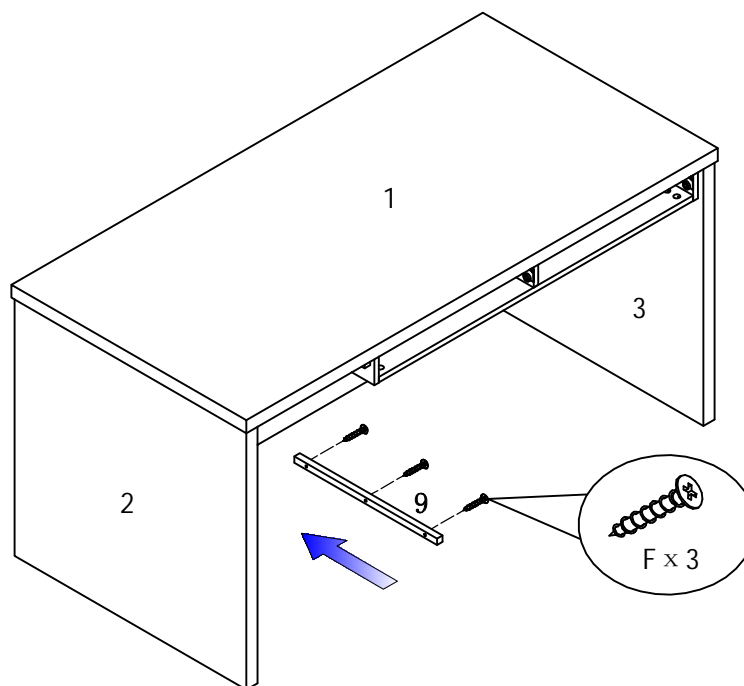


# ASSEMBLY INSTRUCTION

ITEM#:171971

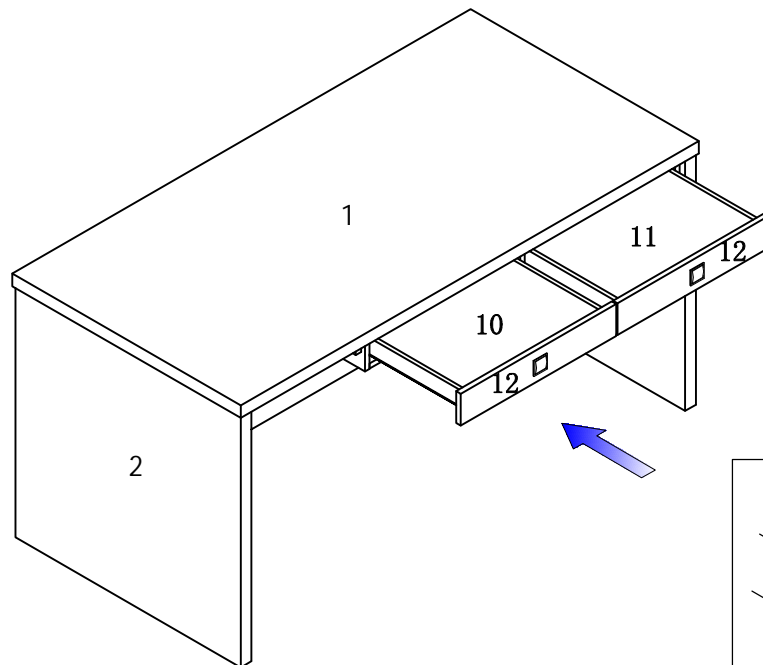


STEP13

STEP14

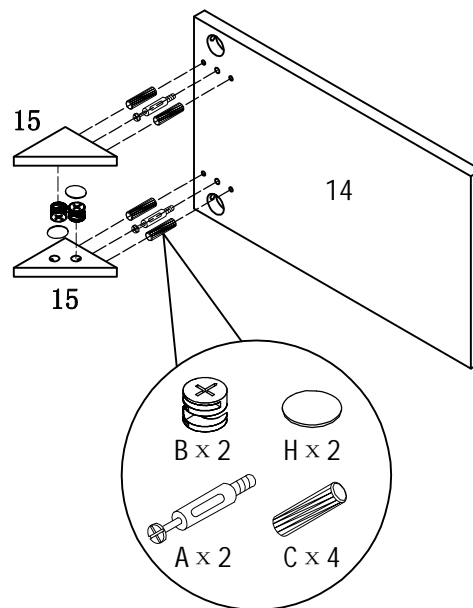


# ASSEMBLY INSTRUCTION

ITEM#:171971

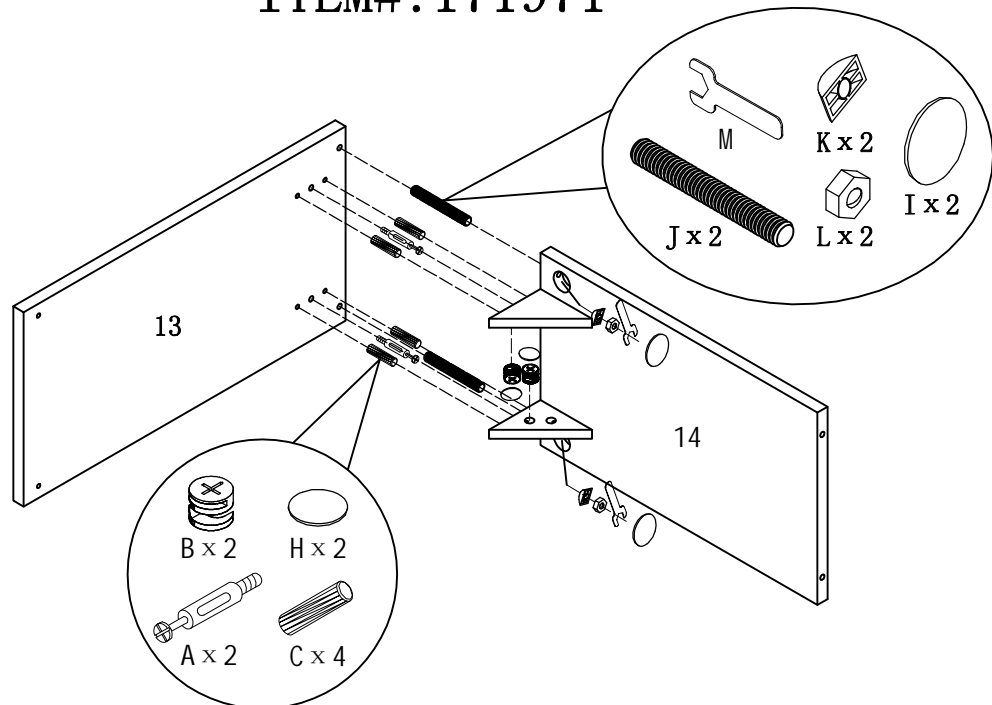


STEP15

STEP16

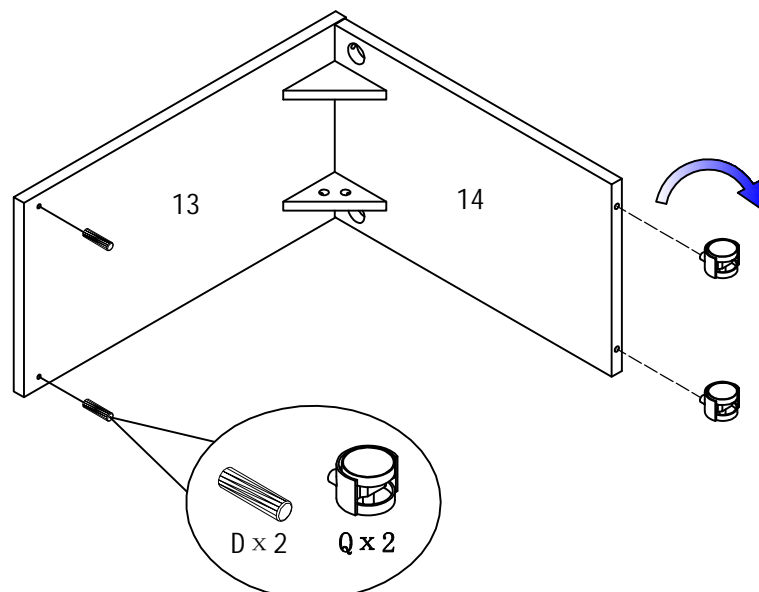

# ASSEMBLY INSTRUCTION

ITEM#: 171971

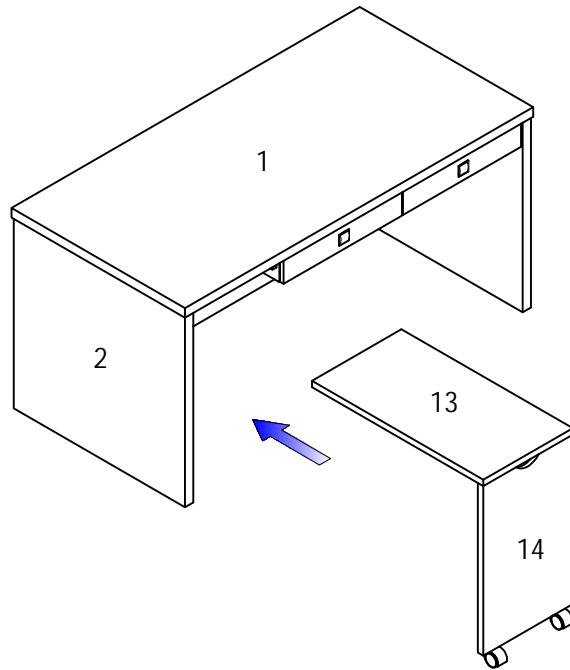

STEP17

STEP18

