


# ASSEMBLY INSTRUCTION

---

ITEM#: 182327CT

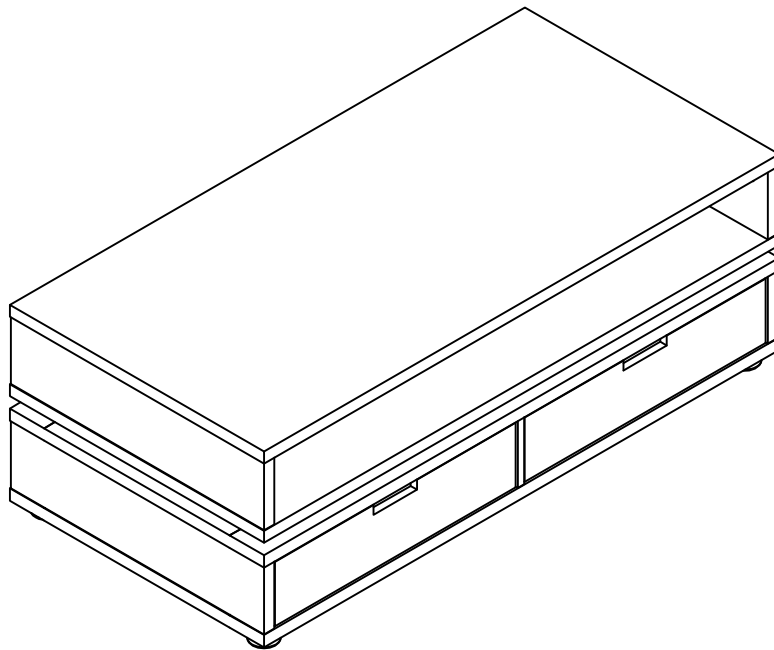

# ASSEMBLY INSTRUCTION

---


## **PLEASE READ BEFORE ASSEMBLING!**

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 182327CT

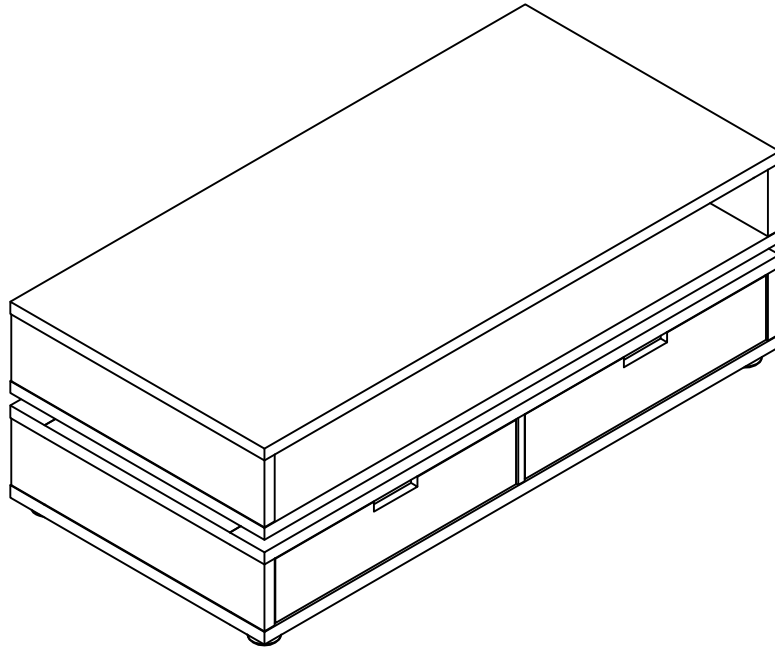

# PARTS IDENTIFICATION













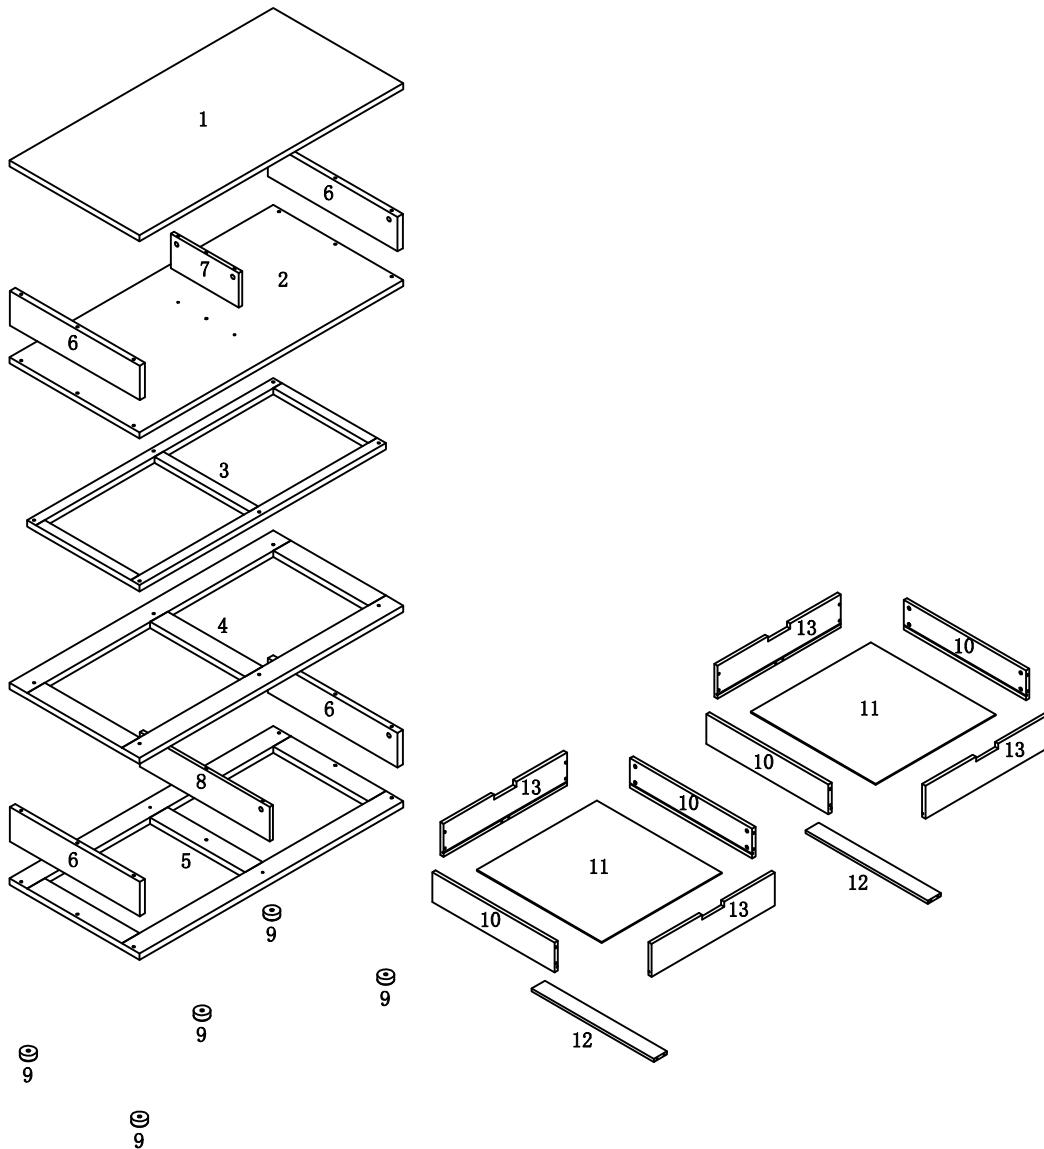
ITEM#: 182327CT



(1) 1pc	(6) 4pcs	(11) 2pcs
(2) 1pc	(7) 1pc	(12) 2pcs
(3) 1pc	(8) 1pc	(13) 4pcs
(4) 1pc	(9) 5pcs	
(5) 1pc	(10) 4pcs	







# HARDWARE IDENTIFICATION


ITEM#: 182327CT

A		L29	12pcs
B		Ø15	12pcs
C		L24	16pcs
D		Ø12	16pcs
E		Ø8x25	12pcs
F		Ø6x30	8pcs
G		Ø4x45	4pcs
H		Ø7x48	8pcs
I		Ø8xØ16x2	8pcs
J		M6x60	6pcs
K		Ø55x25	5pcs
L		Ø22	6pcs
M		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION


ITEM#: 182327CT

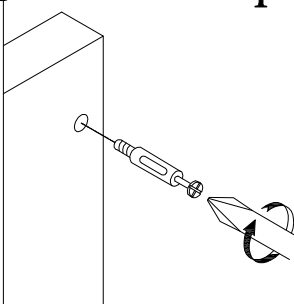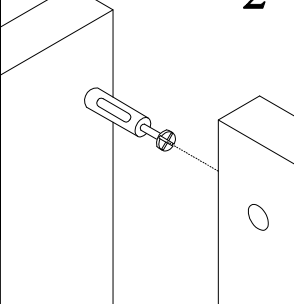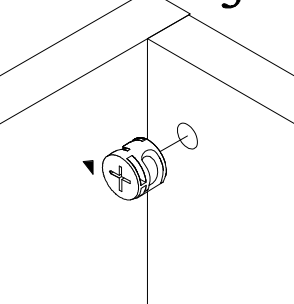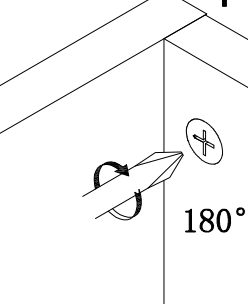HOW TO	1	2	3	4
 Cam Bolt				
 Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

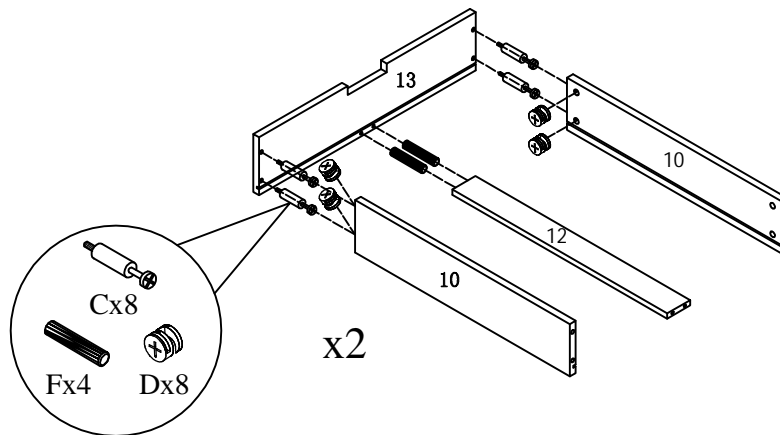


STEP 1

STEP 2

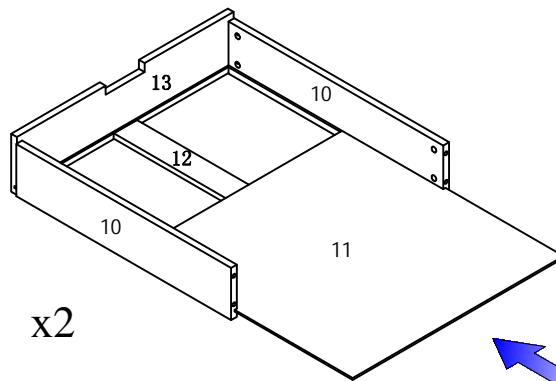


# ASSEMBLY INSTRUCTION

ITEM#: 182327CT

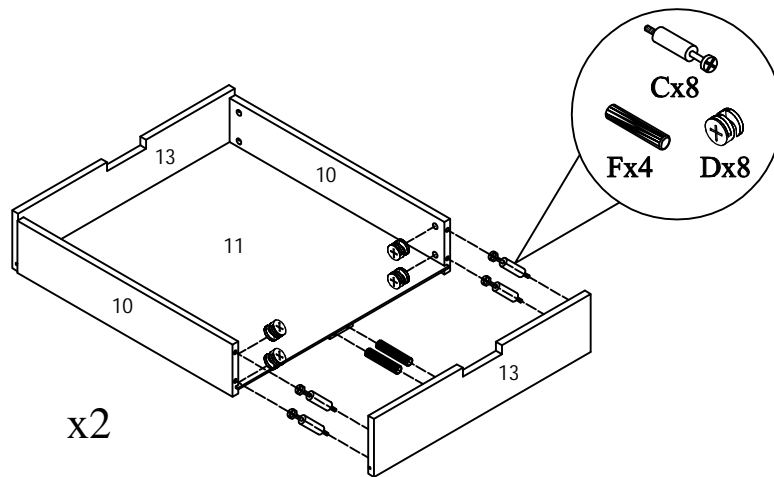

STEP3


STEP4

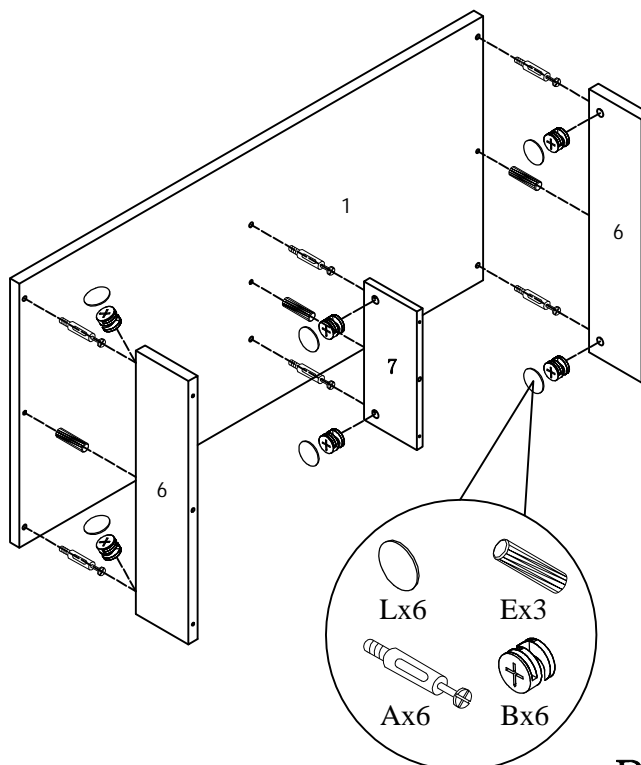

PAGE 5 OF 8


# ASSEMBLY INSTRUCTION

ITEM#: 182327CT

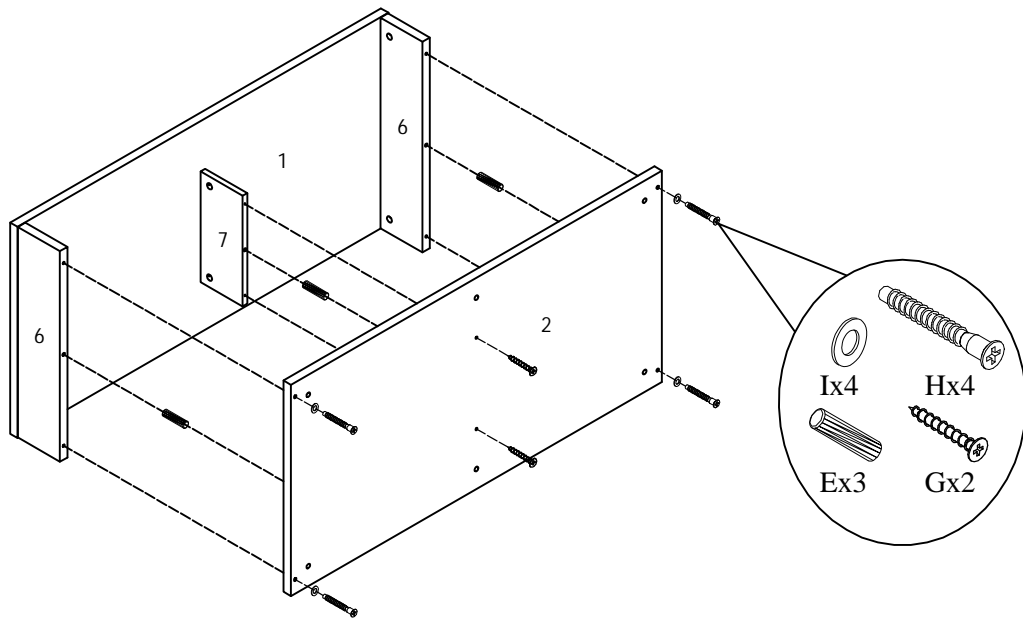

STEP5


STEP6

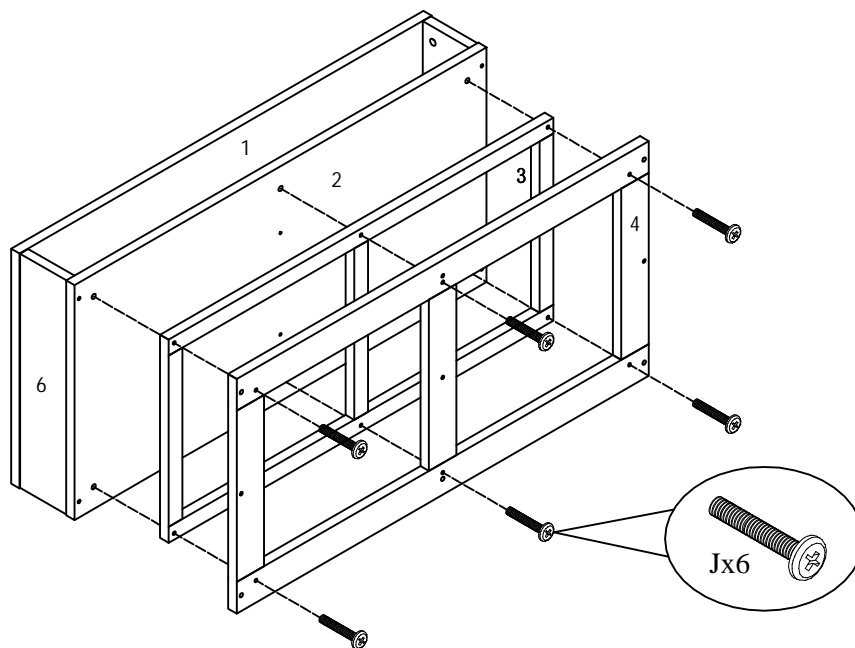

PAGE 6 OF 8


# ASSEMBLY INSTRUCTION

ITEM#: 182327CT

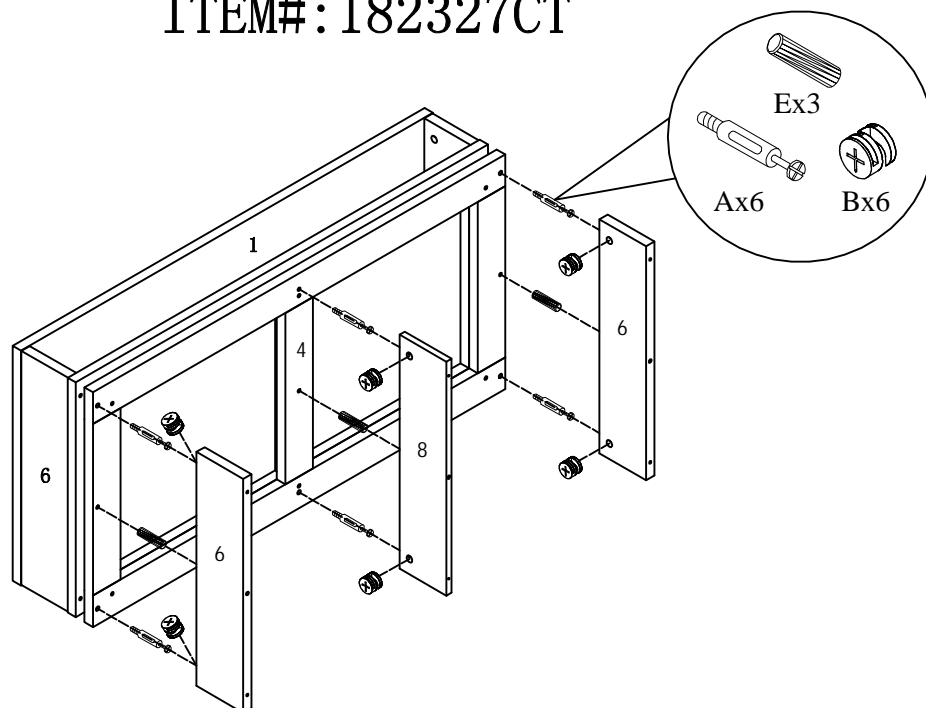

STEP7

STEP8

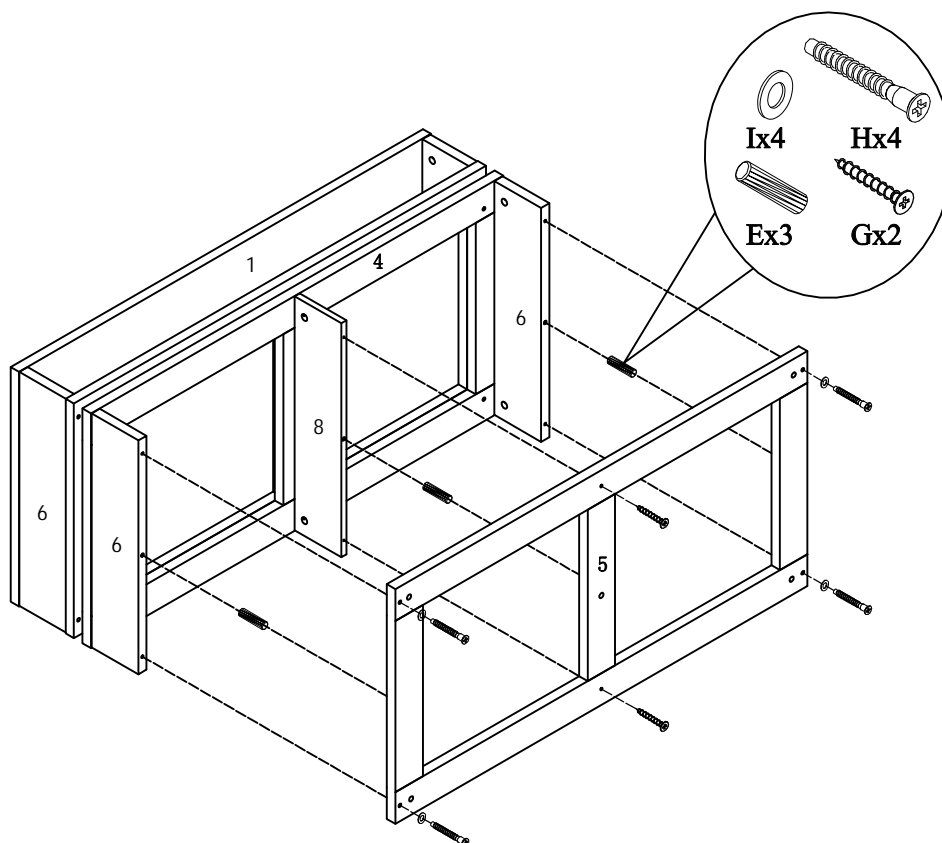


PAGE 7 OF 8




# ASSEMBLY INSTRUCTION

ITEM#: 182327CT

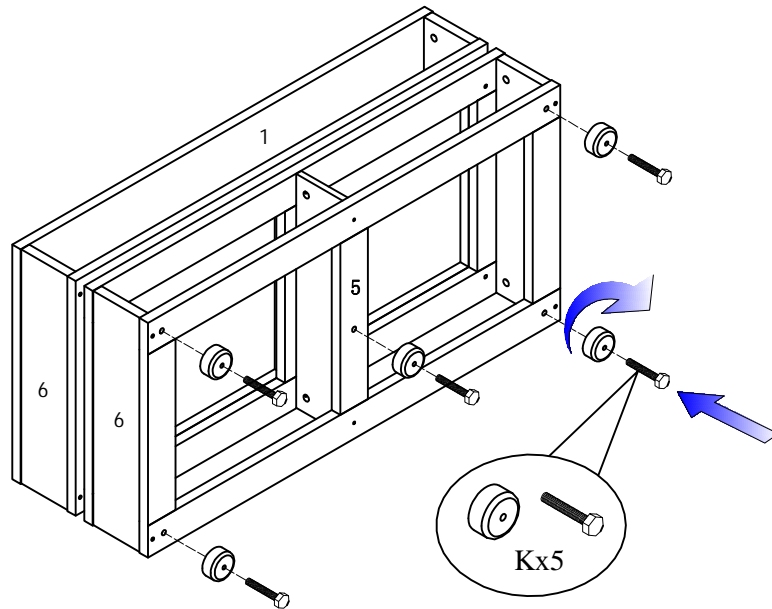

STEP9

STEP10

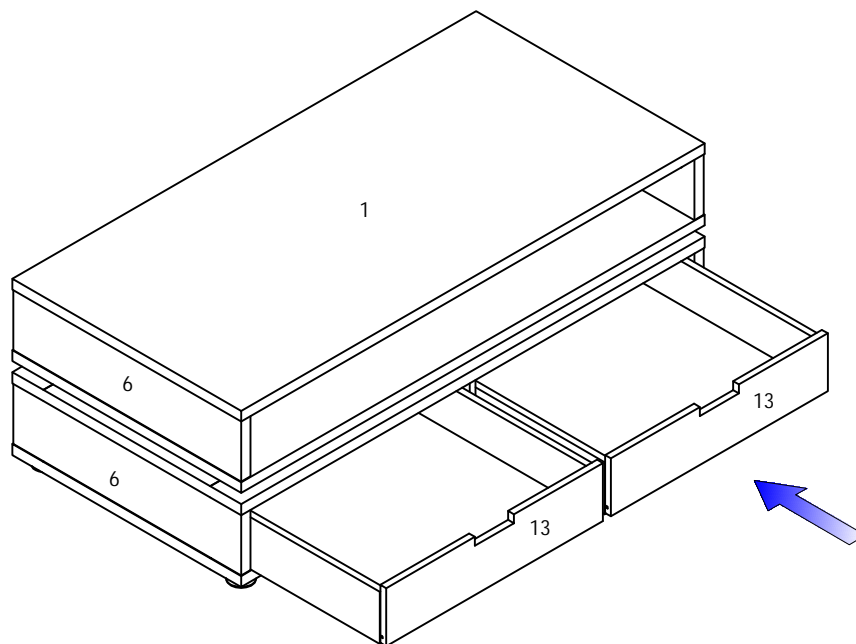

PAGE 8 OF 8