


# ASSEMBLY INSTRUCTION

---

ITEM#:192442

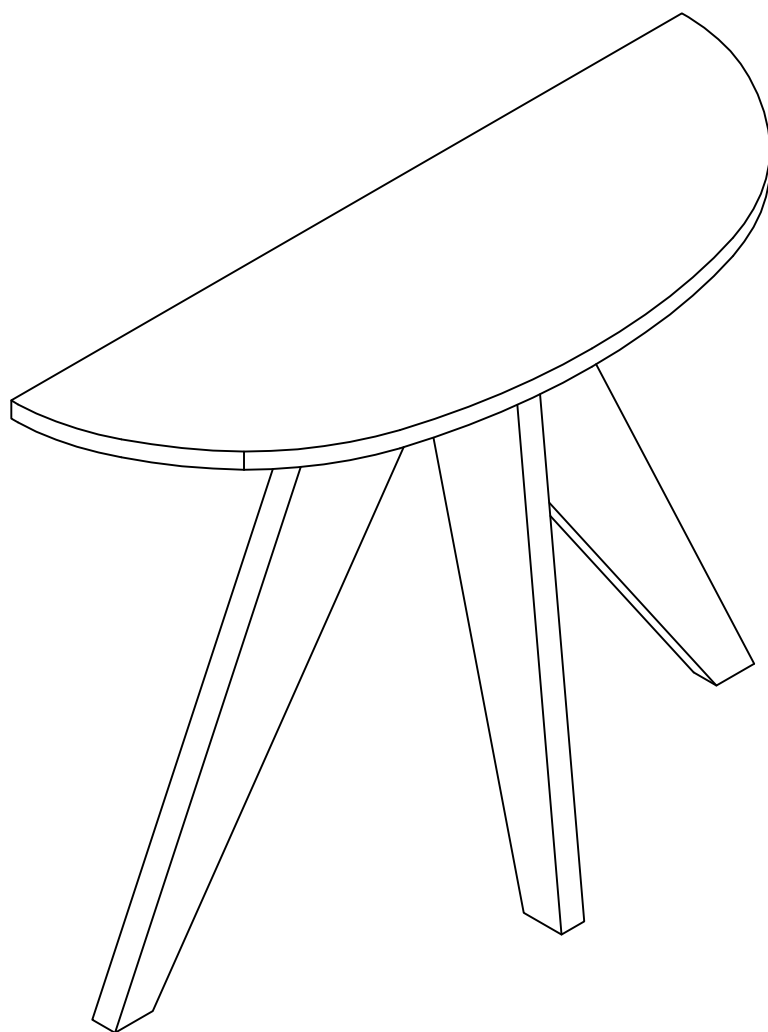

# ASSEMBLY INSTRUCTION


## **PLEASE READ BEFORE ASSEMBLING!**

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 192442

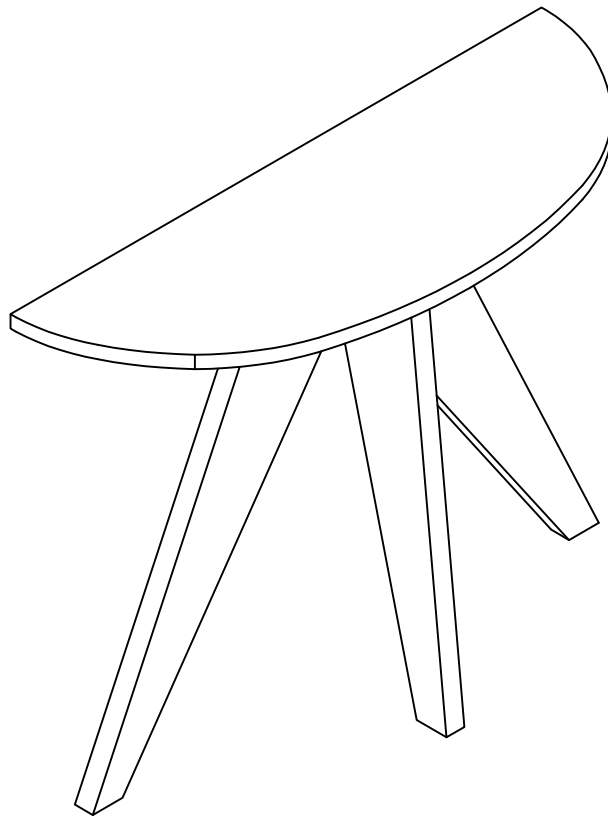

# PARTS IDENTIFICATION

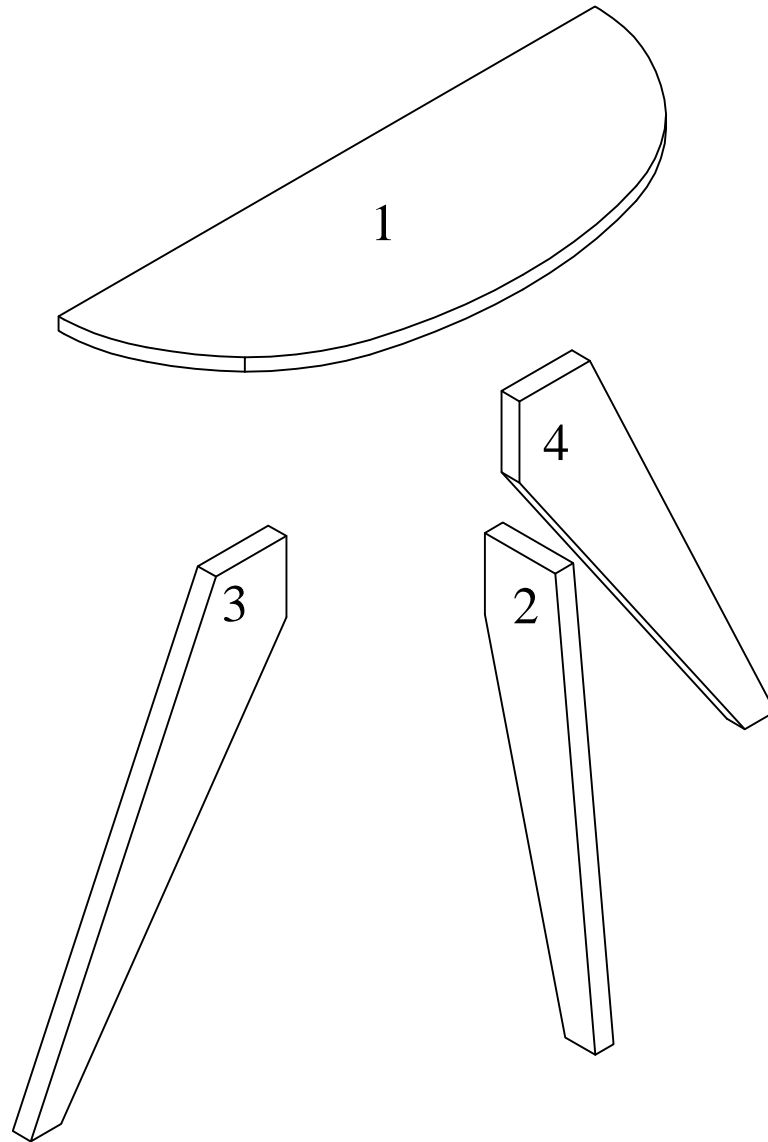


















ITEM#: 192442



(1) 1pc  
(2) 1pc  
(3) 1pc  
(4) 1pc







# HARDWARE IDENTIFICATION

ITEM#: 192442


A		L29	4MCX/PCS
B		Ø15	8MCX/PCS
C		Ø8×25mm	6MCX/PCS
D		Ø8×40mm	1MC/PC
E		L60	2MCX/PCS
F		M8×70mm	3MCX/PCS
G			3MCX/PCS
H		M8	3MCX/PCS
I		M13	1MC/PC
J		Ø16mm	3MCX/PCS
K		197×5×1mm	1MC/PC
L		12×12×1mm	2MC/PC
M		Ø4×25mm	1MC/PC
N		Ø5×40mm	1MC/PC
O		Ø8×40mm	1MC/PC
P		ø45mm	3MCX/PCS
Q		ø20mm	8MCX/PCS
R		COLLE/GLUE	1MC/PC
S		Ø6×30mm	2MCX/PCS

# ASSEMBLY INSTRUCTION


ITEM#: 192442

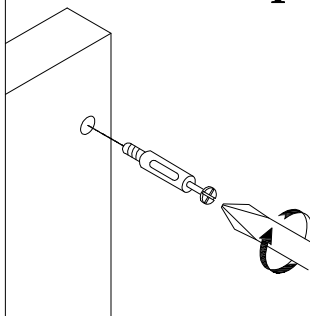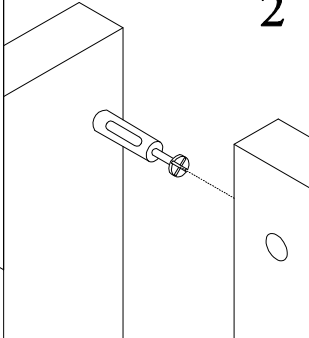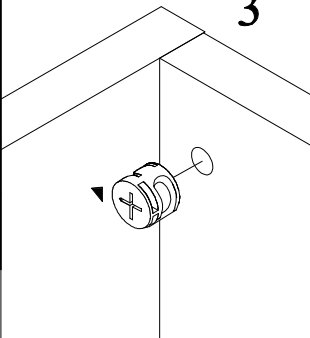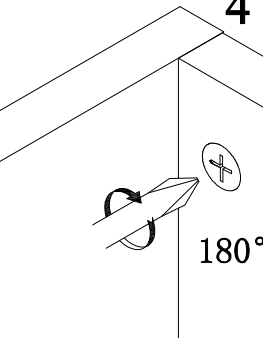HOW TO		1	2	3	4
 Cam Bolt					
 Cam Lock		1.Screw Cam Bolt into panel.	2.Insert Cam Bolt into bolt hole of joining panel.	3.Insert Cam Lock. arrow facing bolt.	4.Gently turn Cam Lock clockwise to lock position.

## STEP1

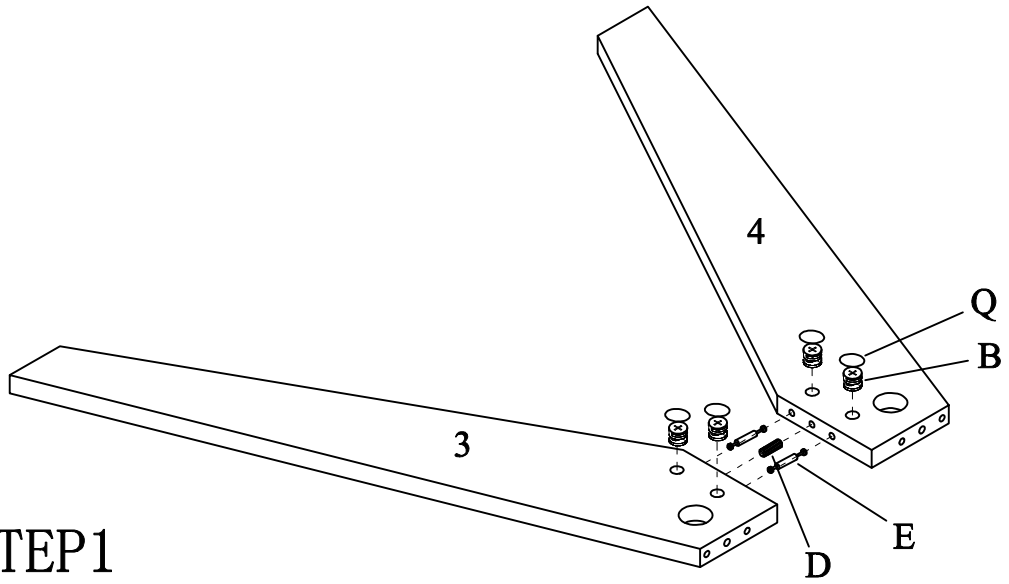


## STEP2

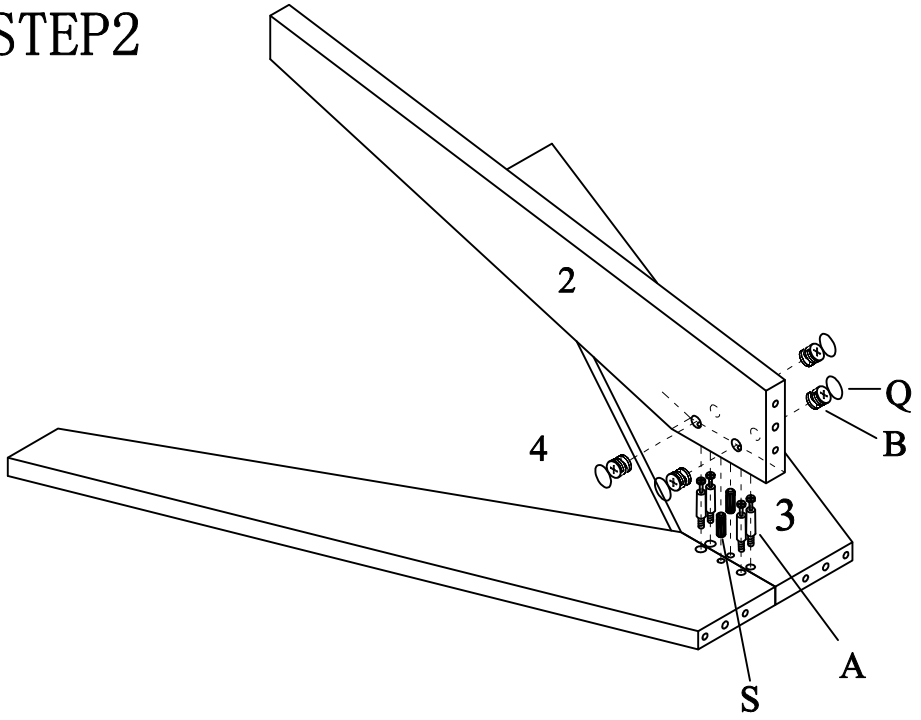


# ASSEMBLY INSTRUCTION

ITEM#:192442

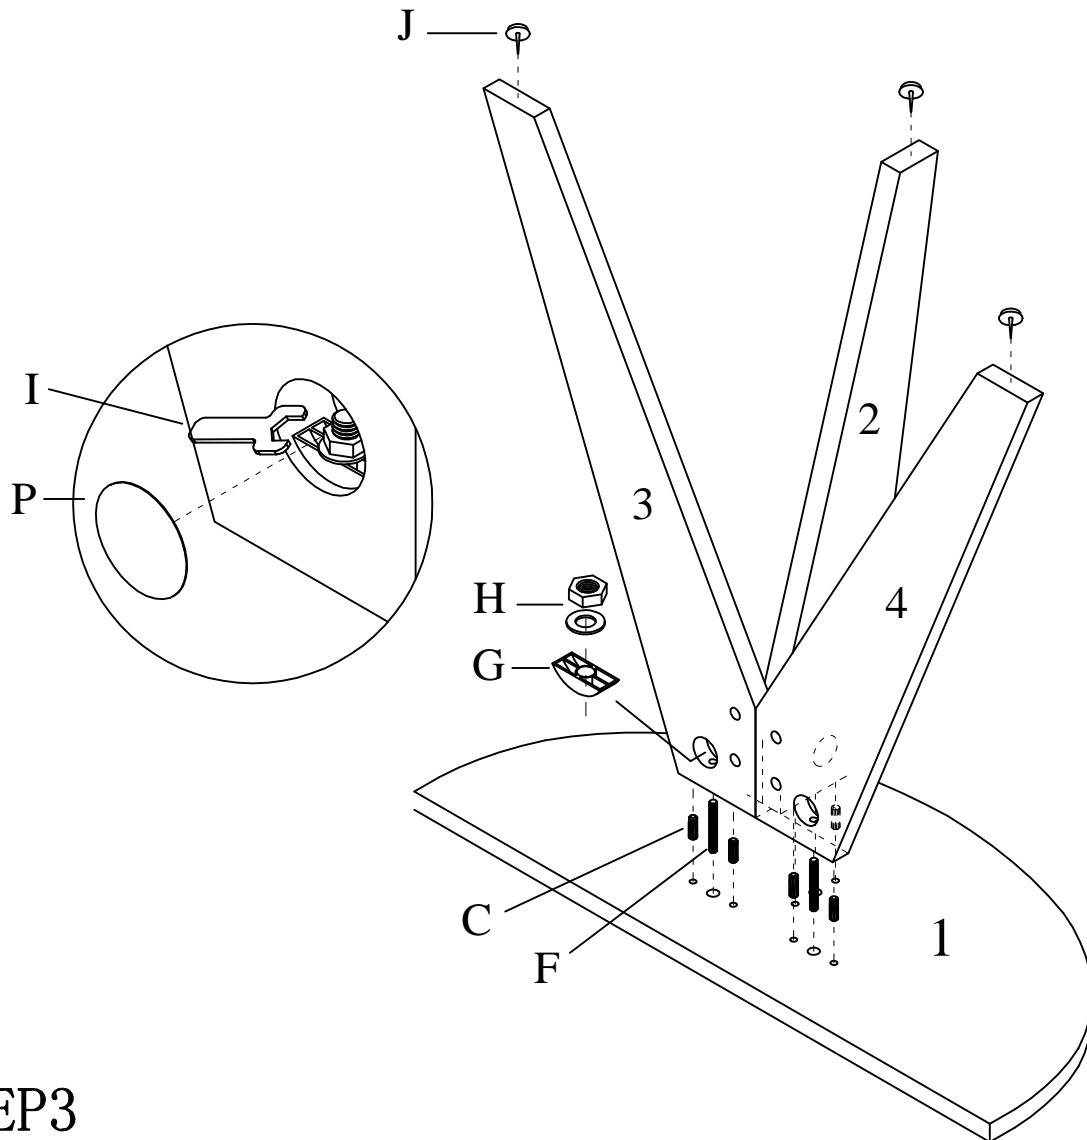


STEP3

STEP4

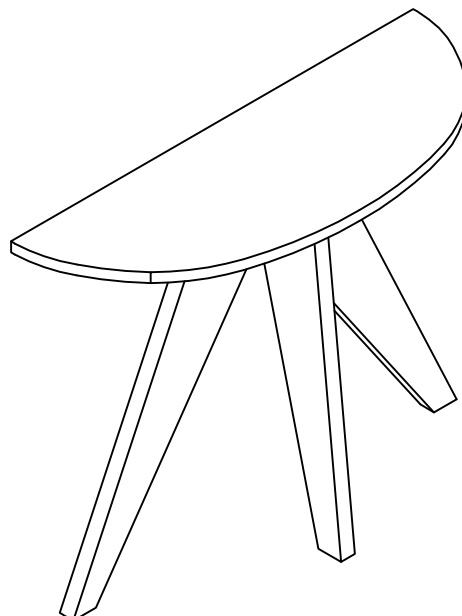


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


**Note:** Hardware included only compatible with standard drywalls.

### STEP 1

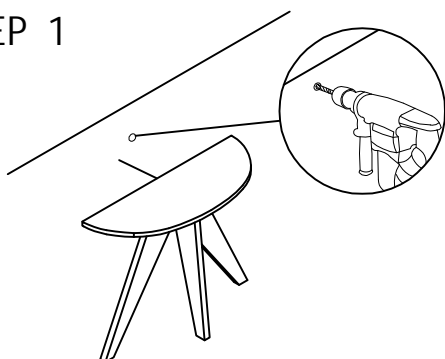


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

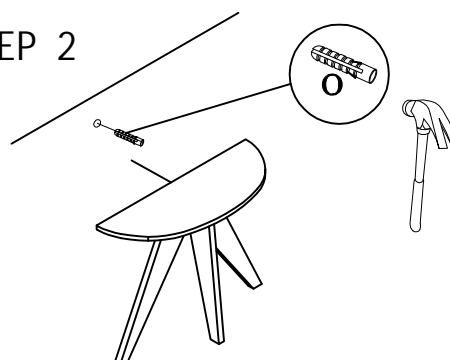


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

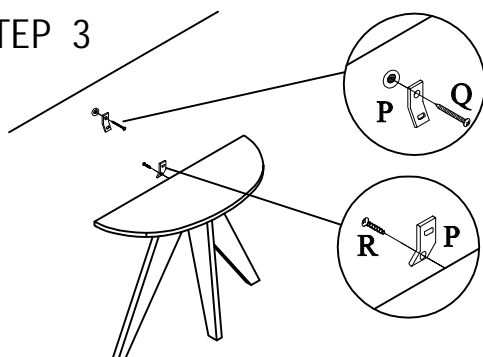

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

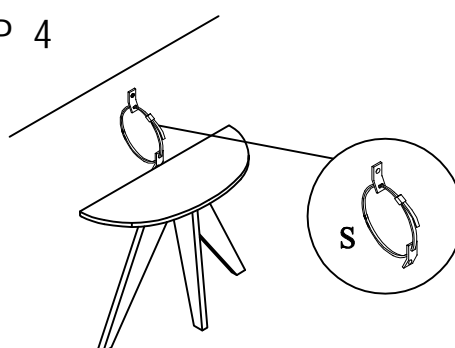

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
2. Pull lightly til strap stops. Assembly is complete.