


# ASSEMBLY INSTRUCTION

---

ITEM#: 192624

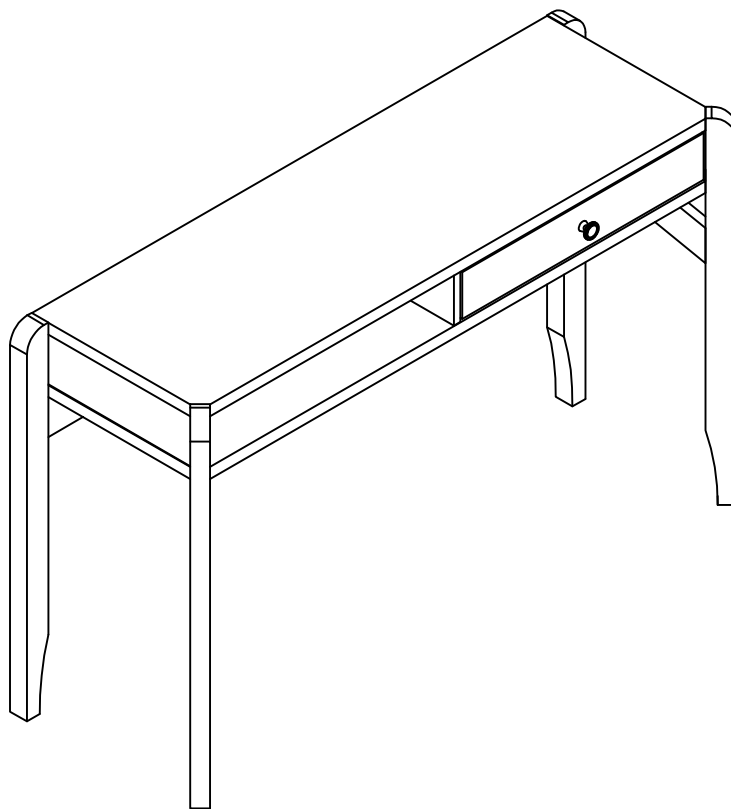

# ASSEMBLY INSTRUCTION

---


## PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM#: 192624

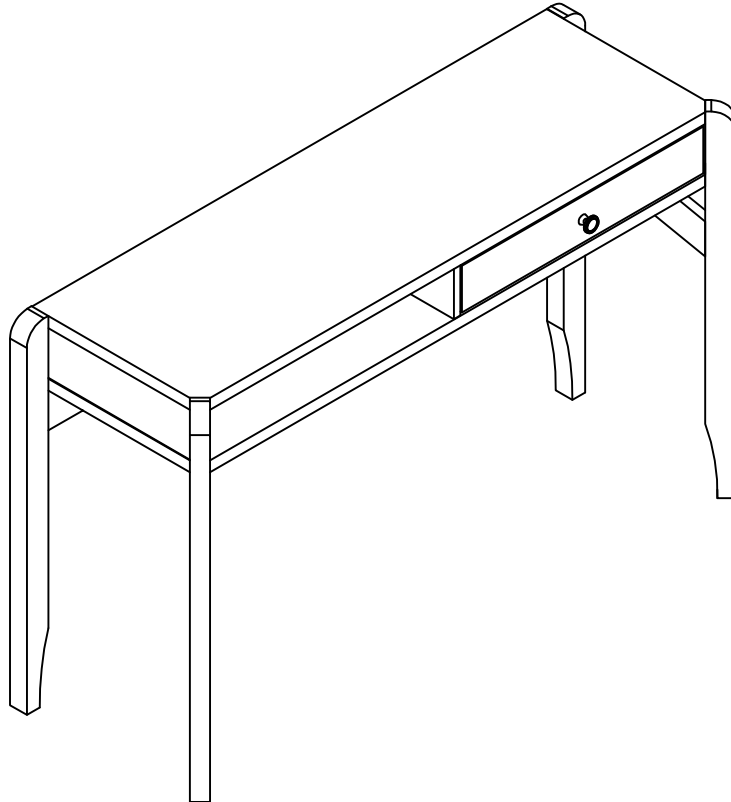

# PARTS IDENTIFICATION





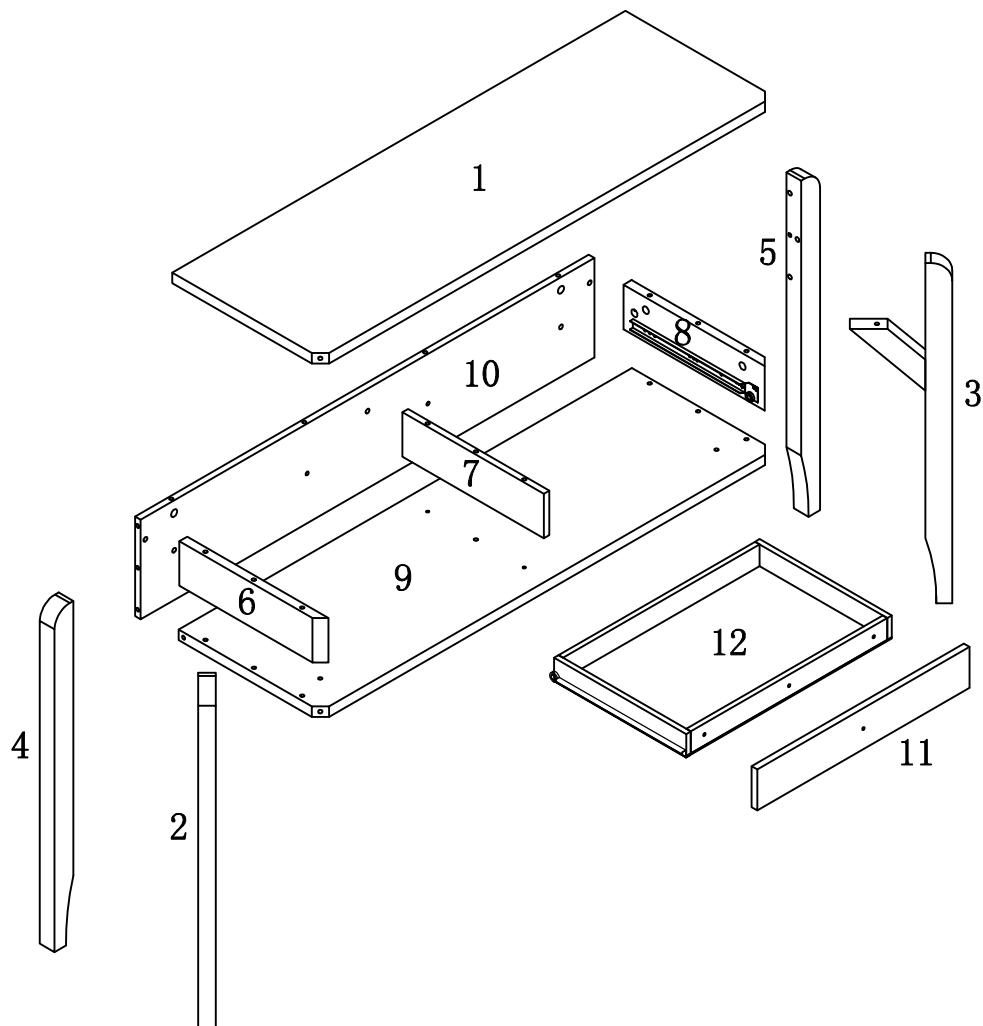
















ITEM#:192624



(1)	1pc	(5)	1pc	(9)	1pc
(2)	1pc	(6)	1pc	(10)	1pc
(3)	1pc	(7)	1pc	(11)	1pc
(4)	1pc	(8)	1pc	(12)	1pc

# HARDWARE IDENTIFICATION


ITEM#: 192624

A		L29	23pcs
B		ø15	23pcs
C		ø8x25	12pcs
D		ø4x25	2pcs
E		ø4x45	2pcs
F			1pc
G		M4x35	1pc
H		ø22	19pcs
I		ø16	4pcs
J		ø7x48	4pcs
K		ø16xø8x2	4pcs
L		ø16xø6x2	2pcs
M		M6 x 15	2pcs
N		M6 x 65	2pcs
O		M4	1pc
P		197x5x1	1pc
Q		ø4x25	1pc
R		ø5x40	1pc
S		ø8 x 40	1pc
T		12x12x1	2pcs
U		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION

ITEM#: 192624

## HOW TO




Cam Bolt




Cam Lock

1

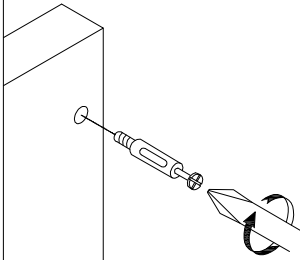


1. Screw Cam Bolt into panel.

2

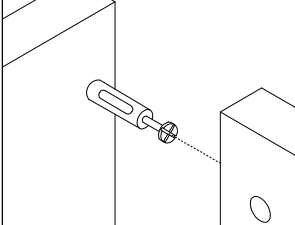


2. Insert Cam Bolt into bolt hole of joining panel.

3

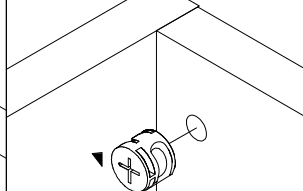


3. Insert Cam Lock. arrow facing bolt.

4

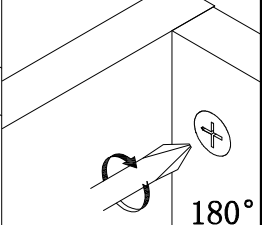


4. Gently turn Cam Lock clockwise to lock position.

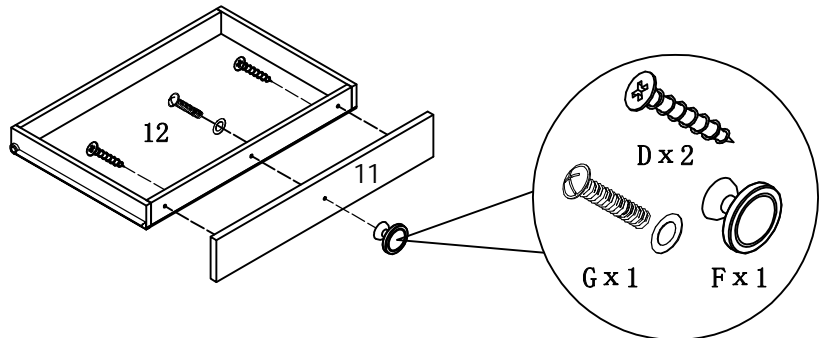


## STEP 1

## STEP 2

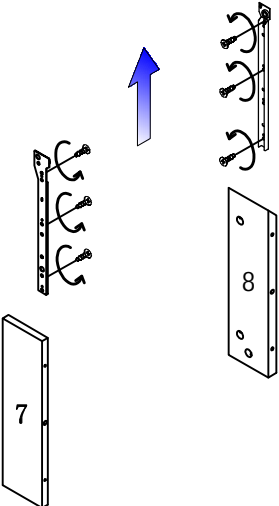


# ASSEMBLY INSTRUCTION

ITEM#: 192624

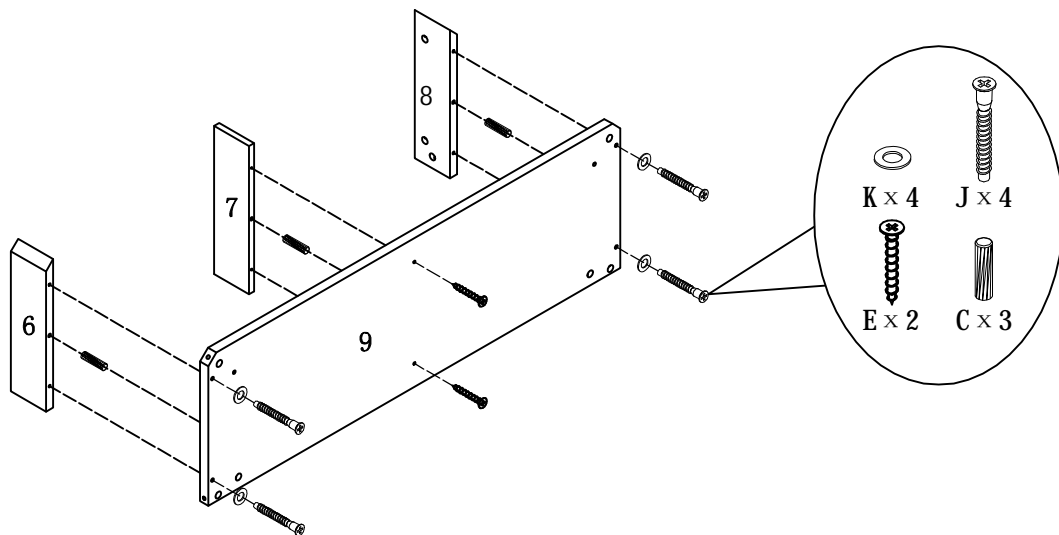


STEP 3

STEP 4

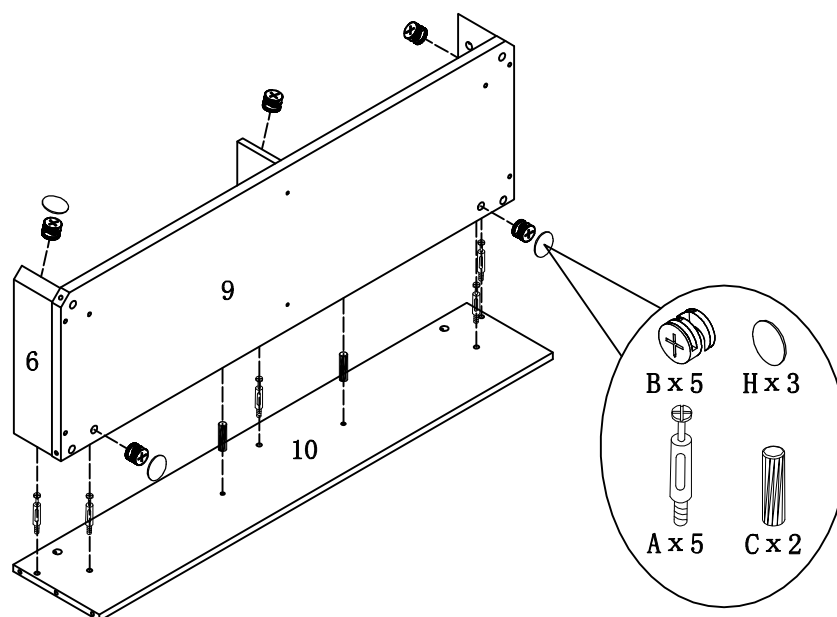


# ASSEMBLY INSTRUCTION

ITEM#: 192624

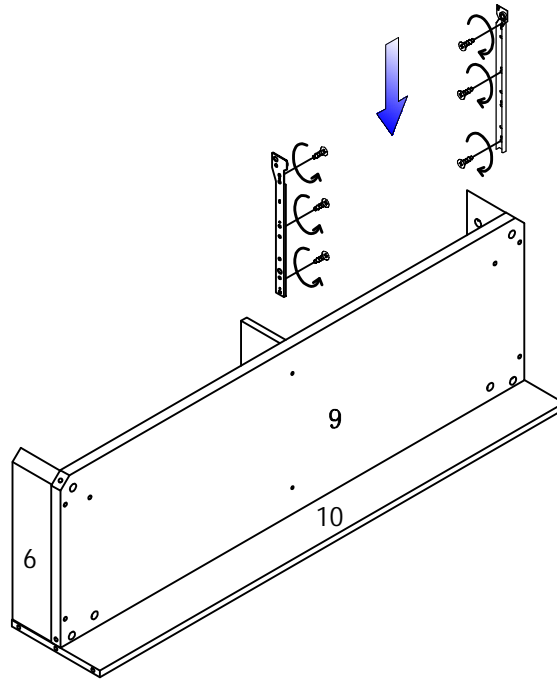

STEP 5


STEP 6

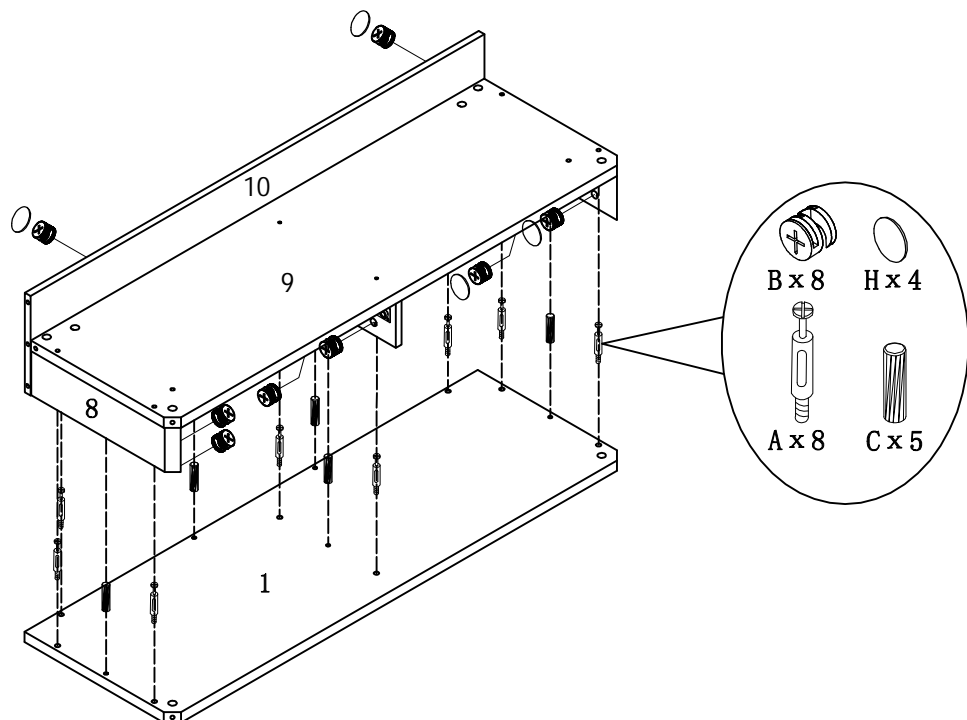

PAGE 6 OF 10


# ASSEMBLY INSTRUCTION

ITEM#: 192624

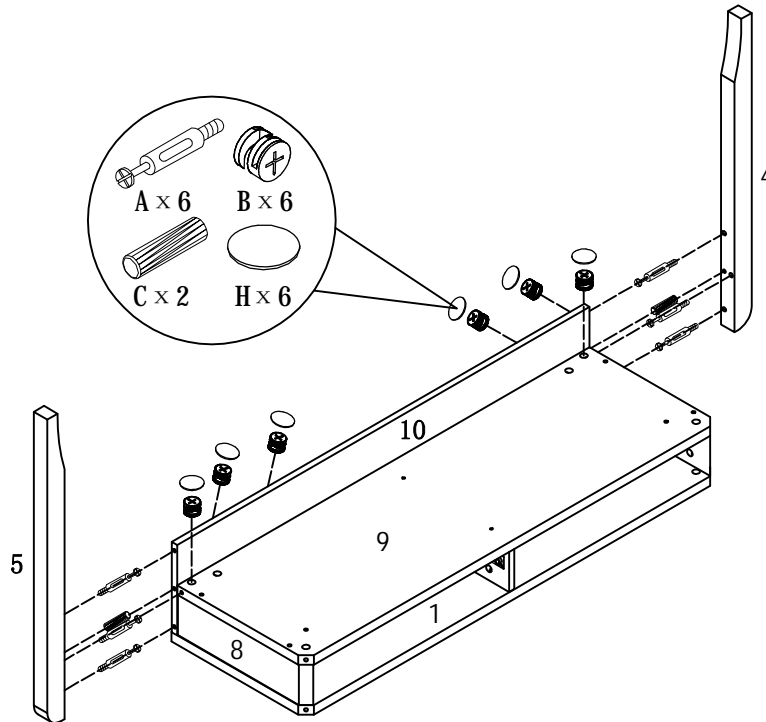

STEP 7

STEP 8

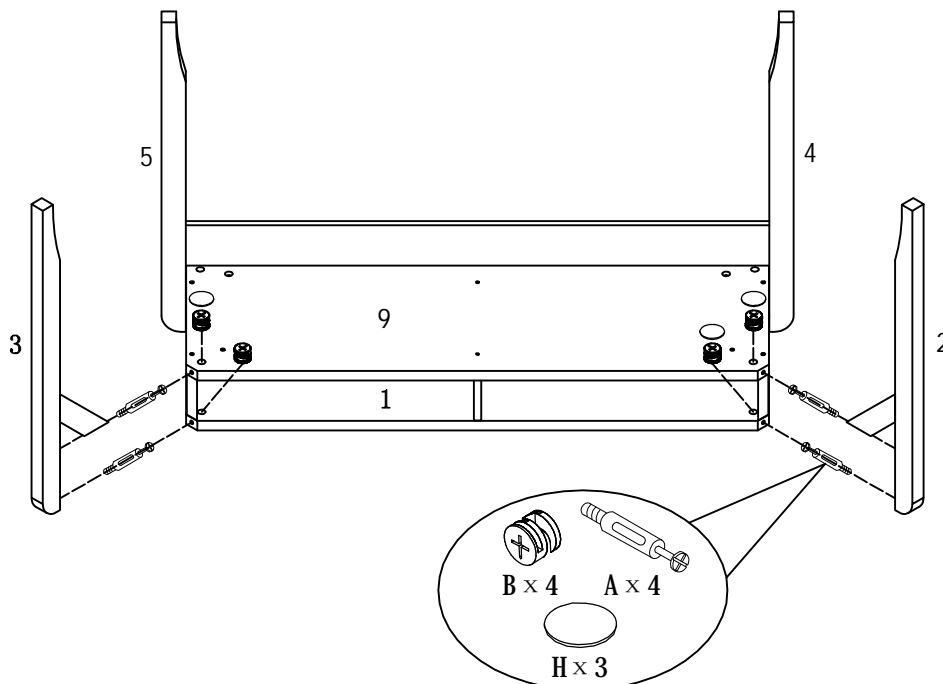


PAGE 7 OF 10




# ASSEMBLY INSTRUCTION

ITEM#: 192624

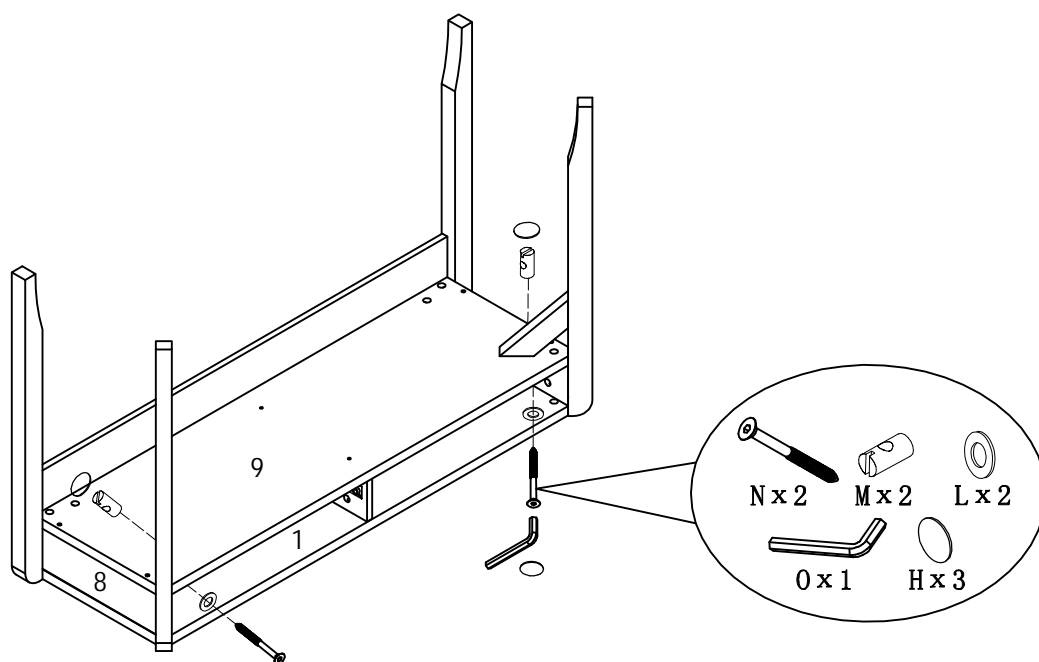

STEP 9


STEP 10

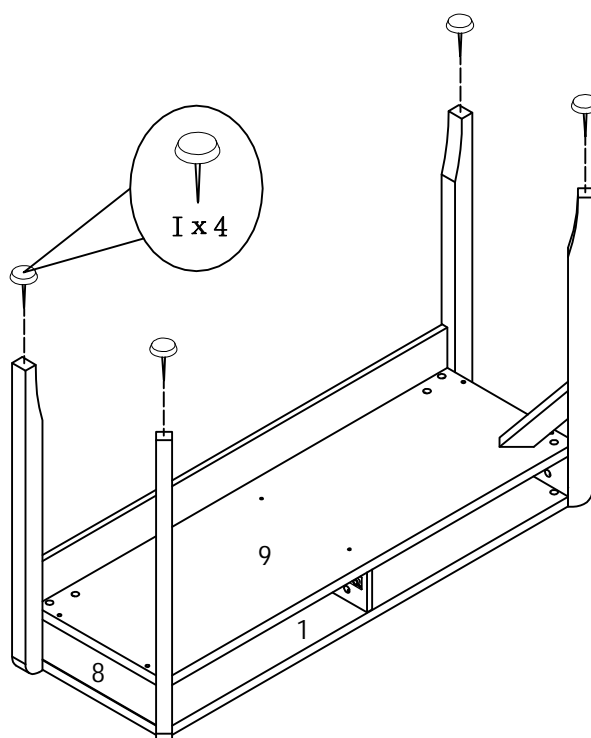


PAGE 8 OF 10

# ASSEMBLY INSTRUCTION


ITEM#: 192624

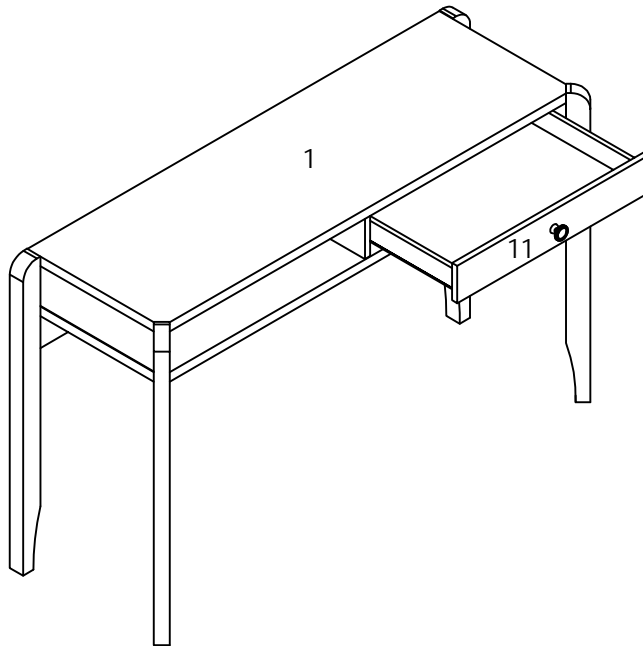

STEP 11

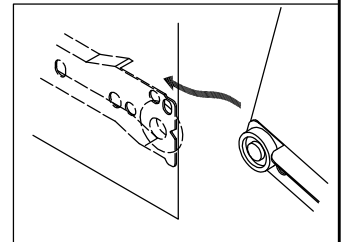

STEP 12

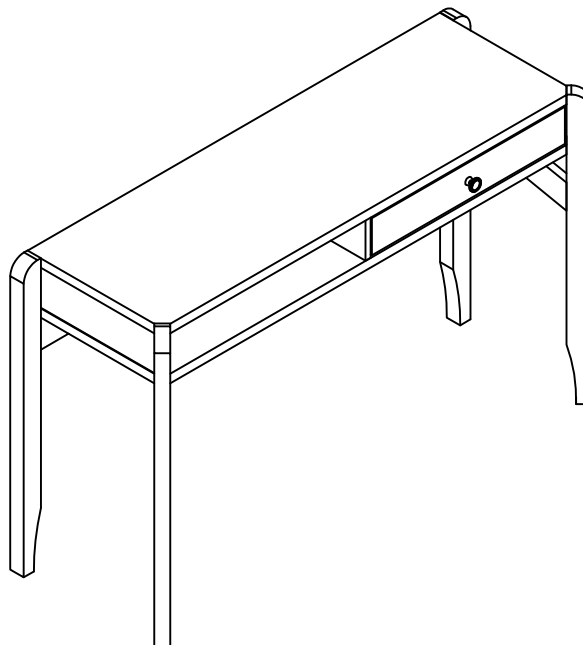


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :


## TOOLS NEEDED ( NOT INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS




DRYWALL SCREW  $\phi 5 \times 40$  X 1PC



STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

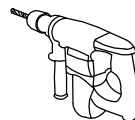


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1 / ETAPE 1

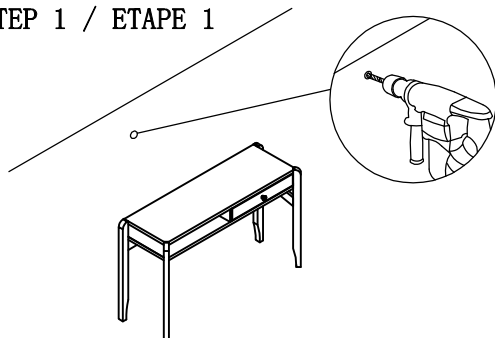


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2 / ETAPE 2

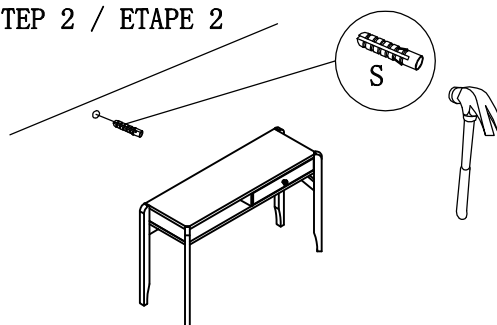


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3 / ETAPE 3

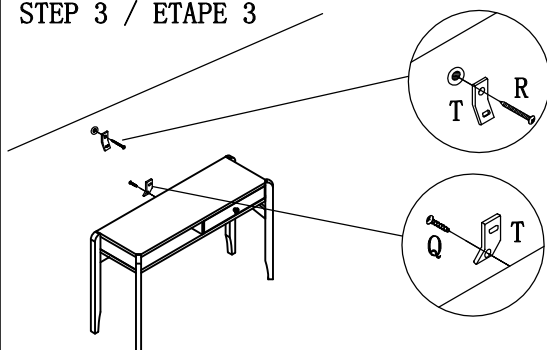

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4 / ETAPE 4

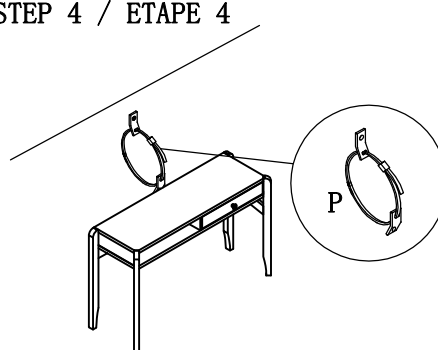

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.