

# ASSEMBLY INSTRUCTION

---

## PLEASE READ BEFORE ASSEMBLING!


Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Note position of all holes on each panel during assembly.



ITEM#: Y1306

Need some help?  
Scan here for  
assembly video.

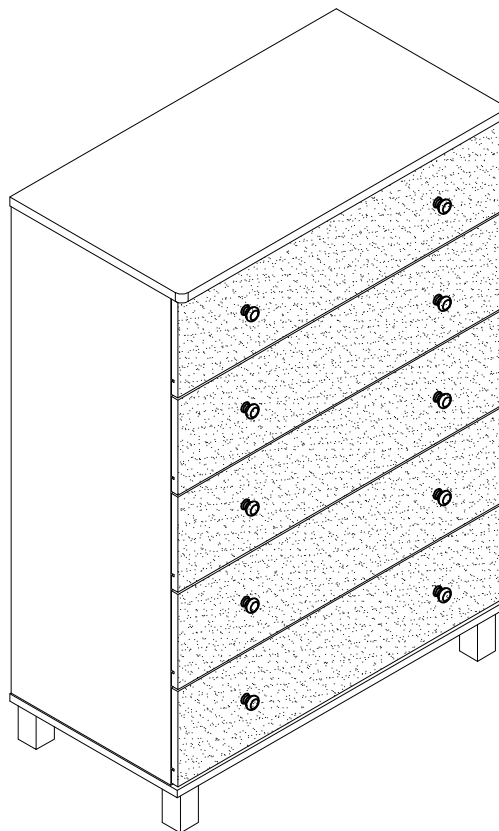

# PARTS IDENTIFICATION




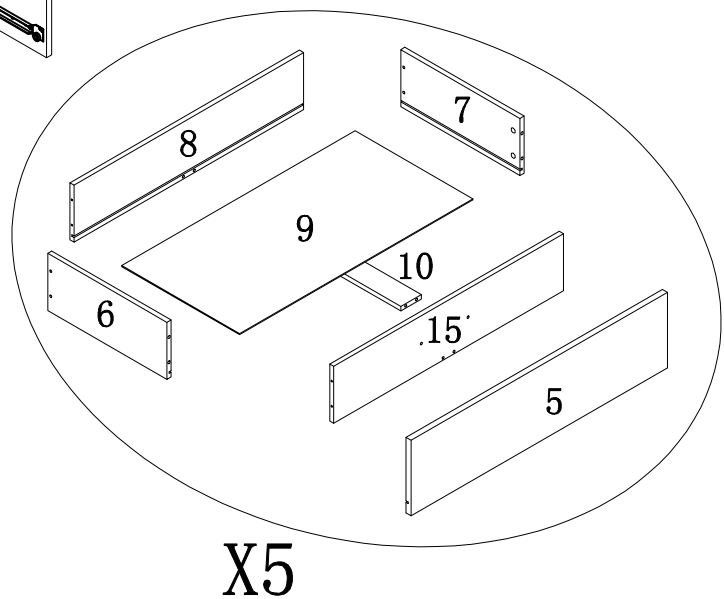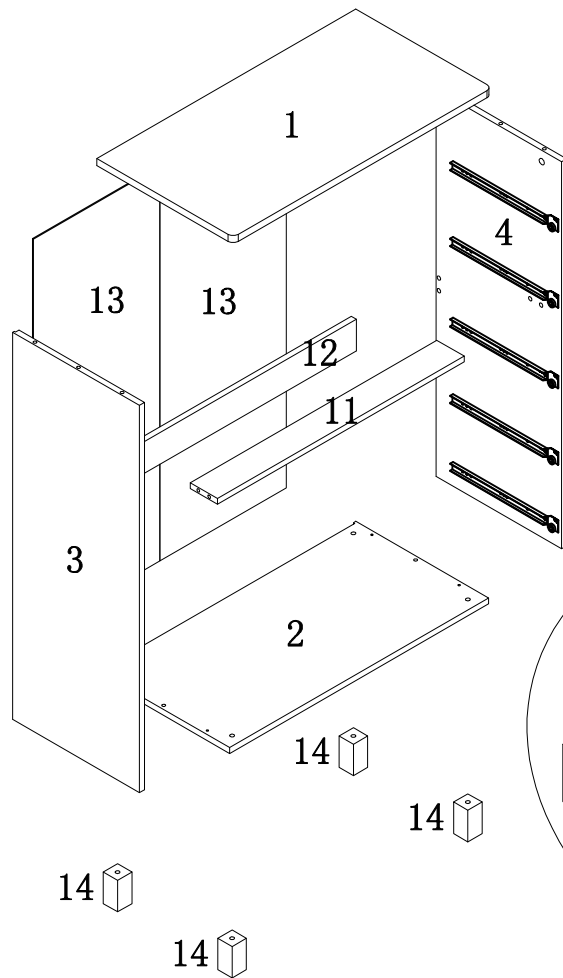












ITEM#:Y1306



(1)	1pc	(8)	5pcs	(15)	5pcs
(2)	1pc	(9)	5pcs		
(3)	1pc	(10)	5pcs		
(4)	1pc	(11)	1pc		
(5)	5pcs	(12)	1pc		
(6)	5pcs	(13)	2pcs		
(7)	5pcs	(14)	4pcs		







# HARDWARE IDENTIFICATION

ITEM#:Y1306


A		L29	12pcs
B		ø15	12pcs
C		ø30	10pcs
D		ø4×32	10pcs
E		ø8×25	4pcs
G		ø4 x 30	60pcs
H		M8 x 35	4pcs
I		M5	1pc
J		Z1016	35pcs
K		ø16	4pcs
L		ø8x40	1pc
M		ø12x12x1	2pcs
N		ø5x40	1pc
O		ø4x25	1pc
P		197×5×1	1pc
Q		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

# ASSEMBLY INSTRUCTION


ITEM#:Y1306
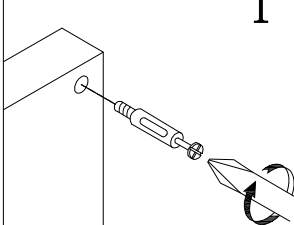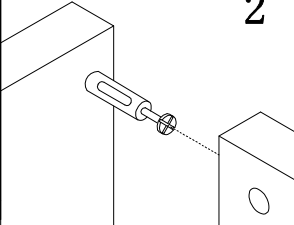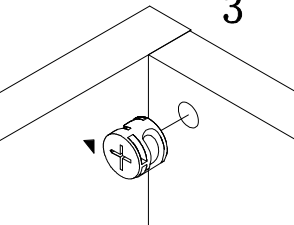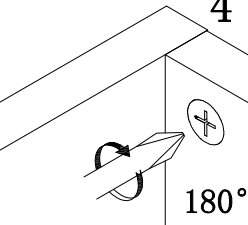
<b>HOW TO</b>  Cam Bolt  Cam Lock	<b>1</b> 	<b>2</b> 	<b>3</b> 	<b>4</b>  180°
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

## STEP1

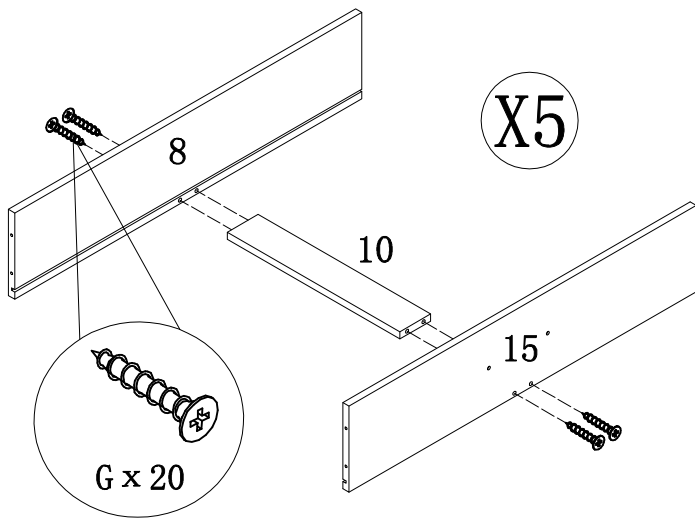


## STEP2

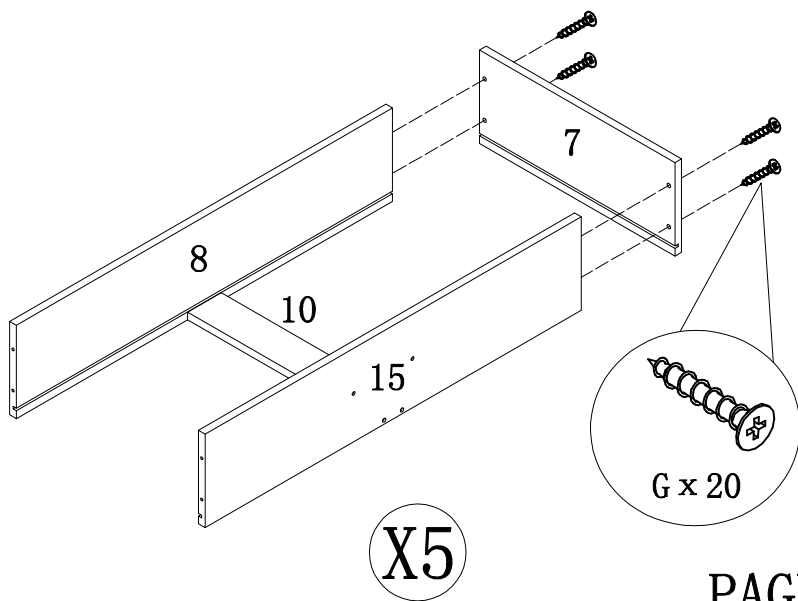


# ASSEMBLY INSTRUCTION

ITEM#:Y1306

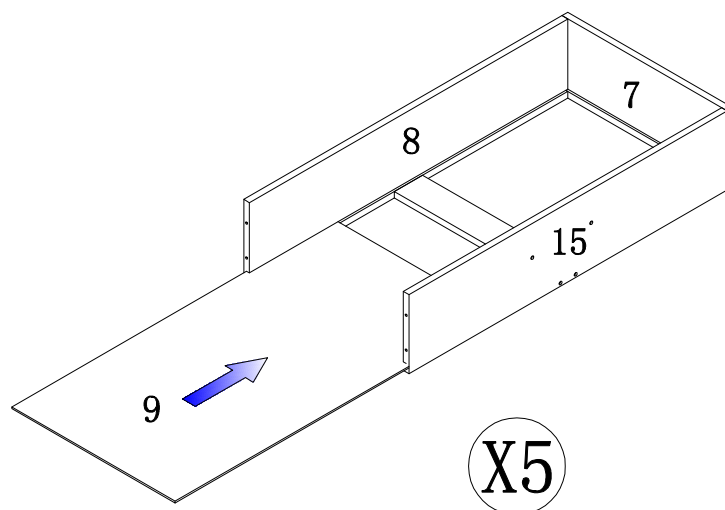


STEP3

STEP4

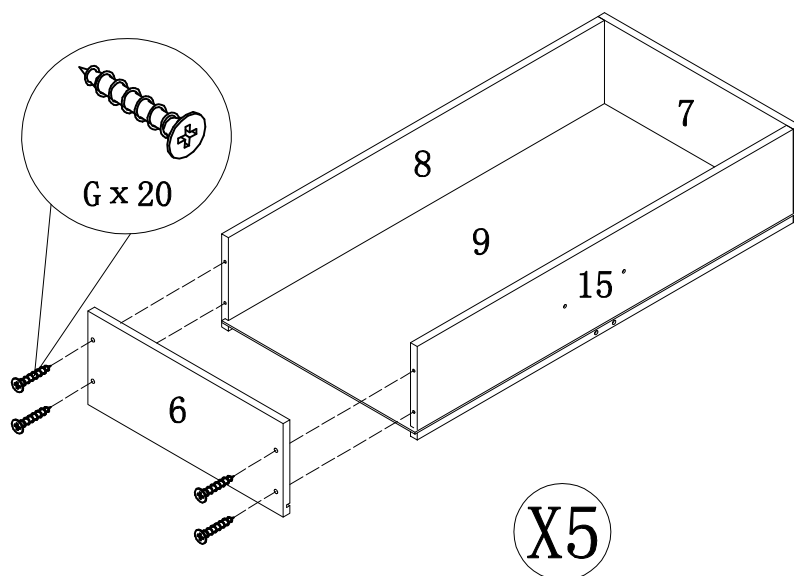


# ASSEMBLY INSTRUCTION

ITEM#:Y1306

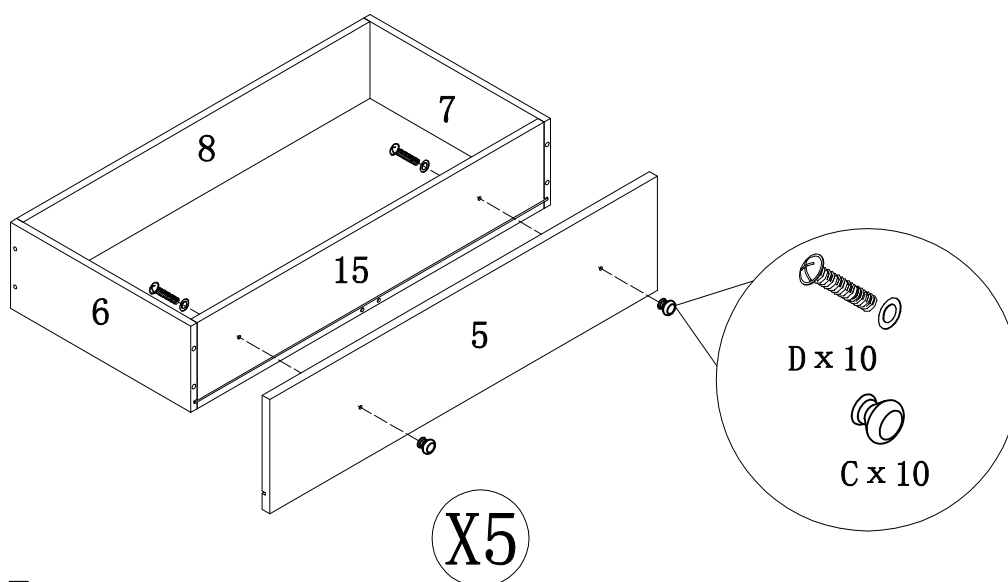


STEP5

STEP6

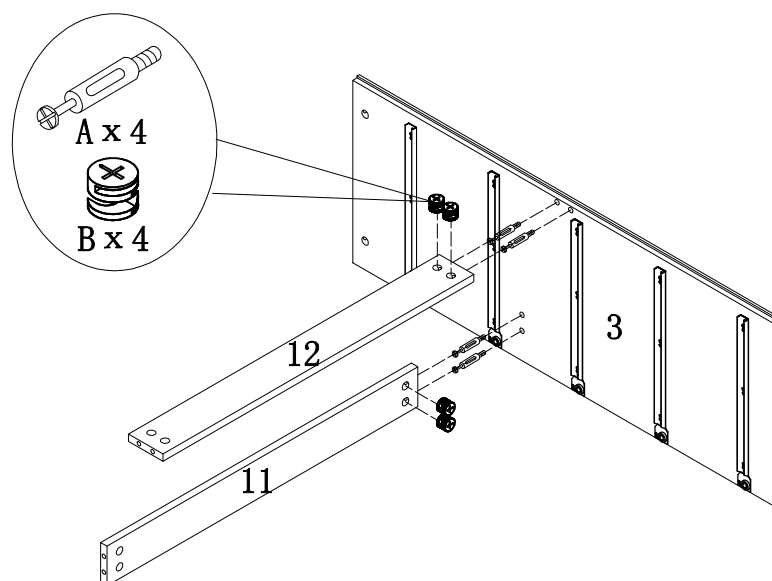


# ASSEMBLY INSTRUCTION

ITEM#:Y1306

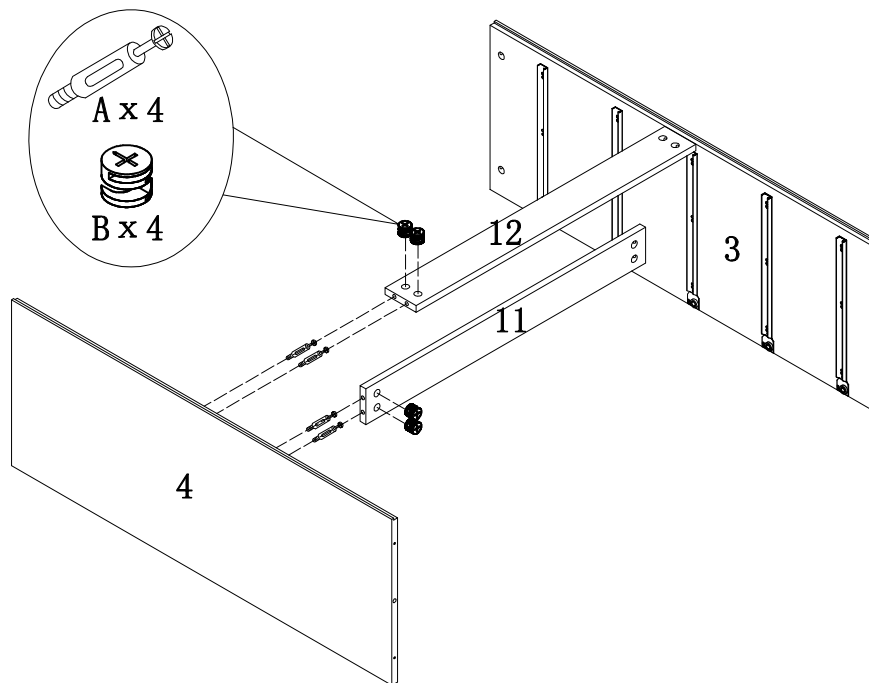


STEP7

STEP8

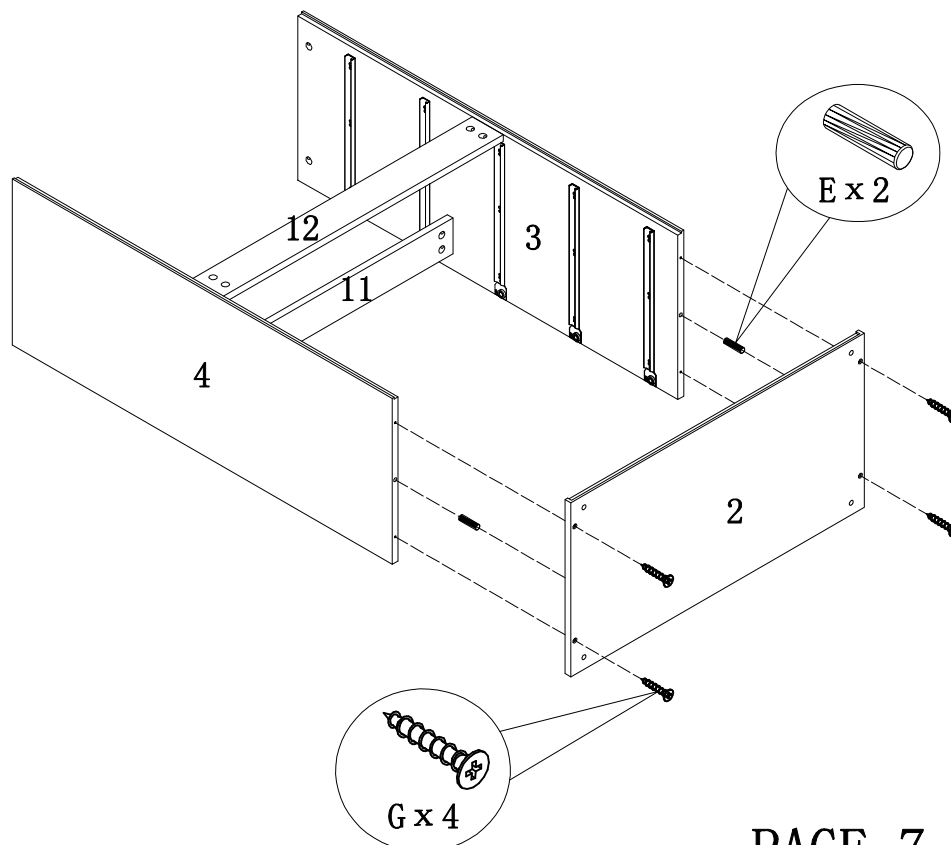


# ASSEMBLY INSTRUCTION

ITEM#:Y1306

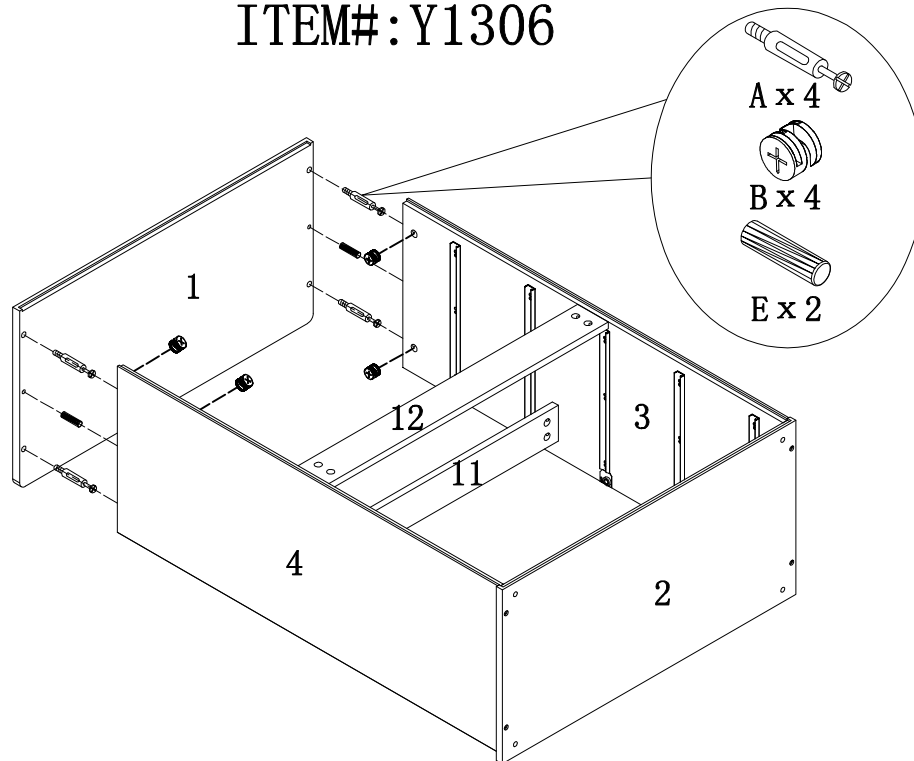

STEP9


STEP10

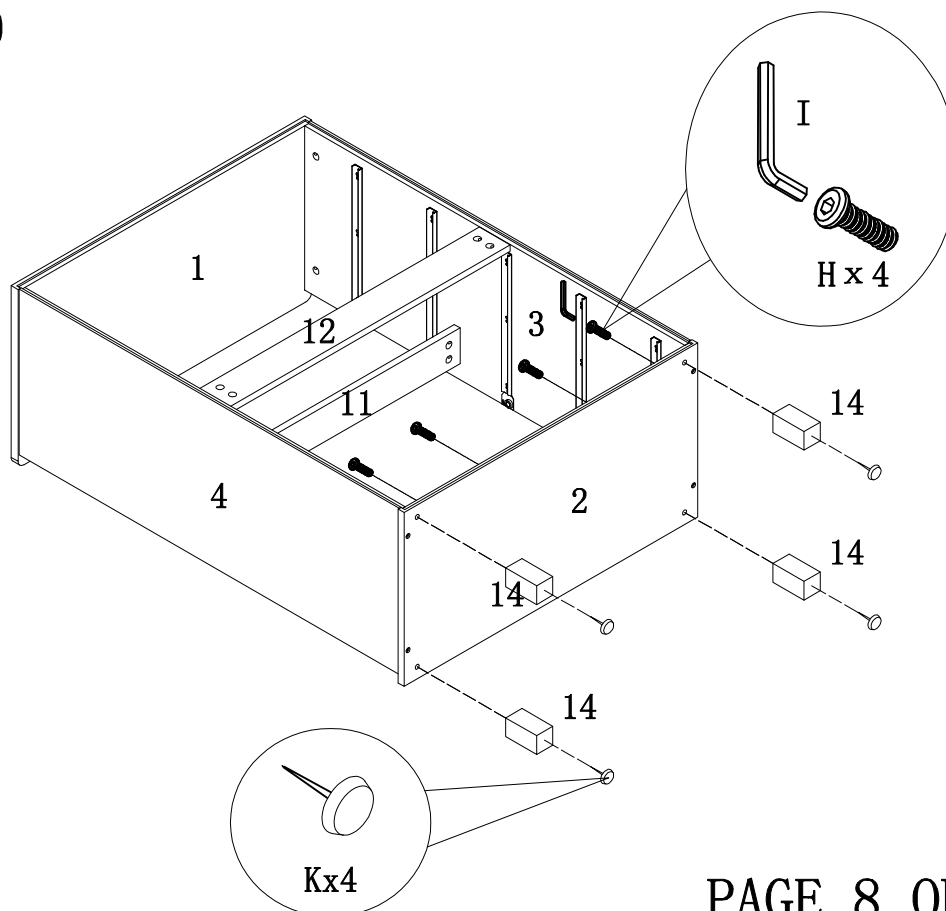





# ASSEMBLY INSTRUCTION

ITEM#:Y1306

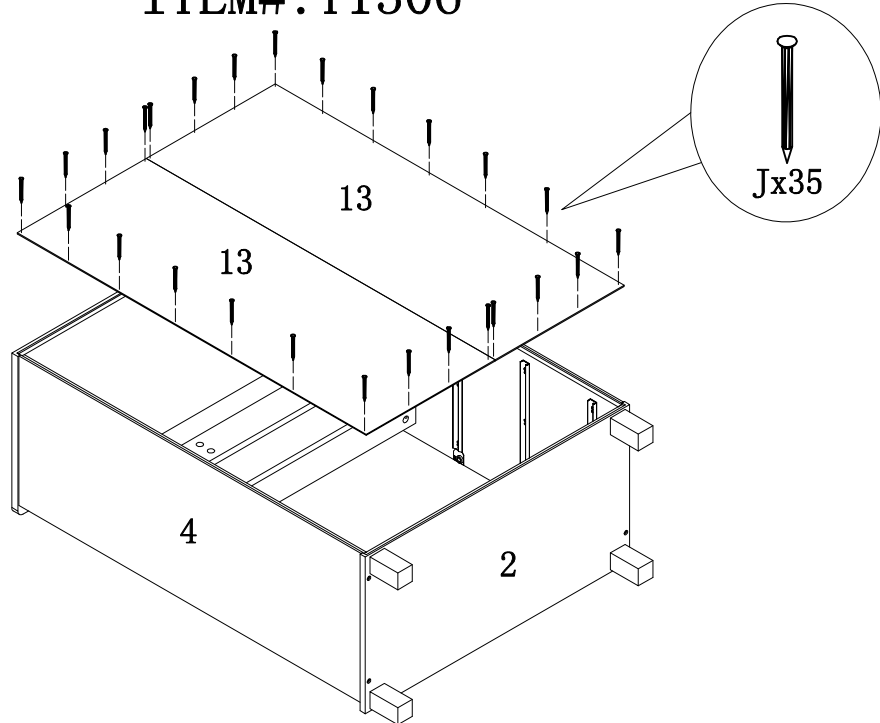

STEP11


STEP12

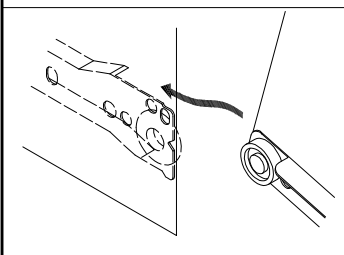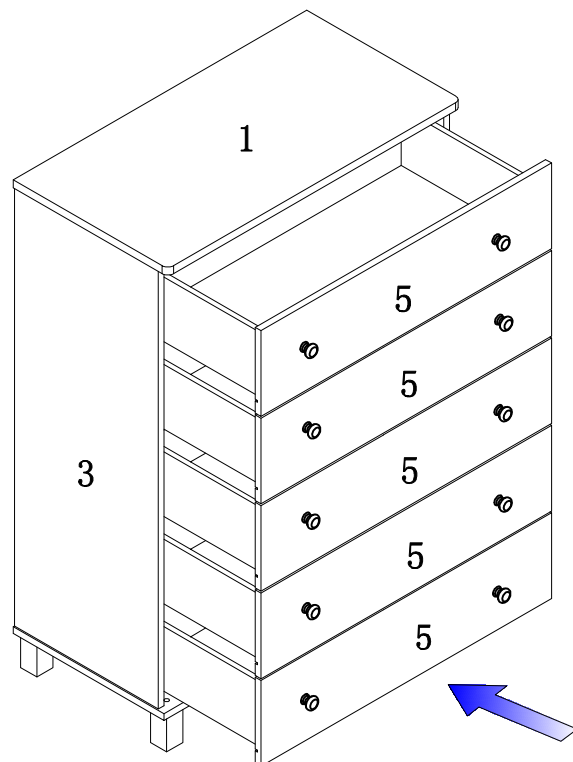


PAGE 9 OF 10

# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC




STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

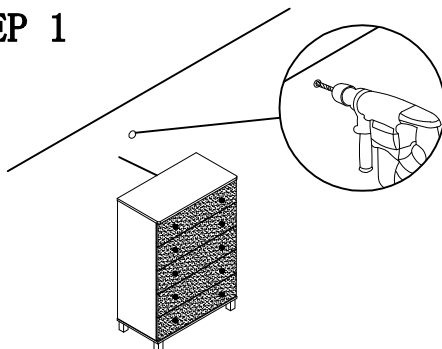


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

### STEP 2

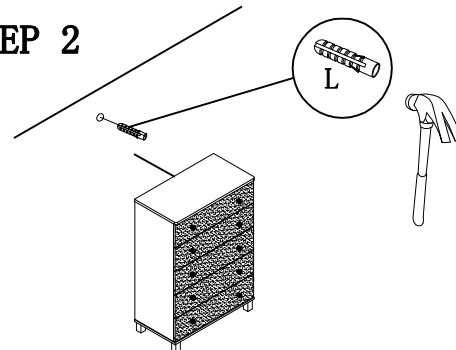


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

### STEP 3

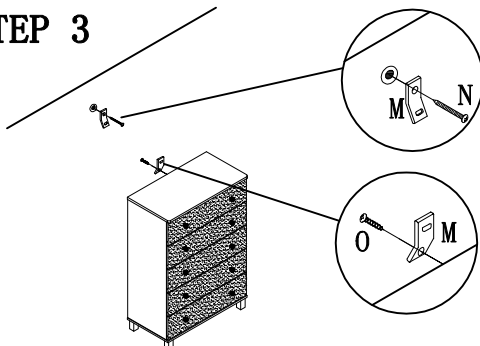

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

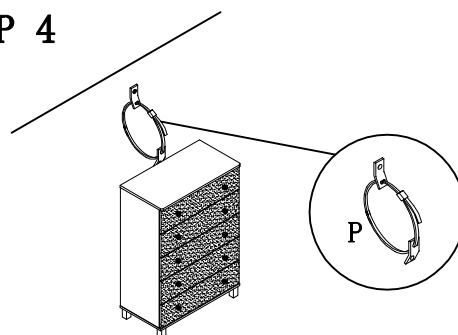

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
  2. pull lightly til strap stops.
- Assembly is complete.