


ASSEMBLY INSTRUCTION

ITEM#: 161478

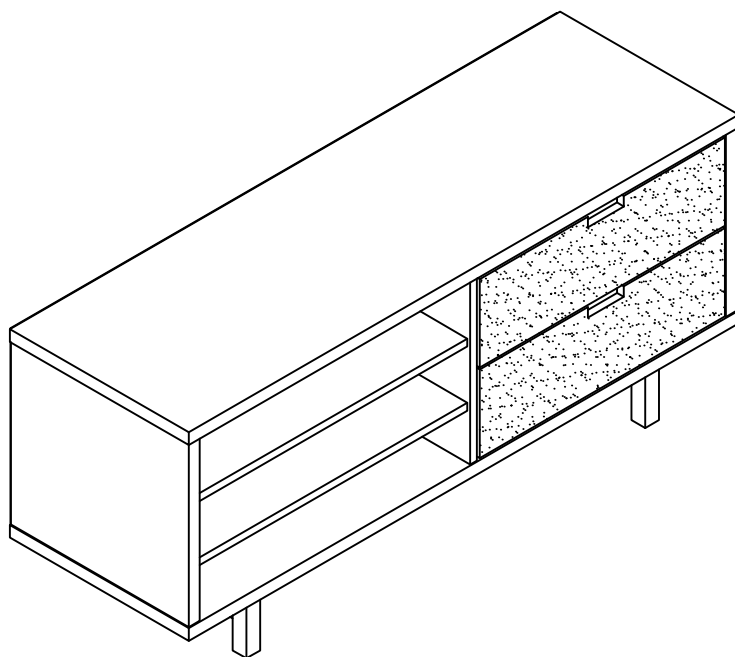

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 161478

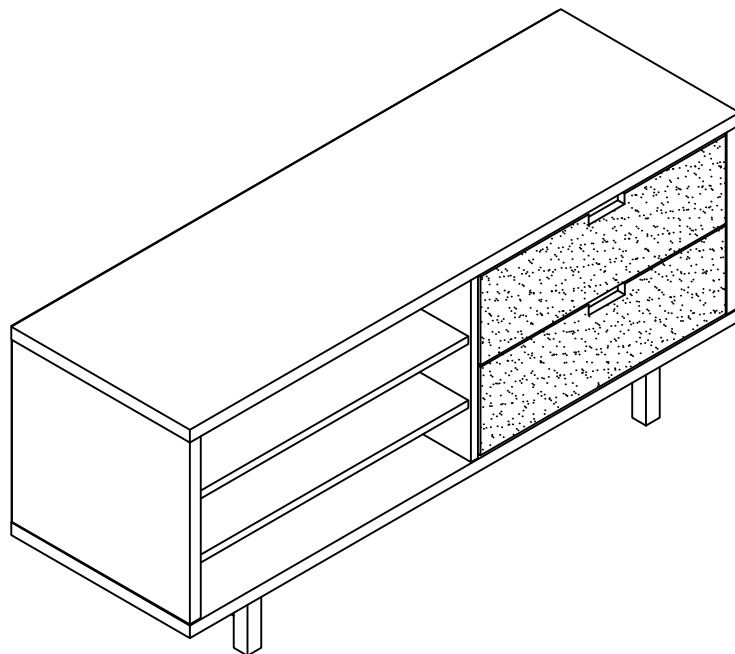

PARTS IDENTIFICATION






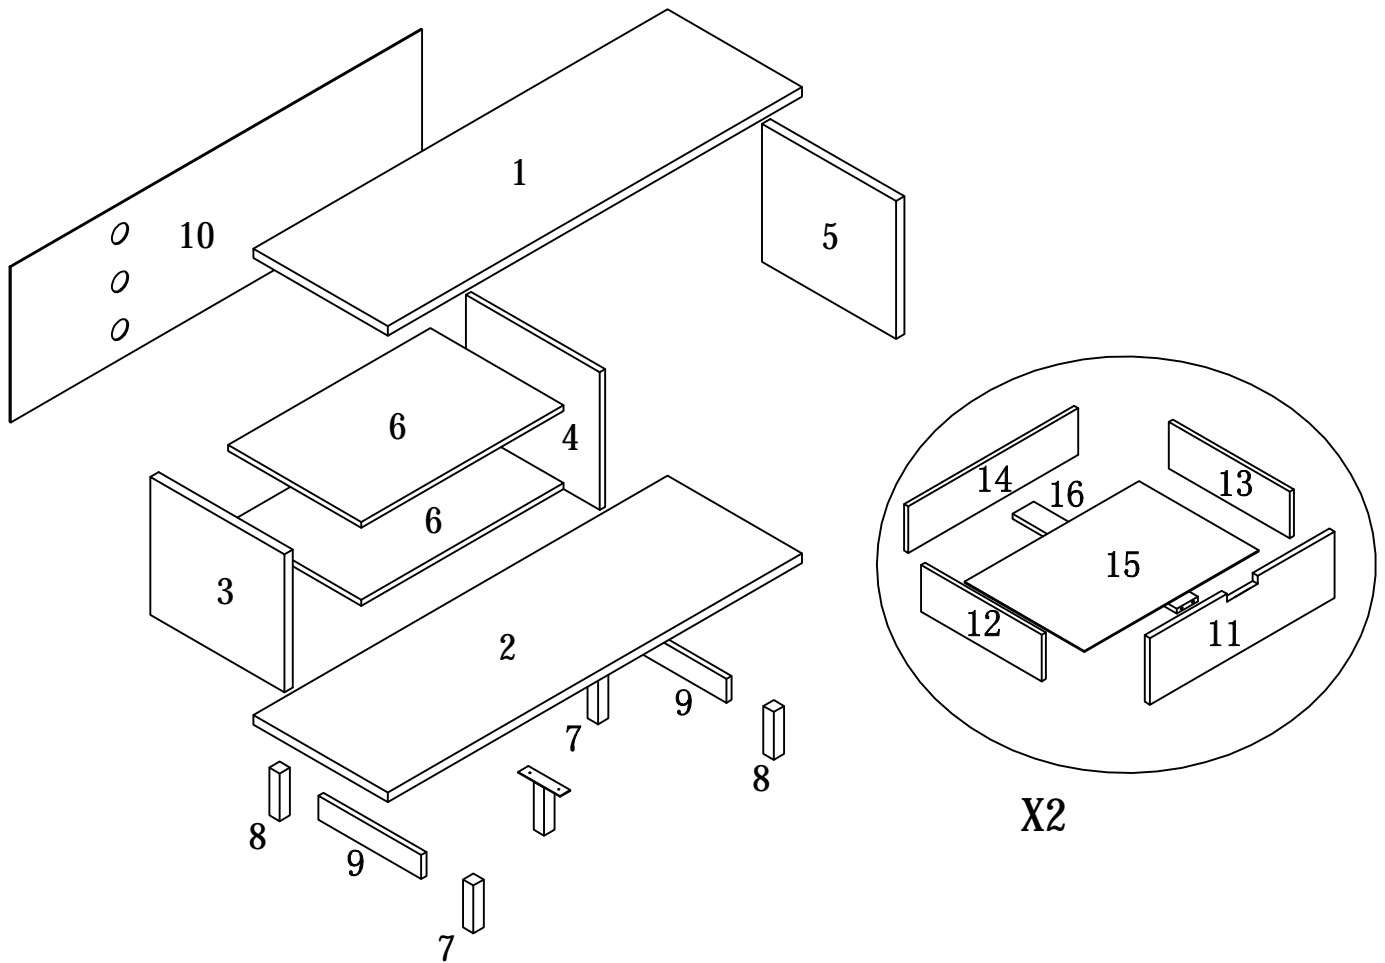












ITEM#: 161478



(1)	1pc	(8)	2pcs	(15)	2pcs
(2)	1pc	(9)	2pcs	(16)	2pcs
(3)	1pc	(10)	1pc		
(4)	1pc	(11)	2pcs		
(5)	1pc	(12)	2pcs		
(6)	2pcs	(13)	2pcs		
(7)	2pcs	(14)	2pcs		


HARDWARE IDENTIFICATION

ITEM#: 161478

A		L29	12pcs
B		∅15	12pcs
C		L20	8pcs
D		∅12	8pcs
E		∅8x25	14pcs
F		∅6x30	4pcs
G		∅5x15	8pcs
H		∅4x16	2pcs
I		∅4x30	12pcs
J		∅4x40	2pcs
K		∅7x48	4pcs
L		M6x30	4pcs
M		∅8x16x2	8pcs
N			36pcs
O		∅20	8pcs
P		∅16	4pcs
Q		80x25x122	1pc
R		Glue: For securing please apply to wood dowel first before inserting into panel	1pc


ASSEMBLY INSTRUCTION

ITEM#:161478

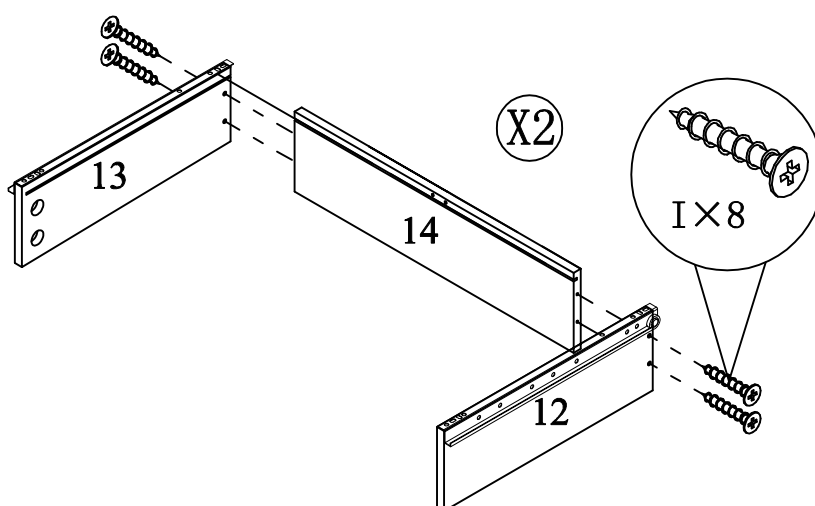

STEP1


STEP2

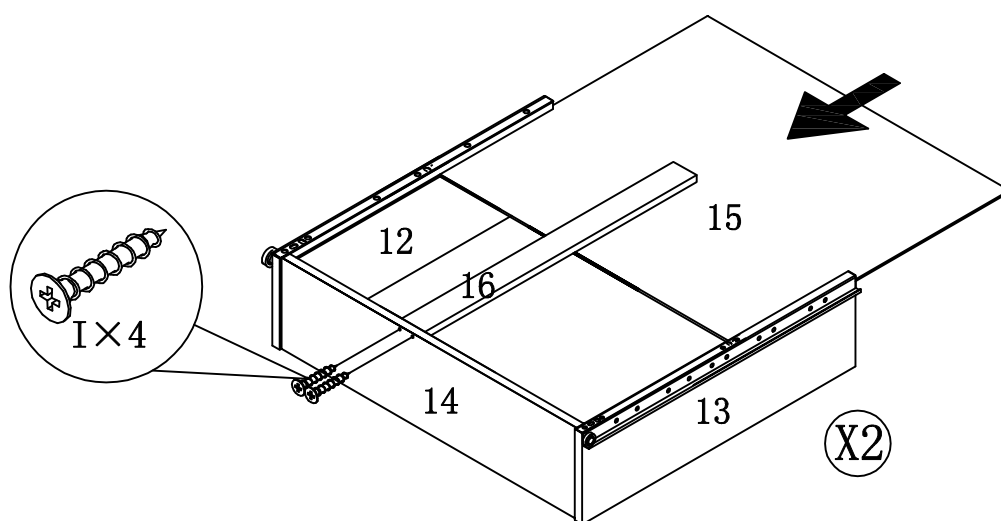


ASSEMBLY INSTRUCTION

ITEM#: 161478


HOW TO





1

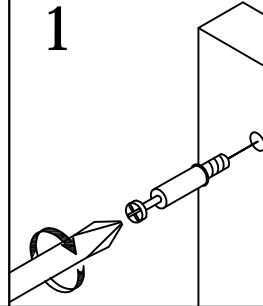

2

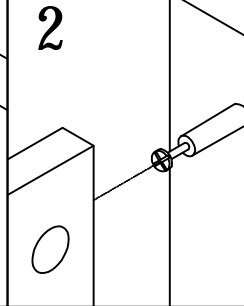


3

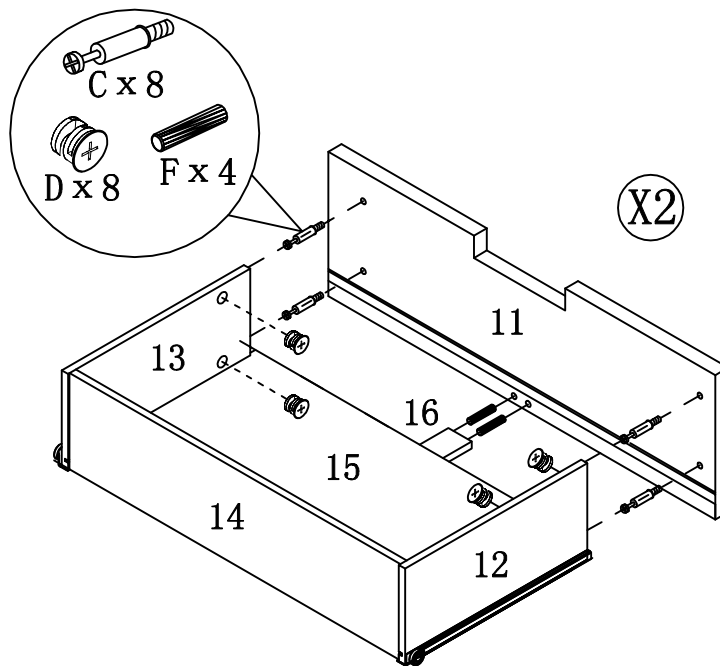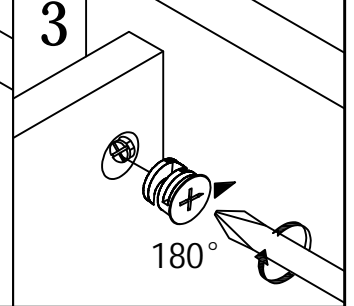


STEP 3

STEP 4

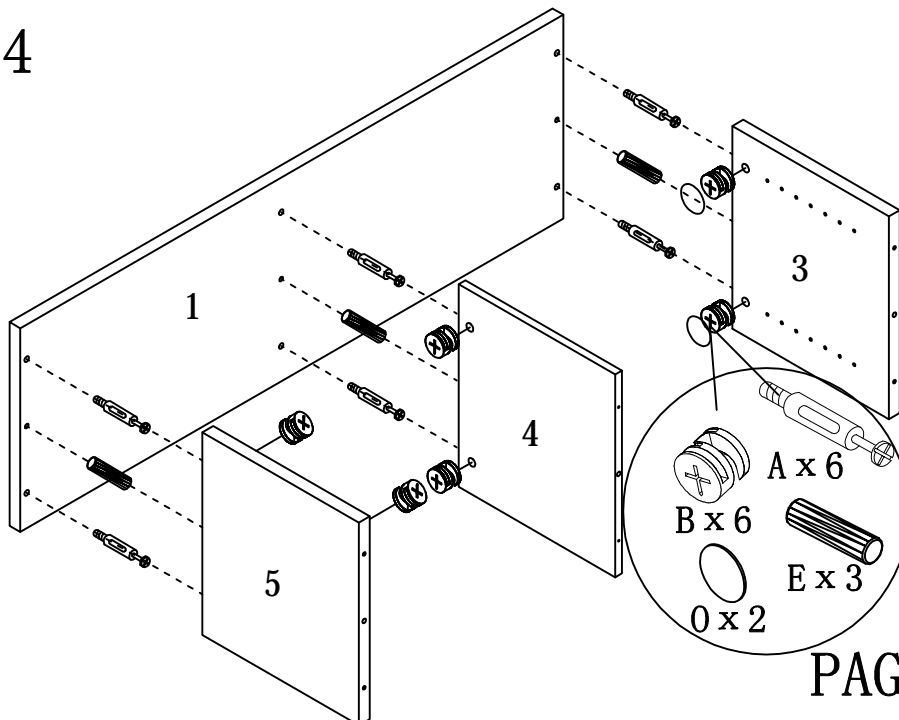


ASSEMBLY INSTRUCTION

ITEM#: 161478

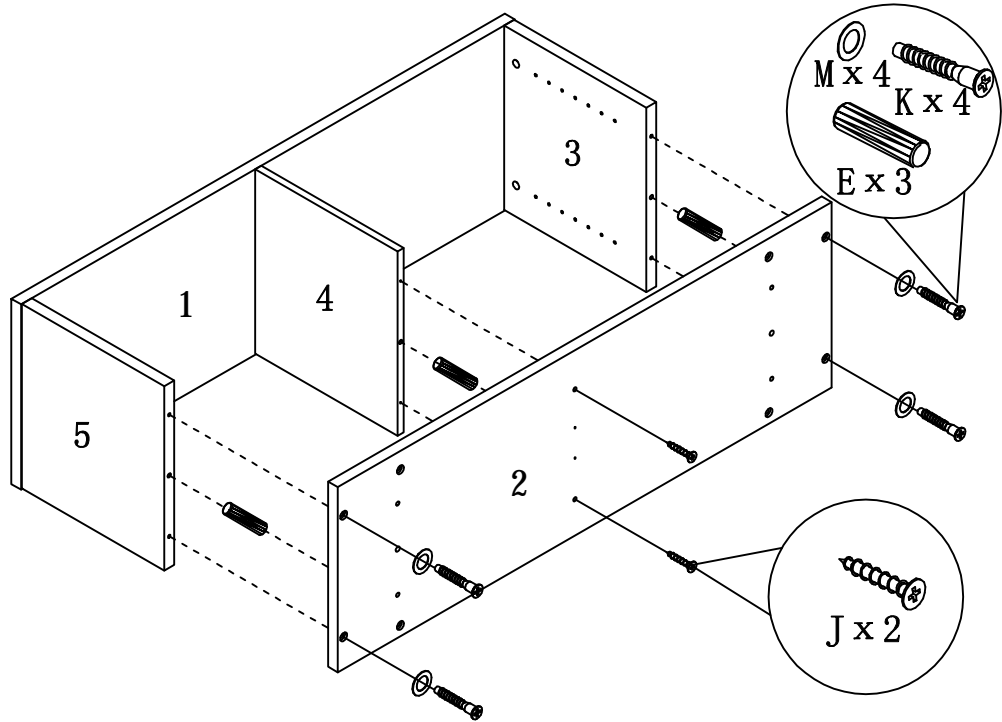

STEP5


STEP6

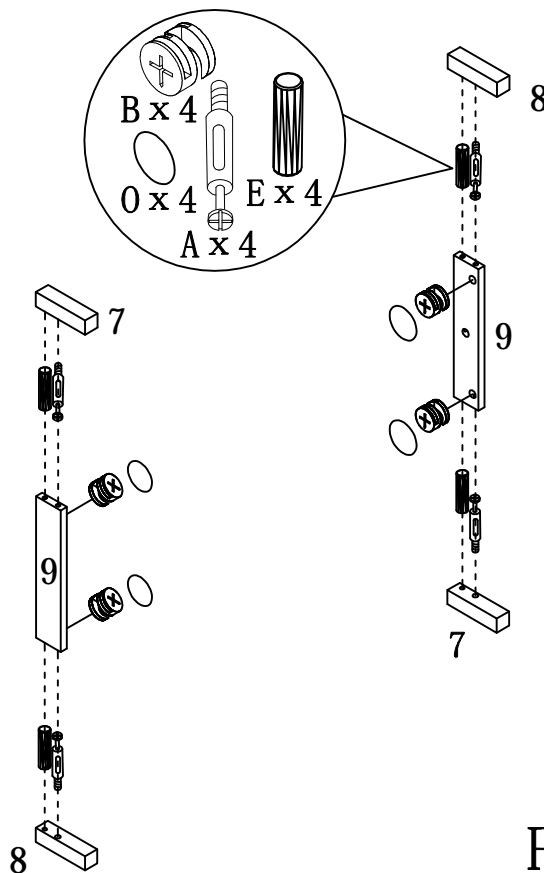

PAGE: 6 OF 8


ASSEMBLY INSTRUCTION

ITEM#: 161478

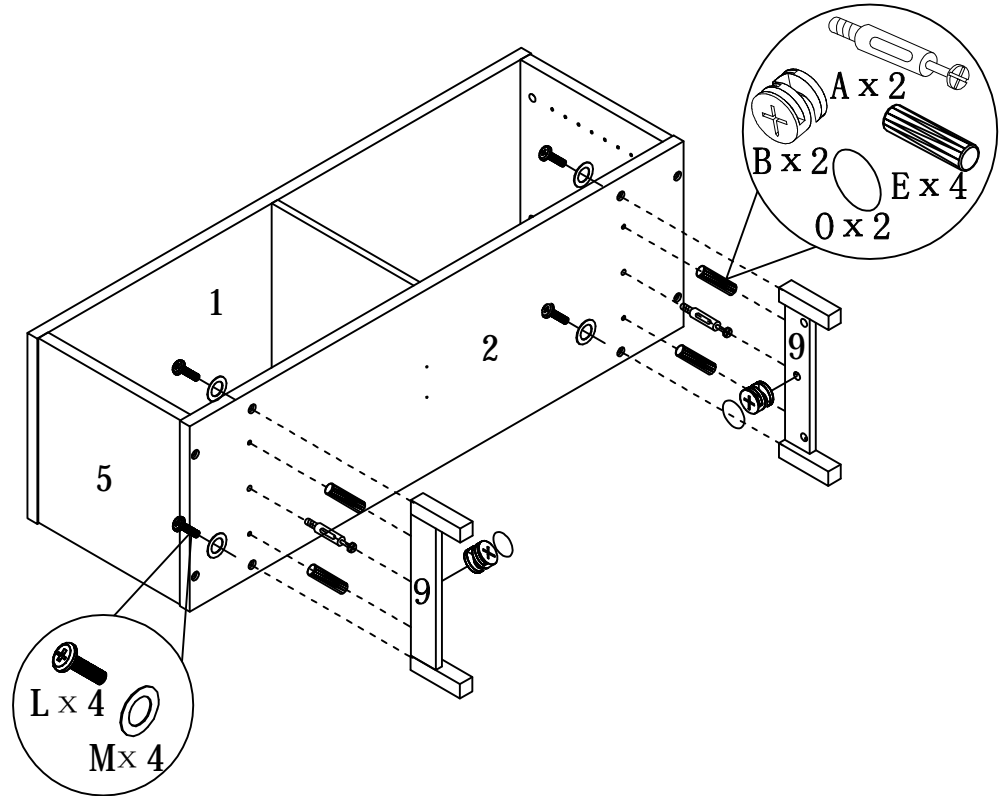

STEP 7


STEP 8

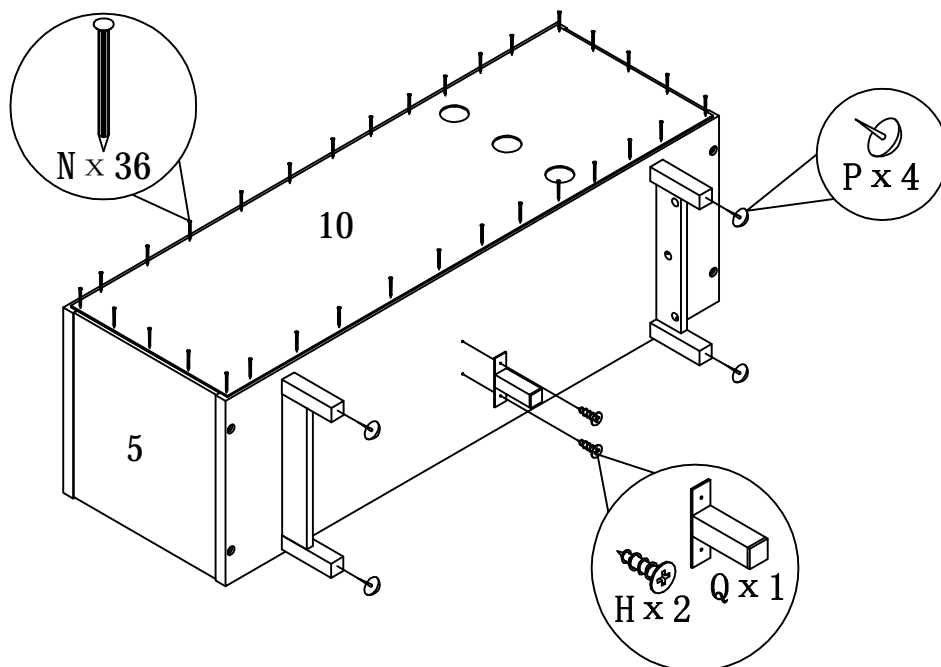

PAGE: 7 OF 8

ASSEMBLY INSTRUCTION

ITEM#: 161478

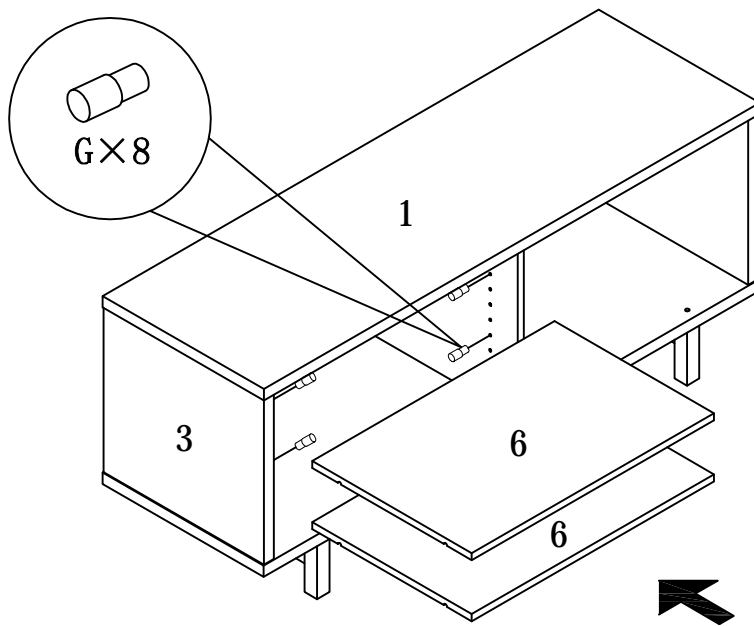

STEP9

STEP10

