

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#	151280	151280DGY	151280WH
		192486	

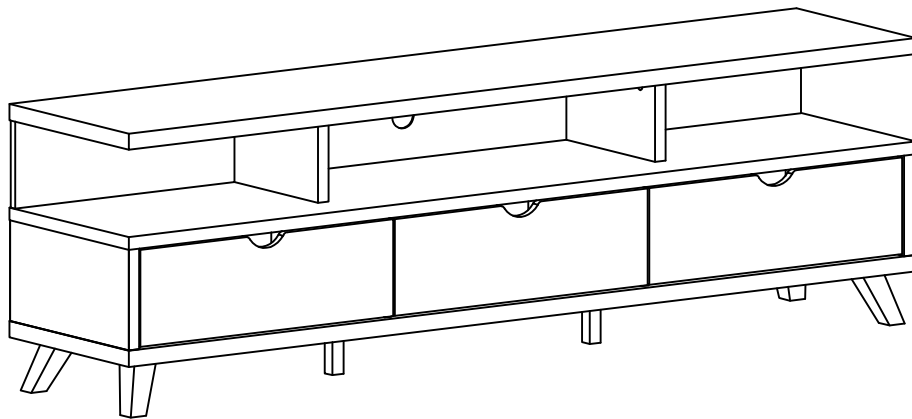


PARTS IDENTIFICATION

ITEM#: 151280

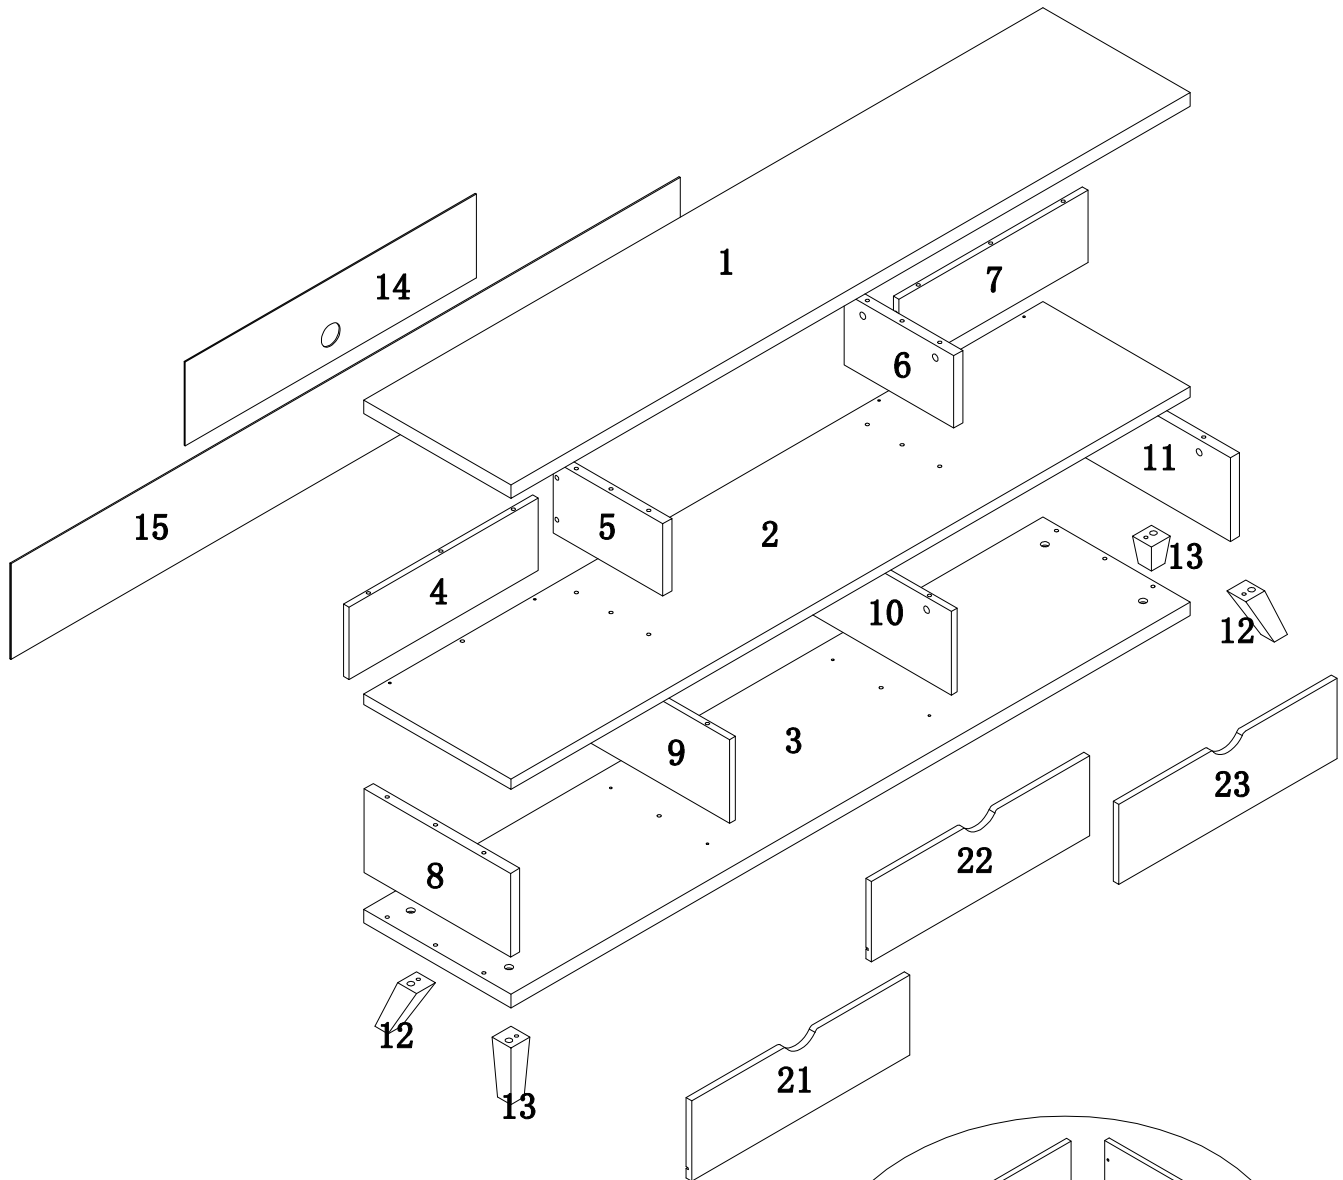




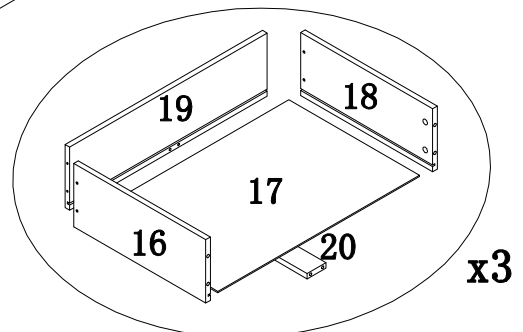














(1)	1pc	(10)	1pc	(19)	3pcs
(2)	1pc	(11)	1pc	(20)	3pcs
(3)	1pc	(12)	2pcs	(21)	1pc
(4)	1pc	(13)	2pcs	(22)	1pc
(5)	1pc	(14)	1pc	(23)	1pc
(6)	1pc	(15)	1pc		
(7)	1pc	(16)	3pcs		
(8)	1pc	(17)	3pcs		
(9)	1pc	(18)	3pcs		





HARDWARE IDENTIFICATION

ITEM#: 151280

A		L29	20pcs
B		Ø15	20pcs
C		L20	12pcs
D		Ø12	12pcs
E		Ø8x25	20pcs
F		Ø6x30	6pcs
G		Ø7x48	8pcs
H		Ø8xØ16x2	12pcs
I		Ø4x16	4pcs
J		Ø4x30	18pcs
K		Ø4x40	8pcs
L		M8x40	4pcs
M		M5	1pc
N			56pcs
O		Ø16	4pcs
P		Ø20	4pcs
Q		Glue: For securing please apply to wood dowel first before inserting into panel	1pc
R		80x25x102H	2pcs


ASSEMBLY INSTRUCTION

ITEM#: 151280

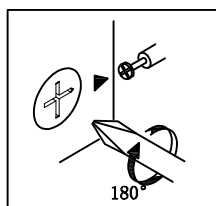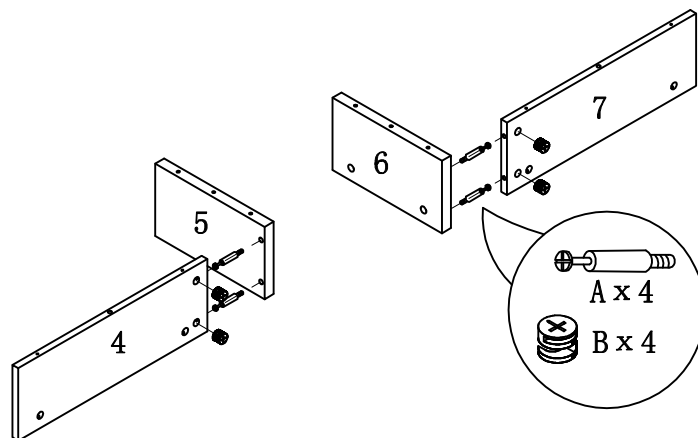


STEP 1

STEP 2

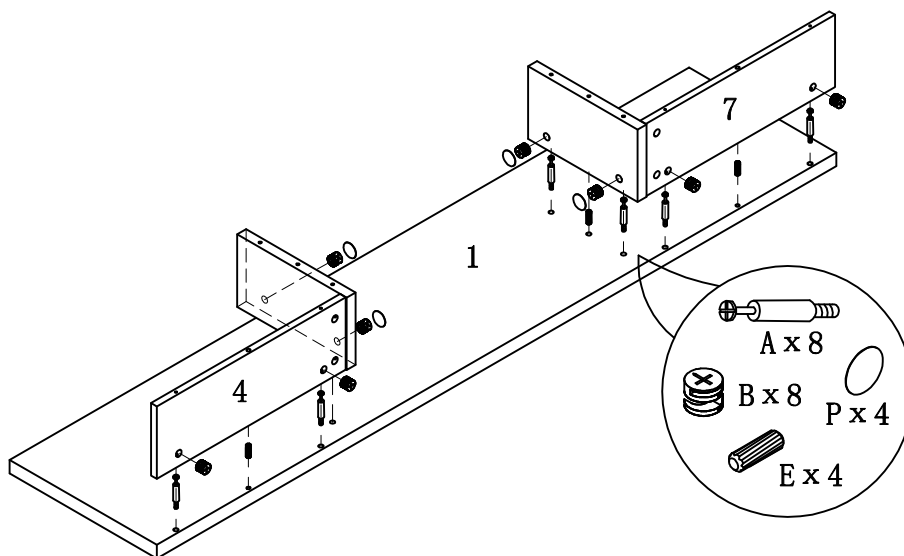


ASSEMBLY INSTRUCTION

ITEM#: 151280

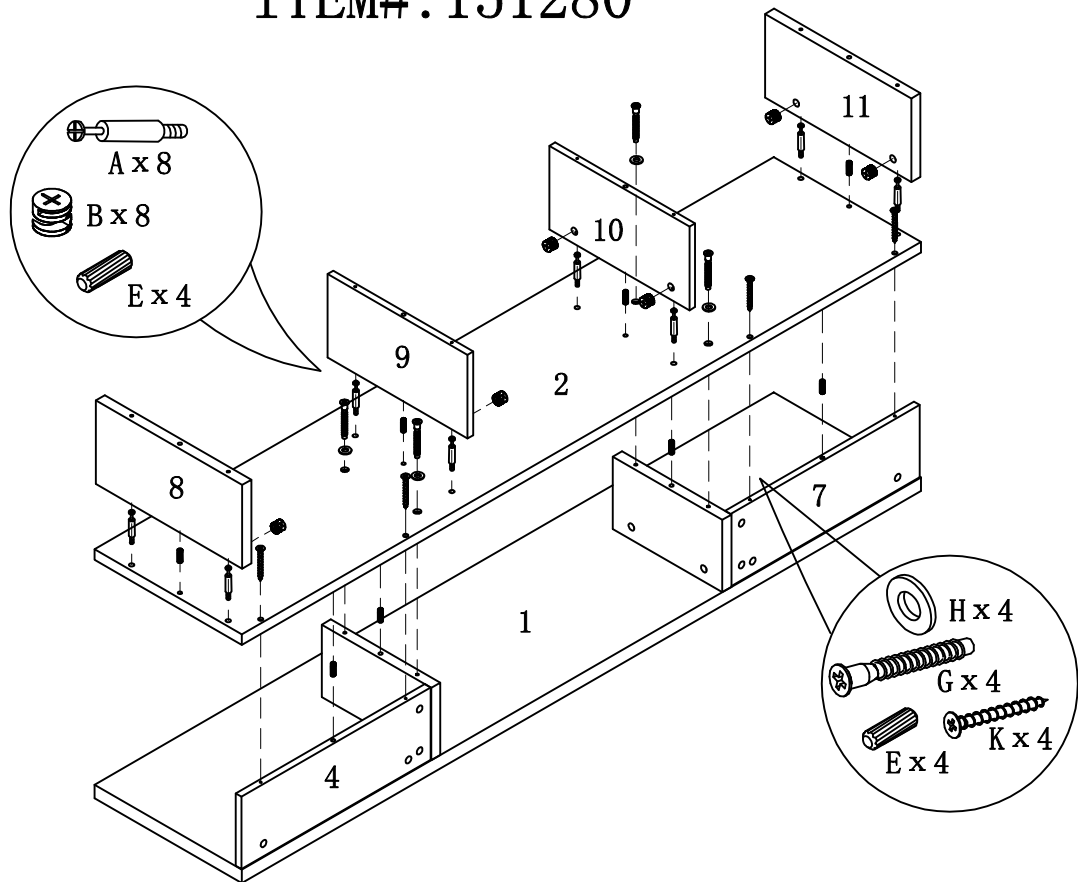


STEP 3

STEP 4

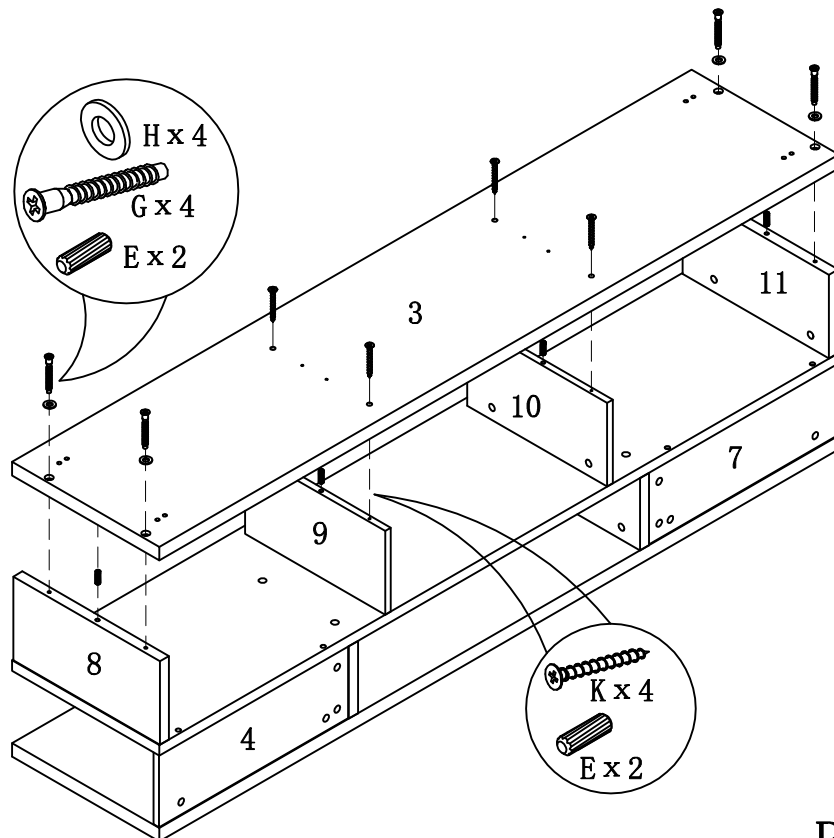


ASSEMBLY INSTRUCTION

ITEM#: 151280

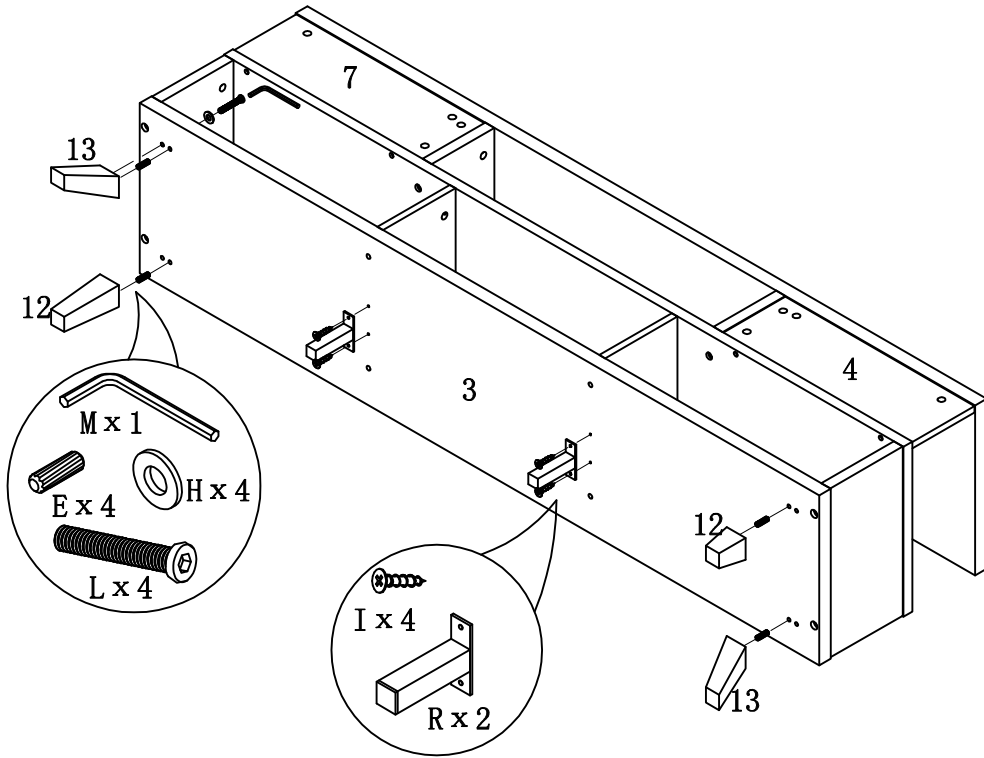


STEP 5

STEP 6

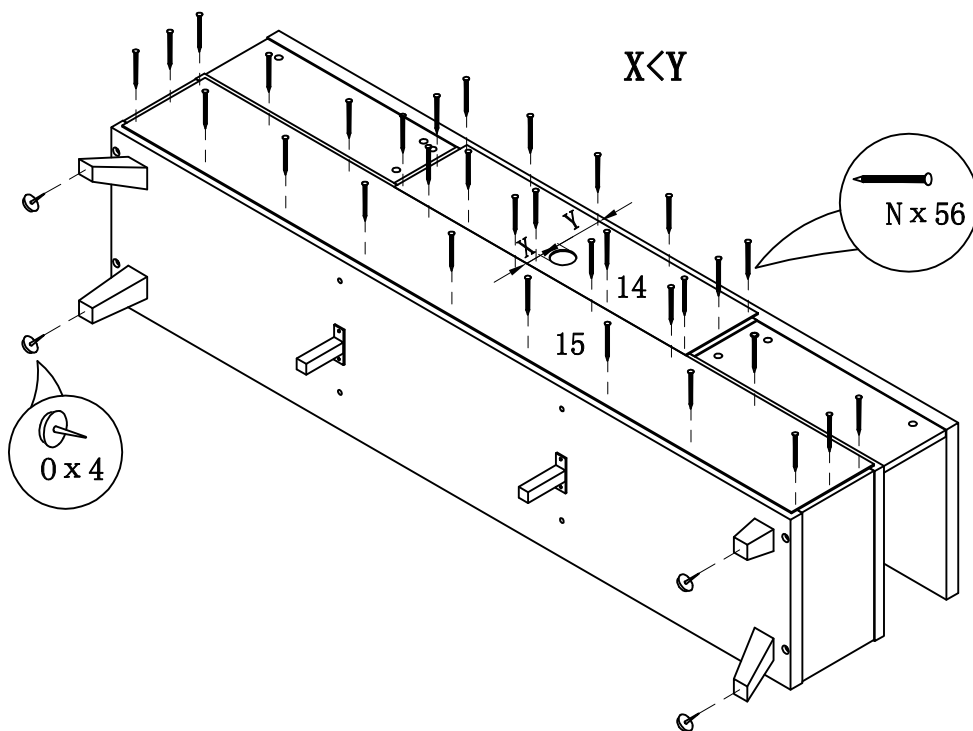


ASSEMBLY INSTRUCTION

ITEM#: 151280

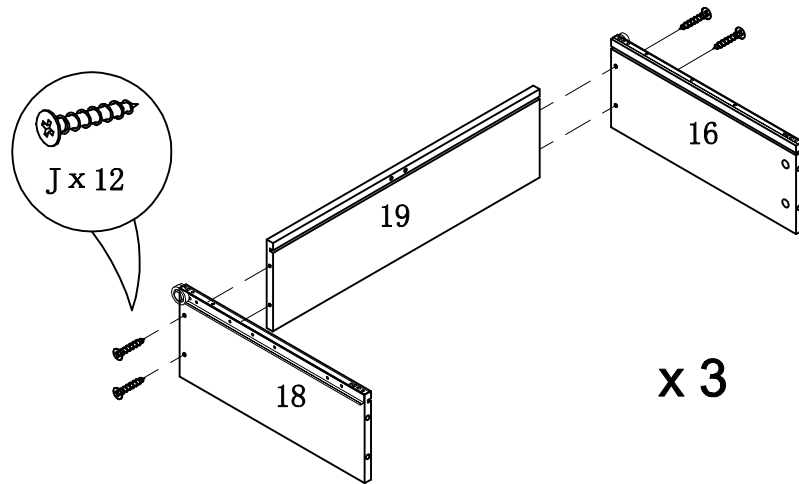


STEP 7

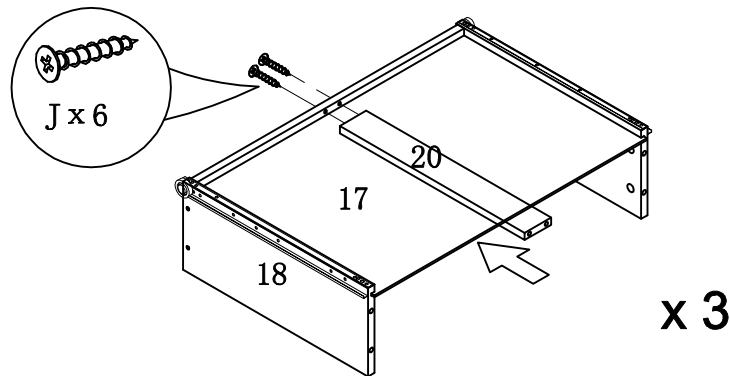



STEP 8

STEP 9

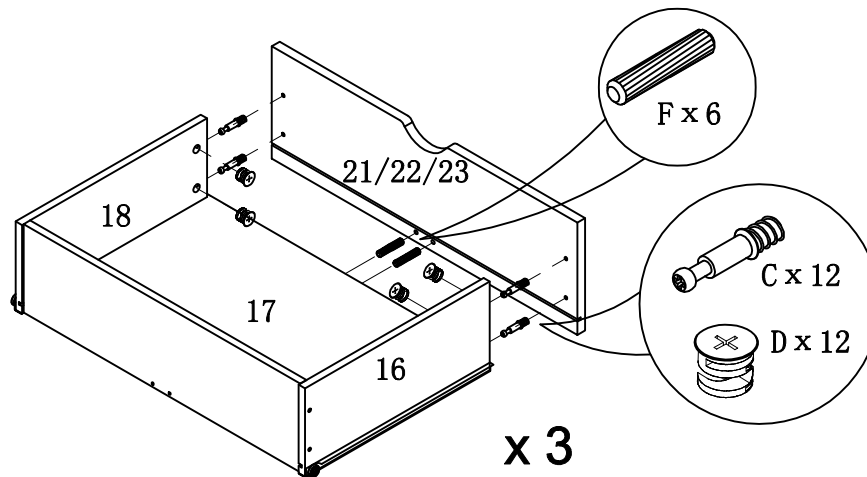

ASSEMBLY INSTRUCTION

ITEM#: 151280

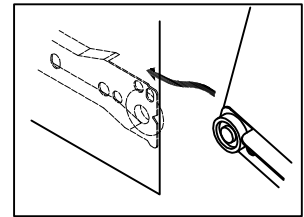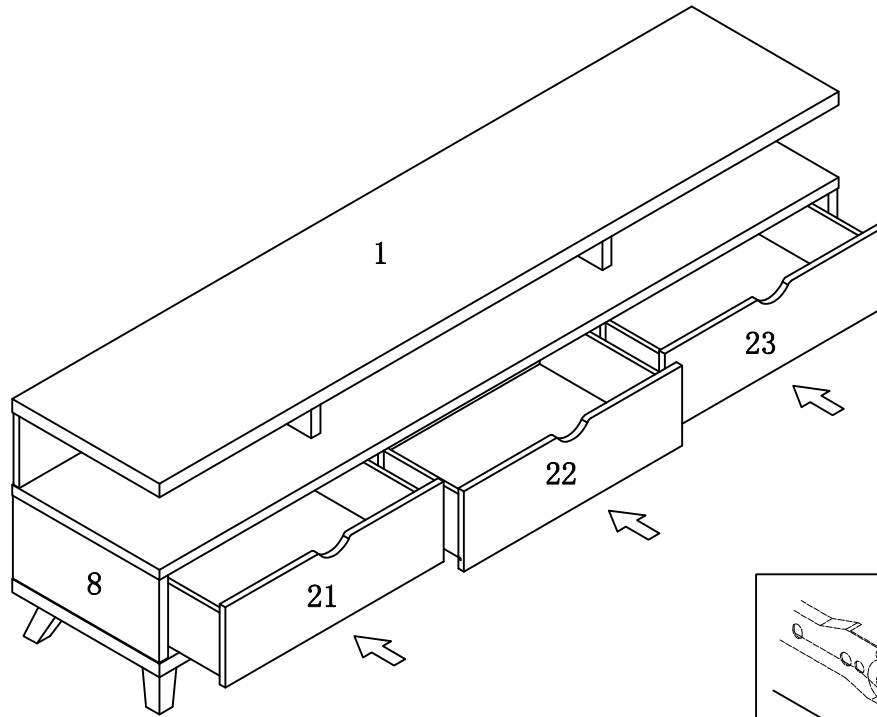

STEP 10