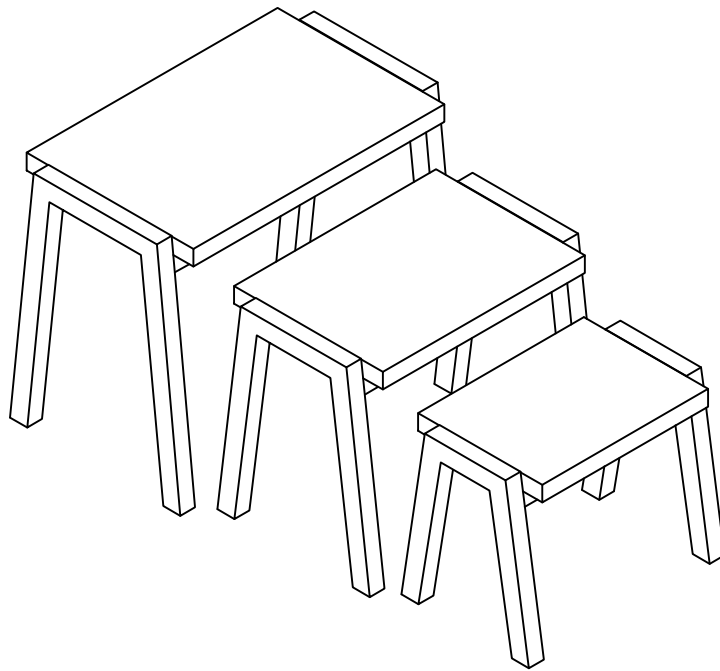# ASSEMBLY INSTRUCTION

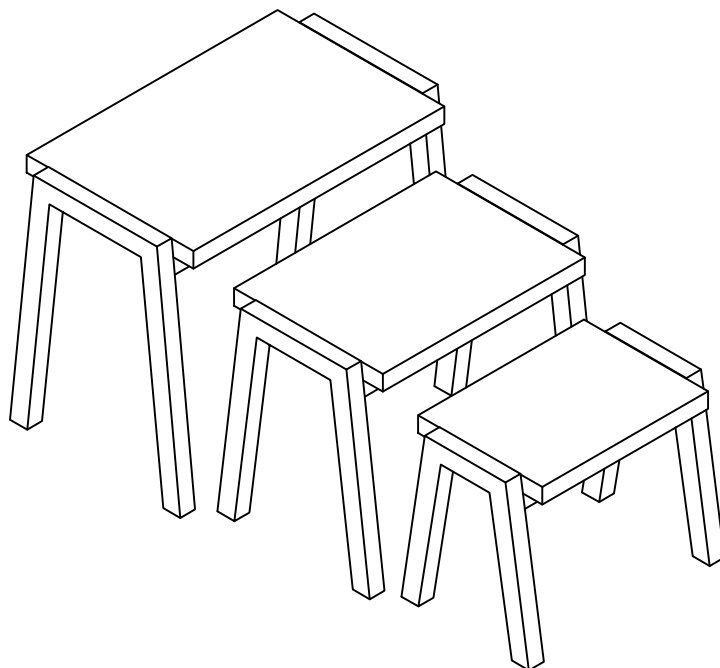ITEM#:161610-X3

ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.
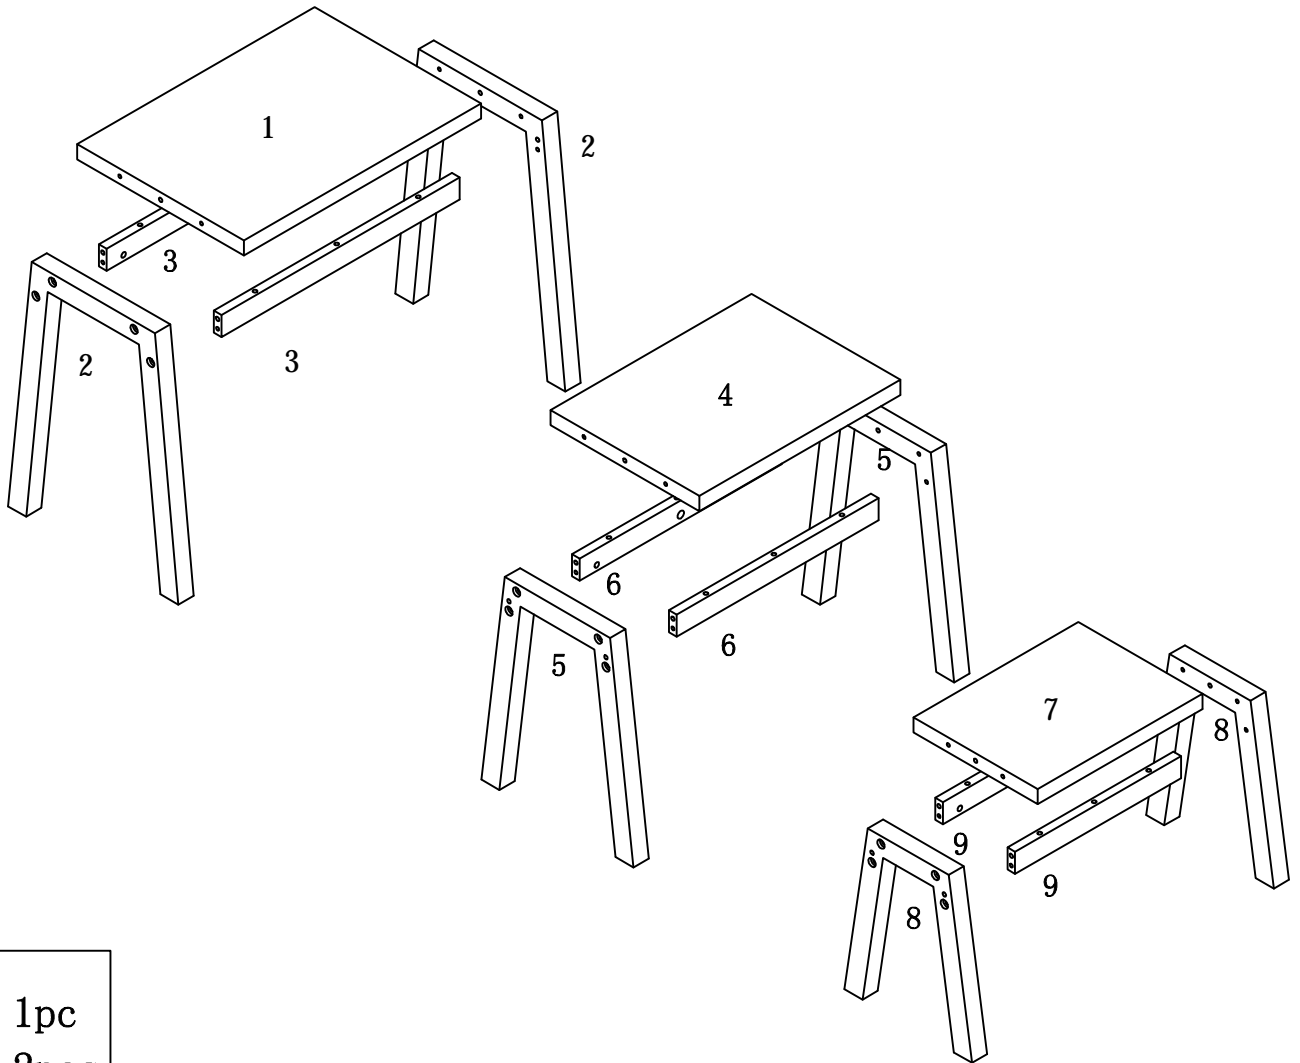
Tip #3: Read manual before assembling, it helps!

ITEM#:161610-X3

PARTS IDENTIFICATION
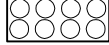
ITEM#:161610-X3

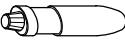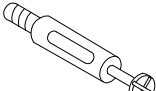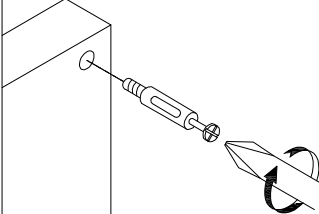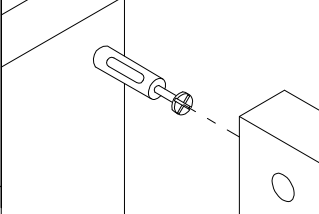|	
(1)	1pc
(2)	2pcs
(3)	2pcs
(4)	1pc
(5)	2pcs
(6)	2pcs
(7)	1pc
(8)	2pcs
(9)	2pcs
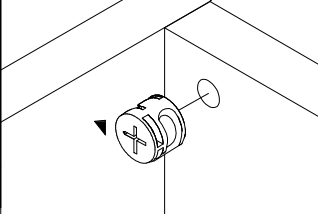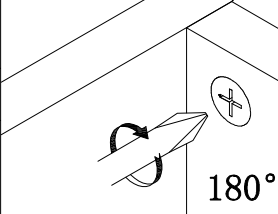
HARDWARE IDENTIFICATION

ITEM#:161610-X3

A	⊕—▭	L29	6pcs
B	▩	φ15	6pcs
C	▬	φ8x25	30pcs
D	⟟	φ16	12pcs
E	⬚	φ22(BK)	24pcs
F	⬚	φ20	6pcs
G	⬚	φ13	24pcs
H	⊖————	M6x65	24pcs
I	⬭	φ10x13	24pcs
J	⌐	M4	1pc
K	◎	φ8x16x2	24pcs
L	▷—▭	Glue: For securing please apply to wood dowel first before inserting into panel	1pc

HARDWARE IDENTIFICATION

ITEM#:161610-X3

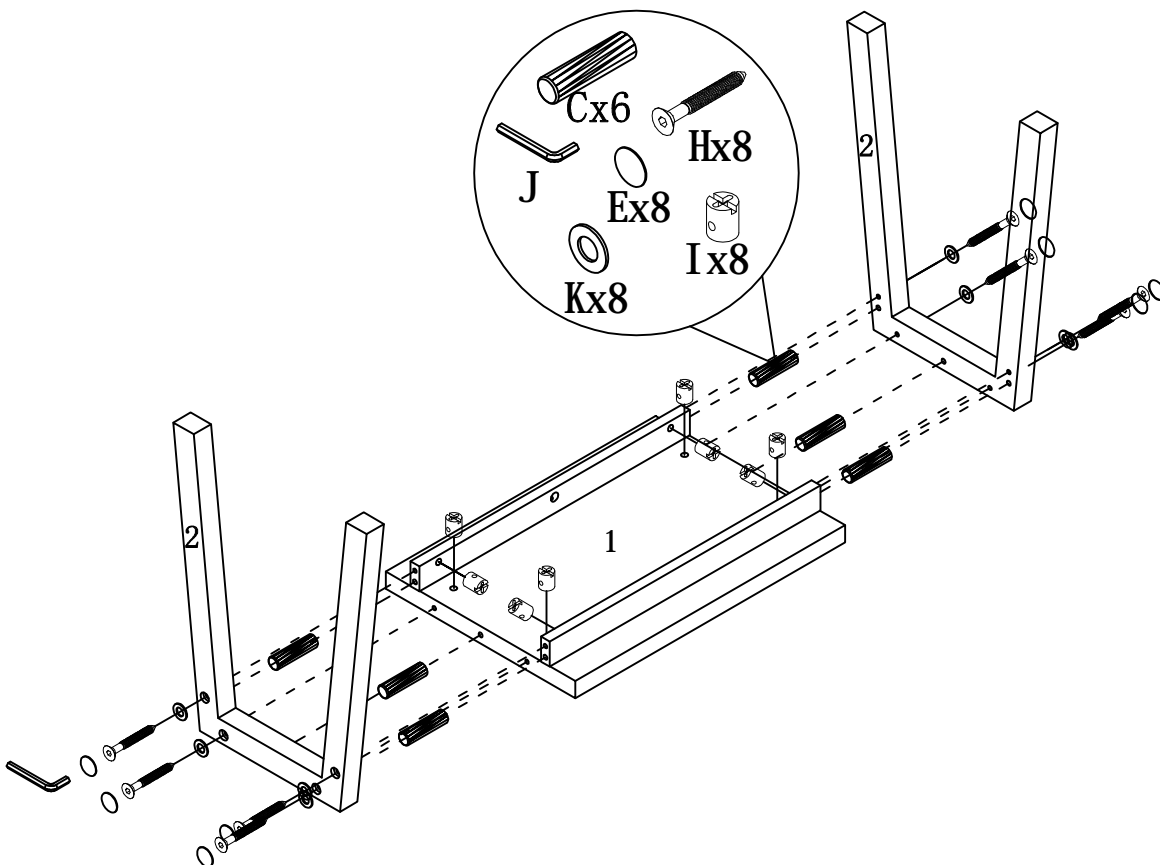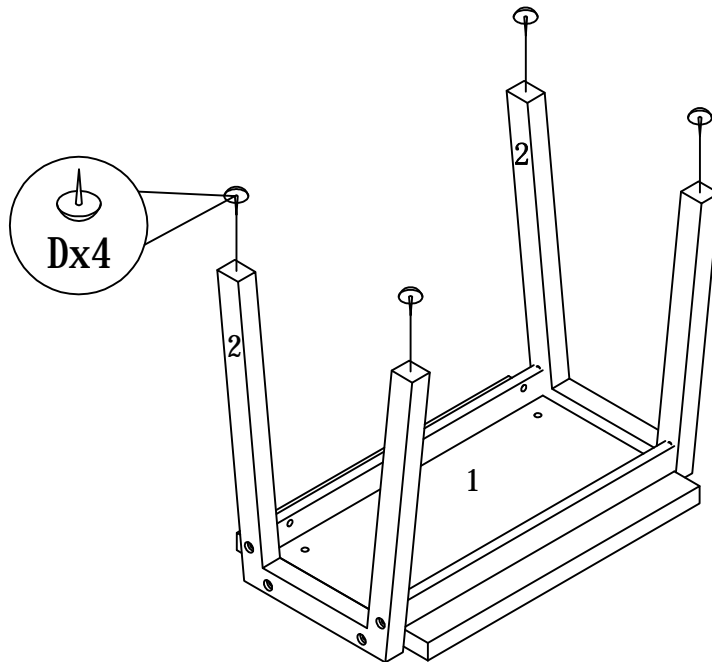| HOW TO	1	2	3	4
Cam Bolt / Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position. 180°

HARDWARE IDENTIFICATION
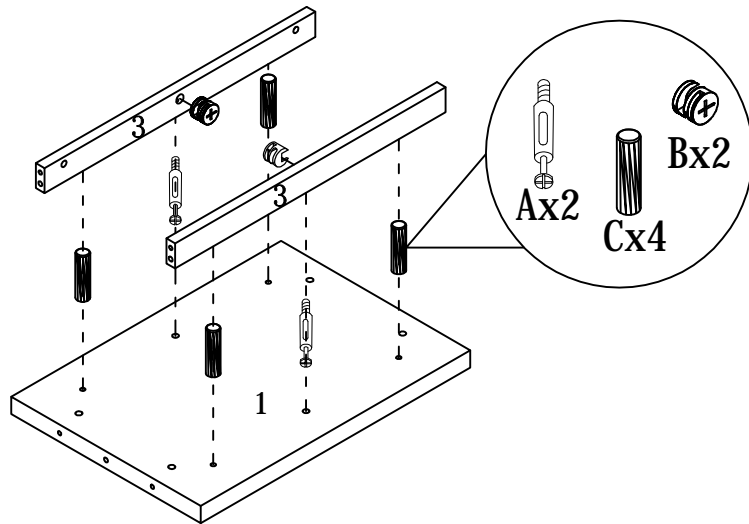
STEP1

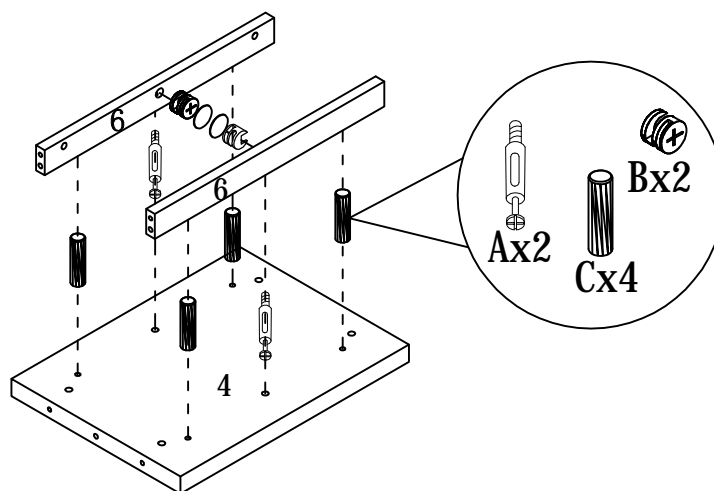Ax2 Cx4 Bx2

STEP2

Cx6 Hx8 J Ex8 Ix8 Kx8

HARDWARE IDENTIFICATION

Dx4

2

2

1

STEP3

STEP4

6

6

4

Ax2

Bx2

Cx4

HARDWARE IDENTIFICATION

ITEM#:161610-X3

Cx6

Hx8

J   Ex8

Ix8

STEP5

STEP6

Dx4
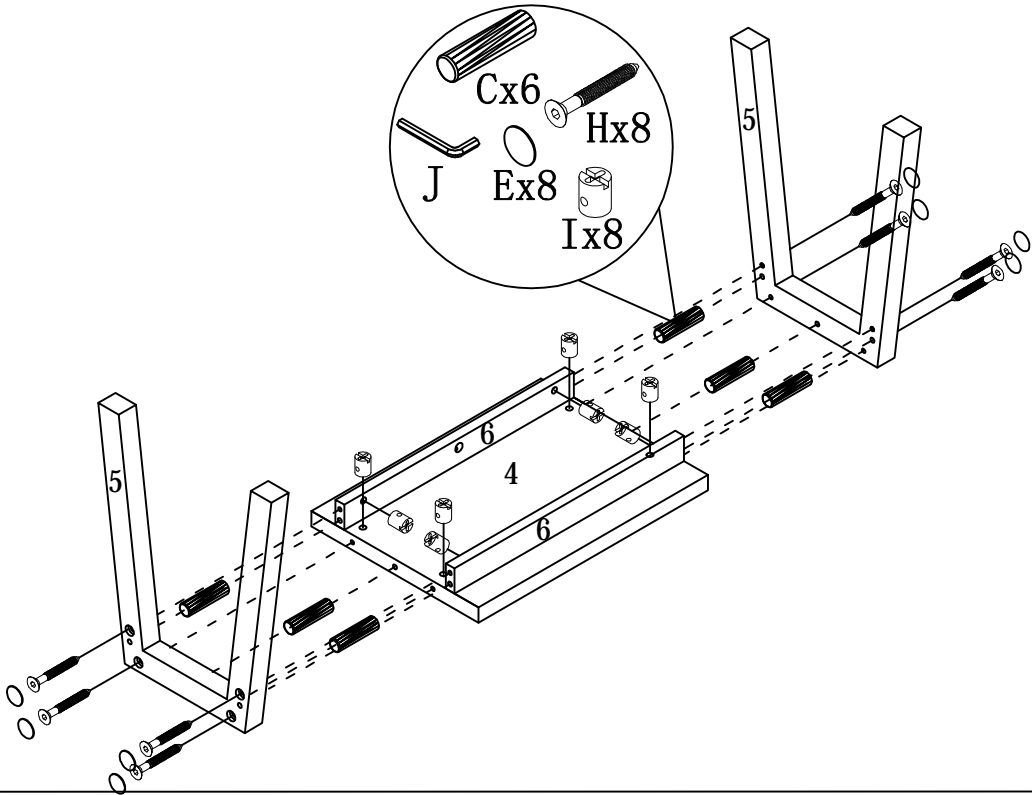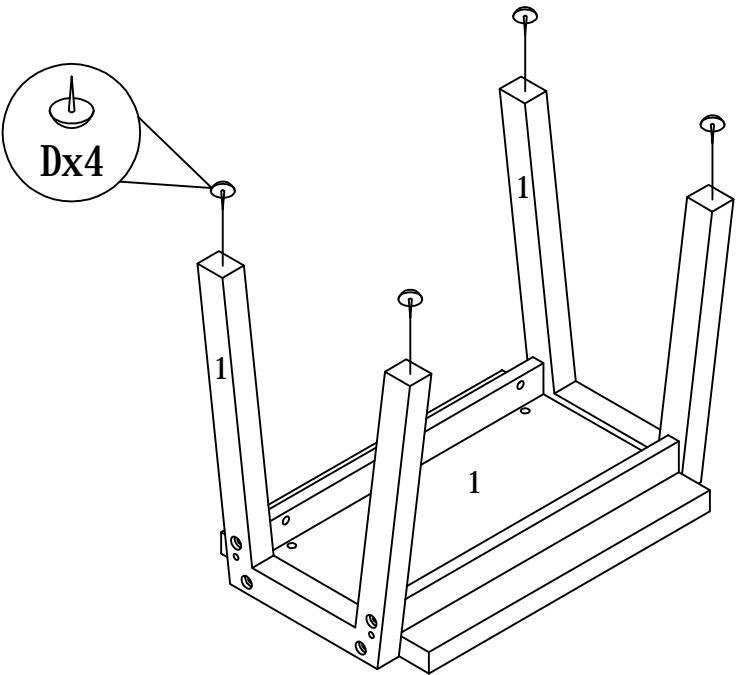
HARDWARE IDENTIFICATION
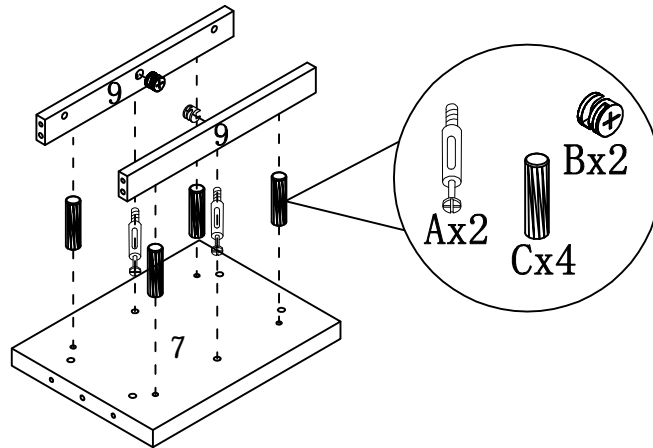
STEP7

STEP8

HARDWARE IDENTIFICATION

STEP9

STEP10