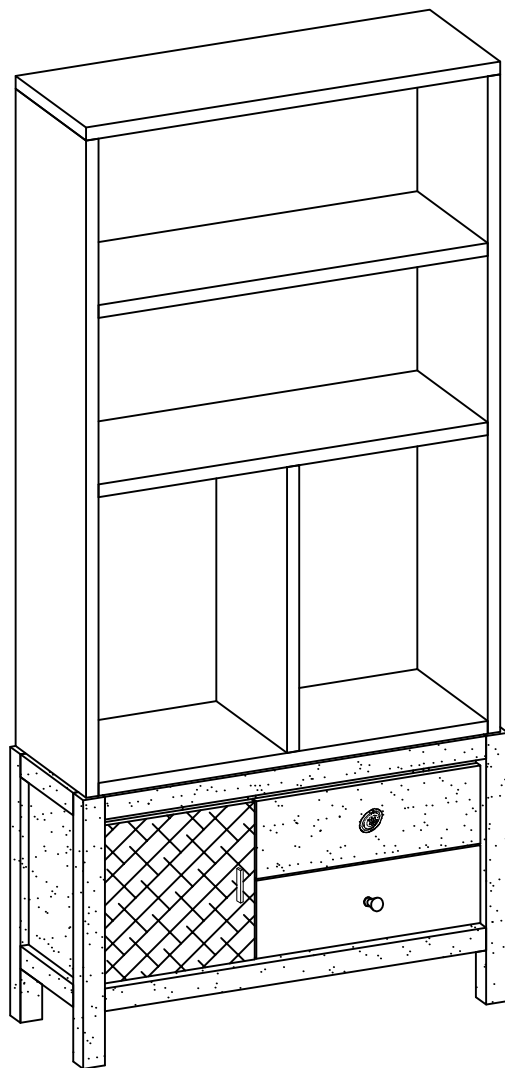# ASSEMBLY INSTRUCTION

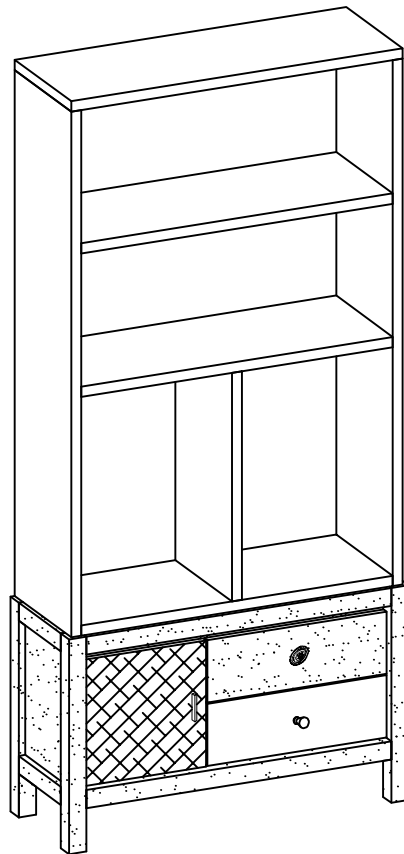## ITEM#:161724

ASSEMBLY INSTRUCTION

PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/ blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.
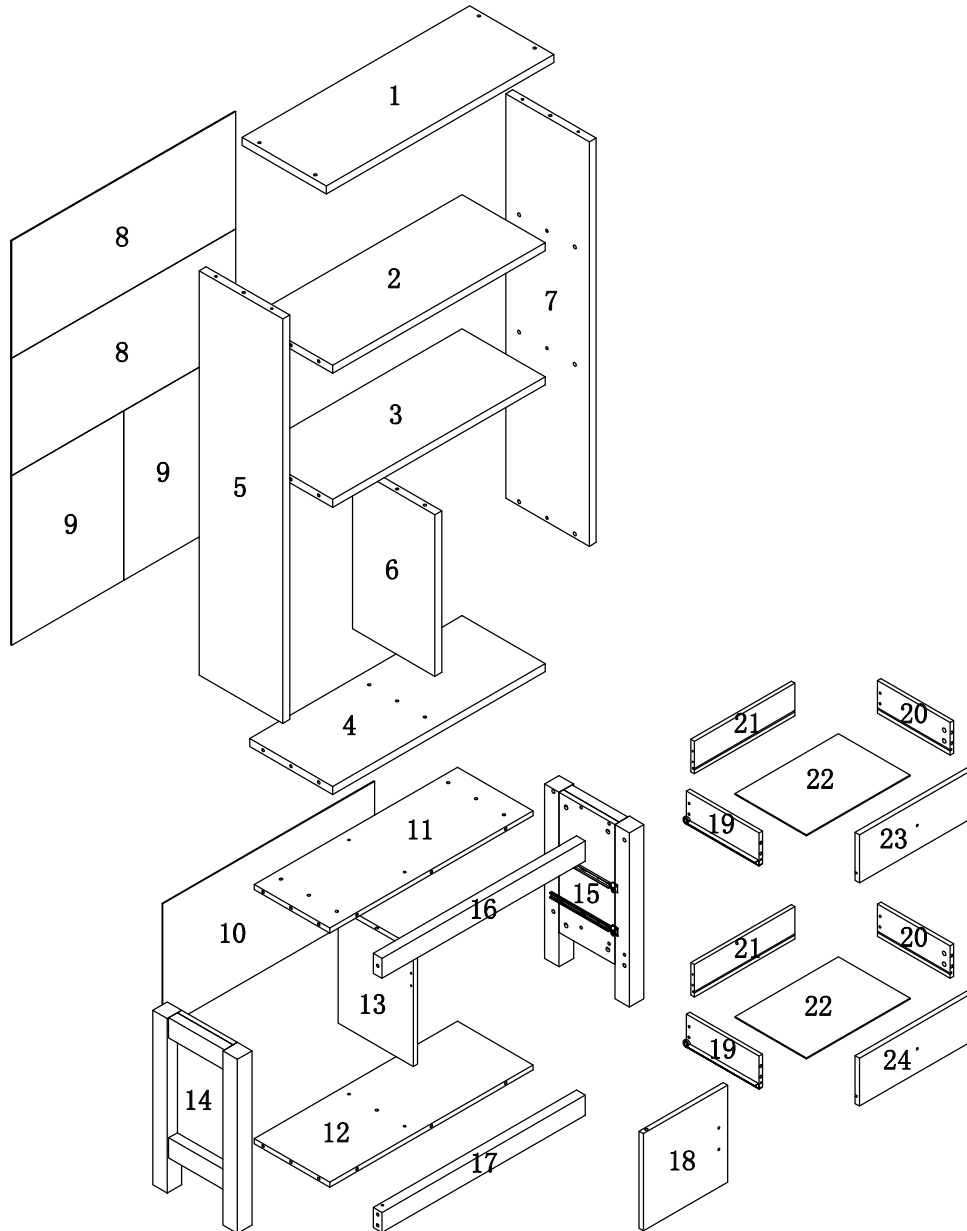
Tip #3: Note position of all holeson each panel during assembly.
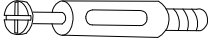
ITEM#:161724

PARTS IDENTIFICATION
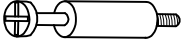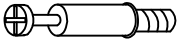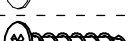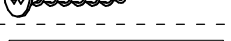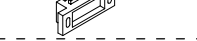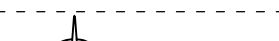
ITEM#:161724

(1)	1pc	(9)	2pcs	(17)	1pc
(2)	1pc	(10)	1pc	(18)	1pc
(3)	1pc	(11)	1pc	(19)	2pcs
(4)	1pc	(12)	1pc	(20)	2pcs
(5)	1pc	(13)	1pc	(21)	2pcs
(6)	1pc	(14)	1pc	(22)	2pcs
(7)	1pc	(15)	1pc	(23)	1pc
(8)	2pcs	(16)	1pc	(24)	1pc
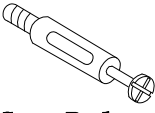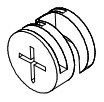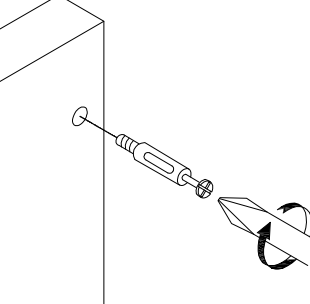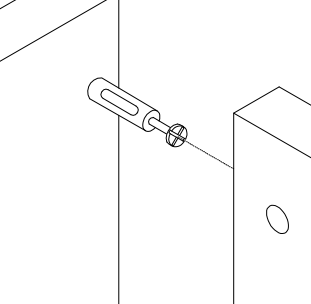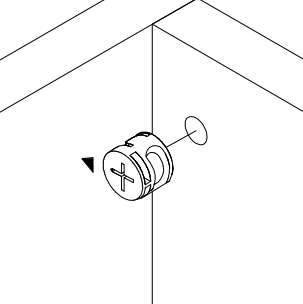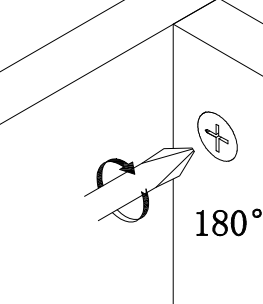
HARDWARE IDENTIFICATION

ITEM#:161724

A		L29	18pcs
B		⌀15	18pcs
C		L24	12pcs
D		⌀12	12pcs
E		L20	8pcs
F		⌀12	8pcs
G		⌀8×25	22pcs
H		⌀3×14	2pcs
I		⌀3×16	2pcs
J		⌀4×30	12pcs
K		64mm	1pc
L			1pc
M		12363	1pc
N		M4×22	4pcs
O		M7×48	6pcs
P		⌀8×⌀16×2	6pcs
Q		M6×25	4pcs
R			1pc
S			1pc
T			1pc
U		Z1016	92pcs
V		⌀16	4pcs
W		⌀20	10pcs
X		197x5x1	1pc
Y		⌀8x40	1pc
Z		12x12x1	2pcs
A1		⌀5x40	1pc
B1		⌀4x25	1pc
C1		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ASSEMBLY INSTRUCTION

ITEM#：161724

HOW TO	1	2	3	4
Cam Bolt				180°
Cam Lock	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.
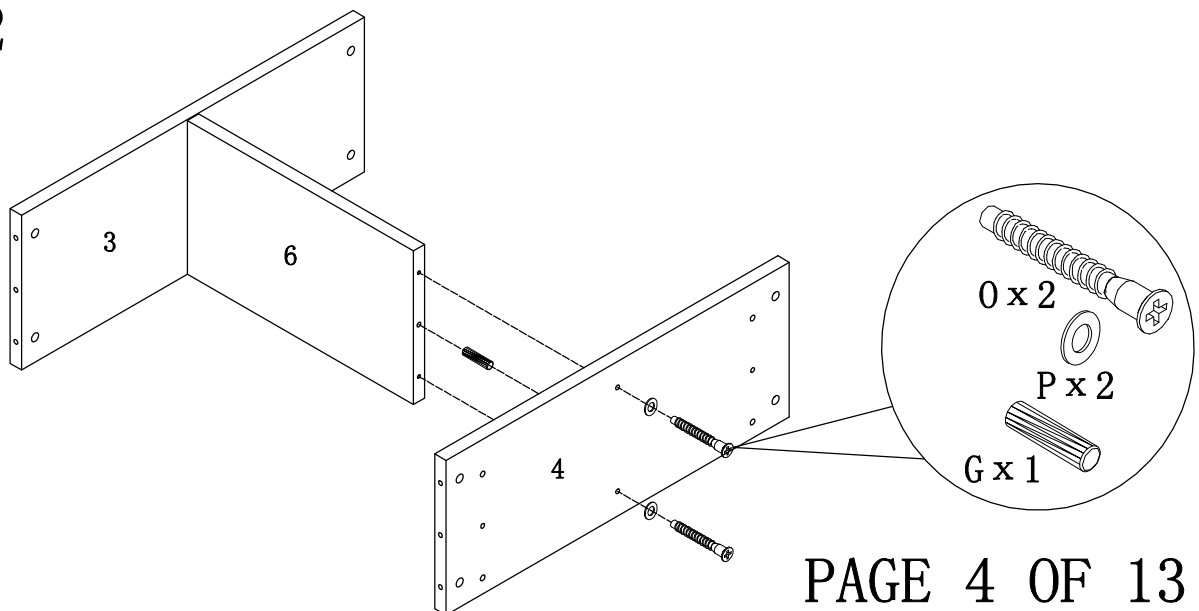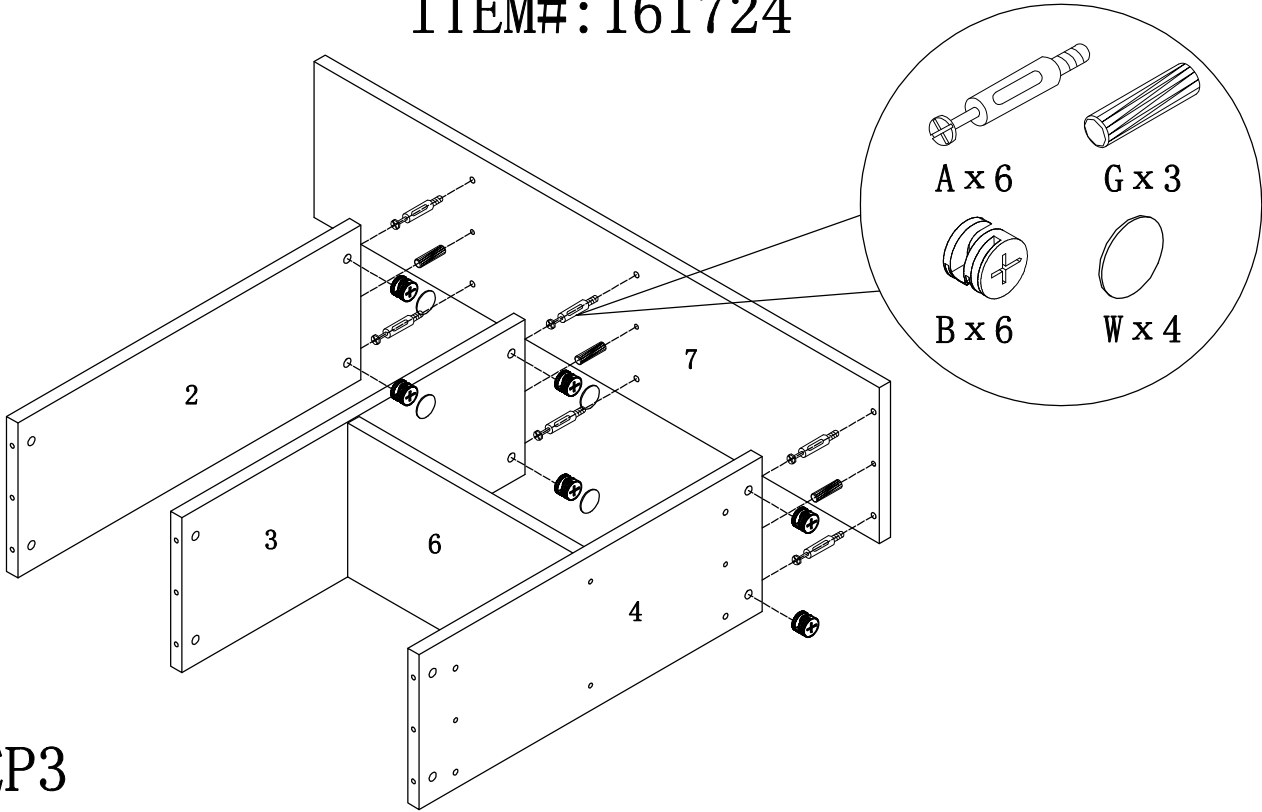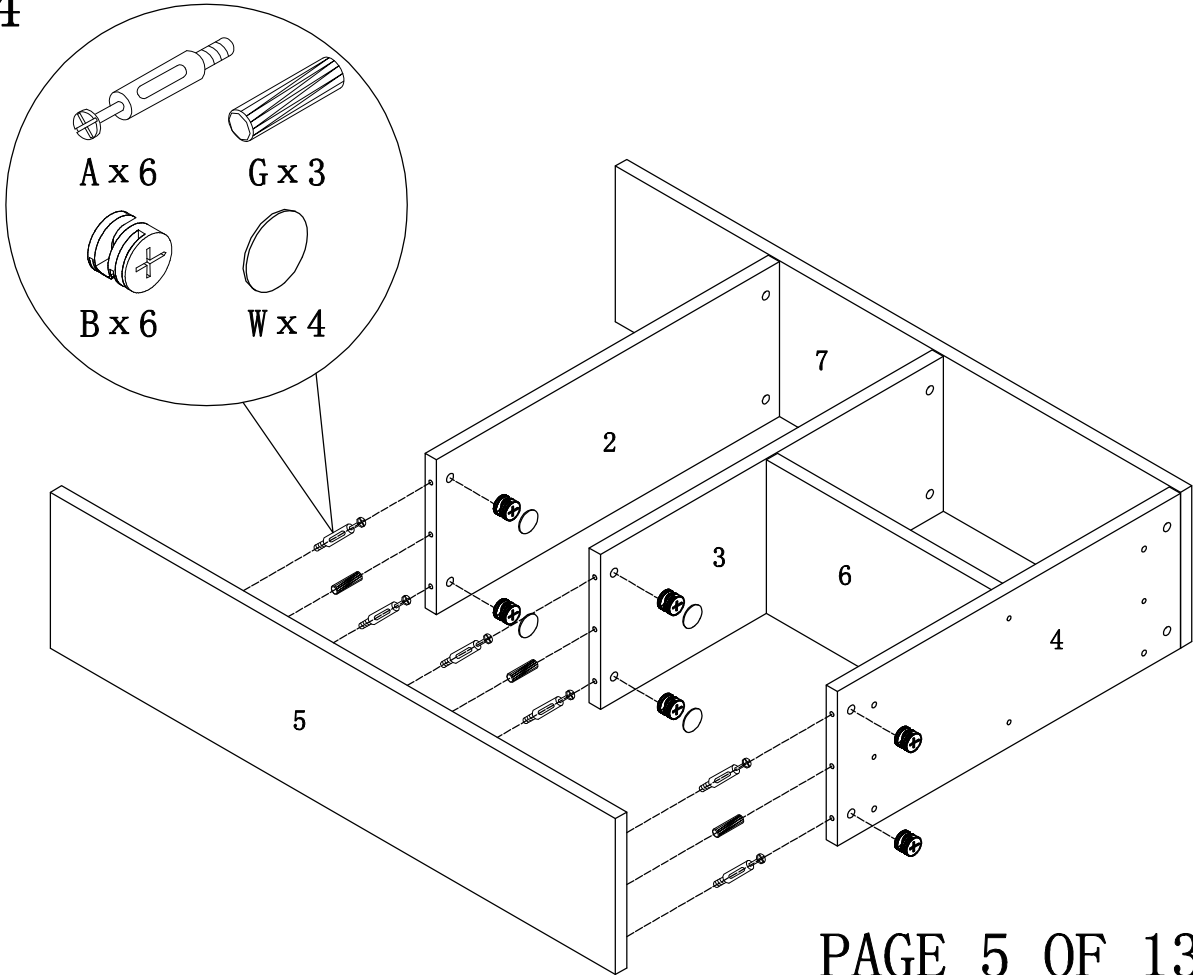
A x 2   G x 1

B x 2   W x 2

STEP1

STEP2

O x 2

P x 2

G x 1

ASSEMBLY INSTRUCTION

ITEM#:161724

A x 6   G x 3

B x 6   W x 4

2

7

3   6

4

STEP3

STEP4

A x 6   G x 3

B x 6   W x 4

2

7

3   6

4

5

ASSEMBLY INSTRUCTION

0 x 4

P x 4

G x 2

1

7

2

3

6

5

4

STEP5

STEP6

8

8

9

9

1

9

7

4

U x 68

ASSEMBLY INSTRUCTION

ITEM#:161724

J x 8

20

21

19

x 2

STEP7

STEP8

21   20

19   22

23

E x 4   F x 4

N x 1   M x 1

STEP9

21   20

19   22

24

E x 4   F x 4

N x 1   L x 1

ASSEMBLY INSTRUCTION

ITEM#:161724

STEP10

16

11

C x 2   D x 2   G x 1

STEP11

17

12

C x 2   D x 2   G x 1

ASSEMBLY INSTRUCTION

ITEM#:161724

13

17

12

G x 1   J x 2

STEP12

STEP13

G x 1   J x 2

16

11   13   17

12

ASSEMBLY INSTRUCTION

ITEM#:161724

STEP14

11

13

12

15

A x 2

C x 4

G x 3

B x 2

D x 4

STEP15

15

11

13

12

14

A x 2

C x 4

G x 3

B x 2

D x 4
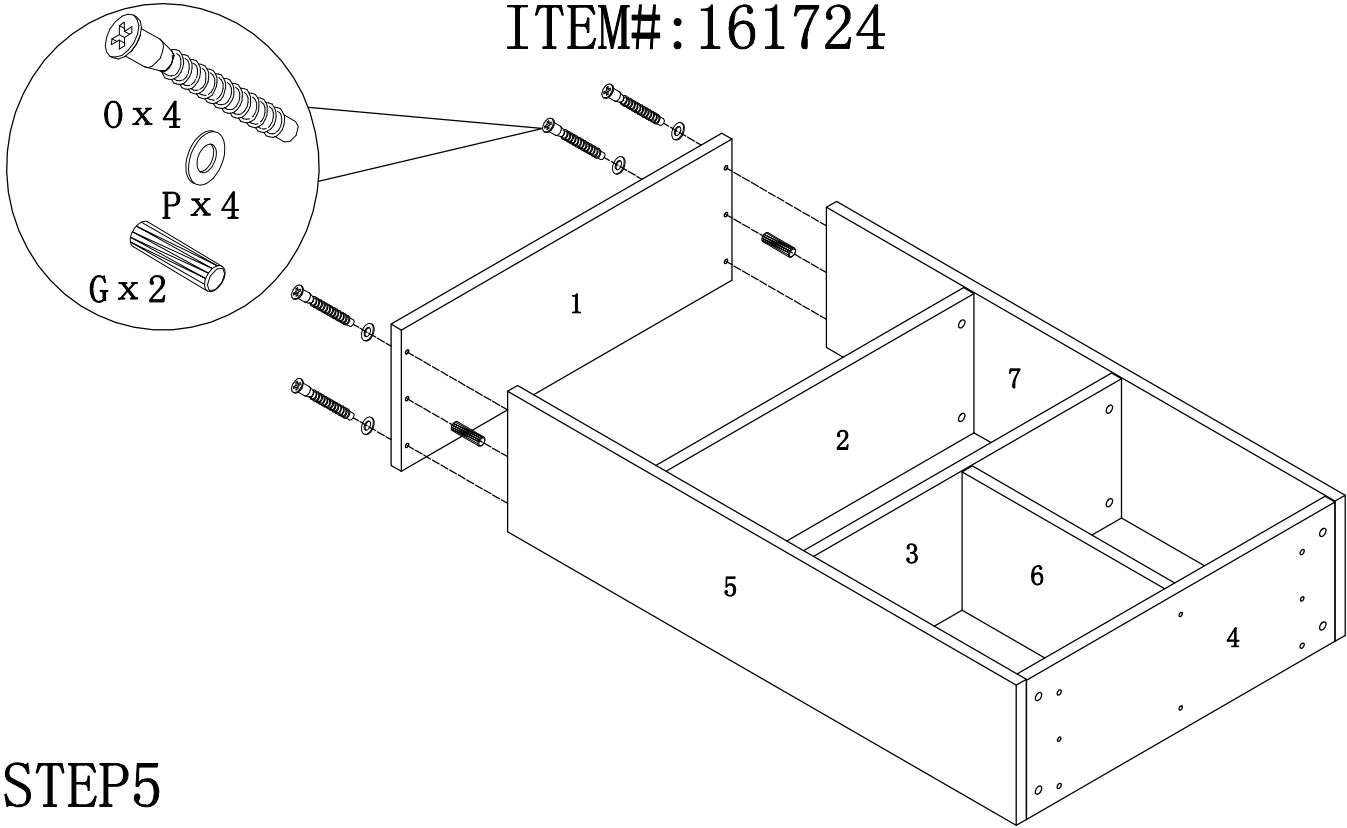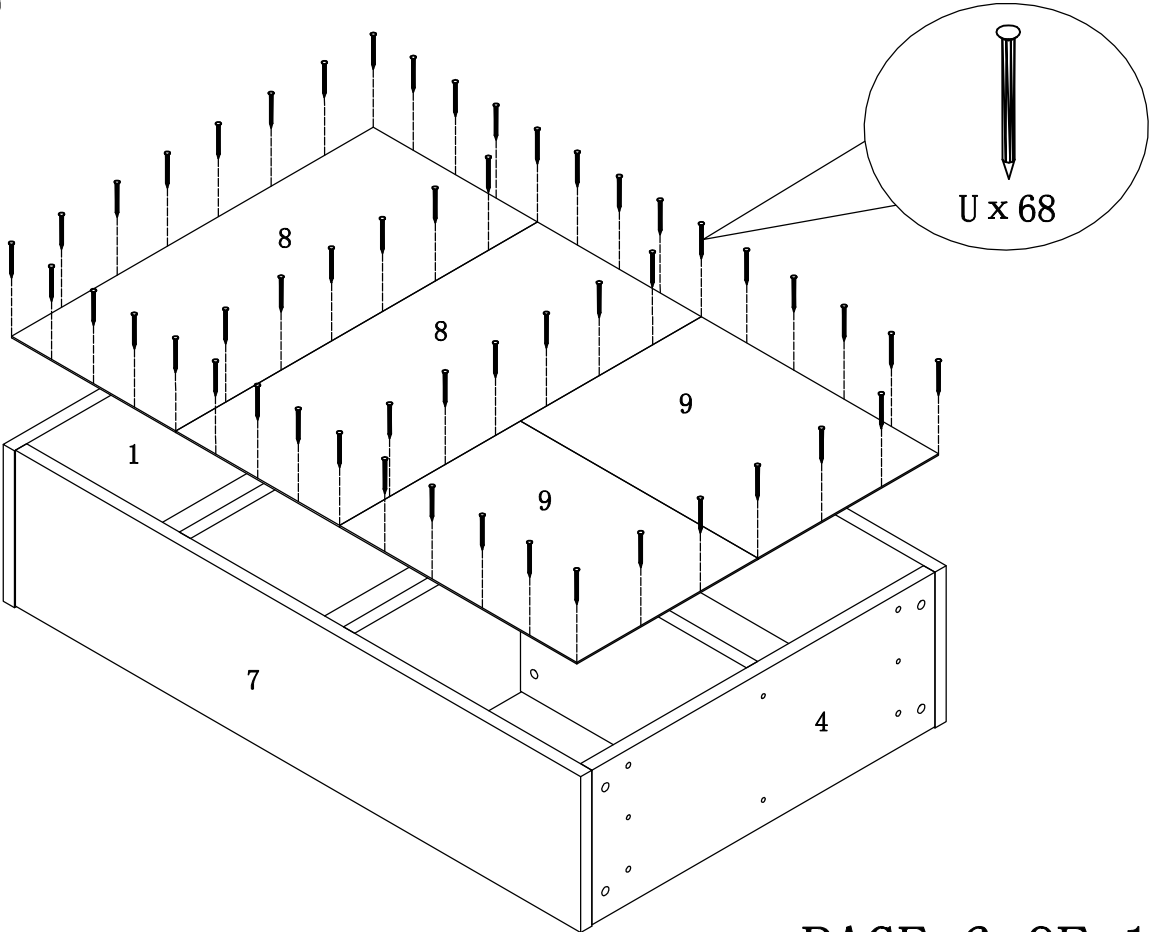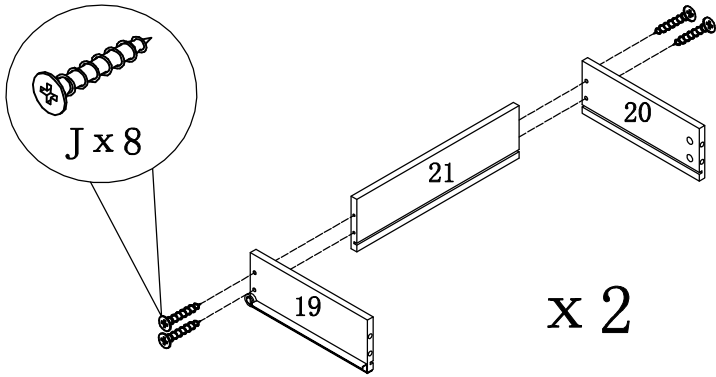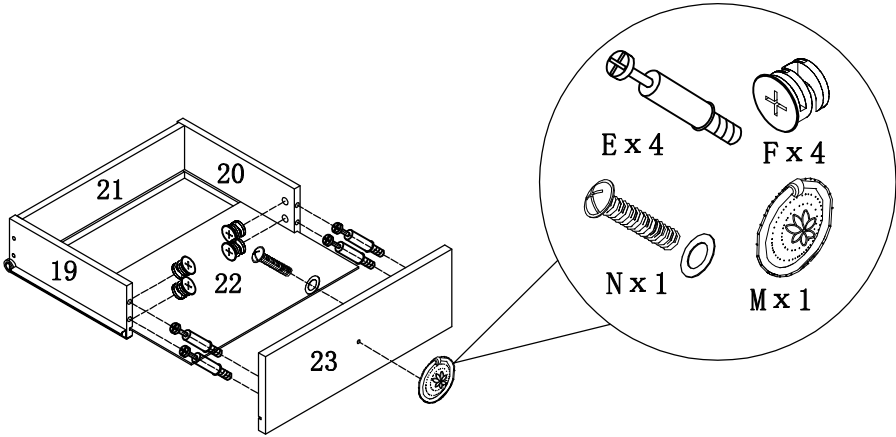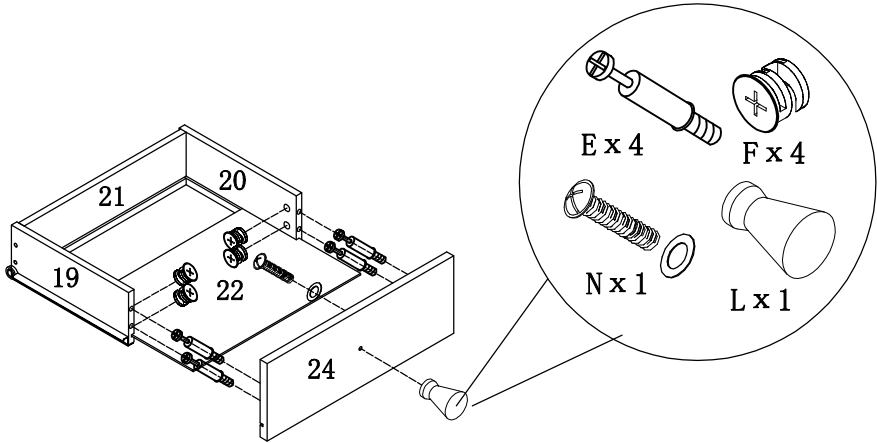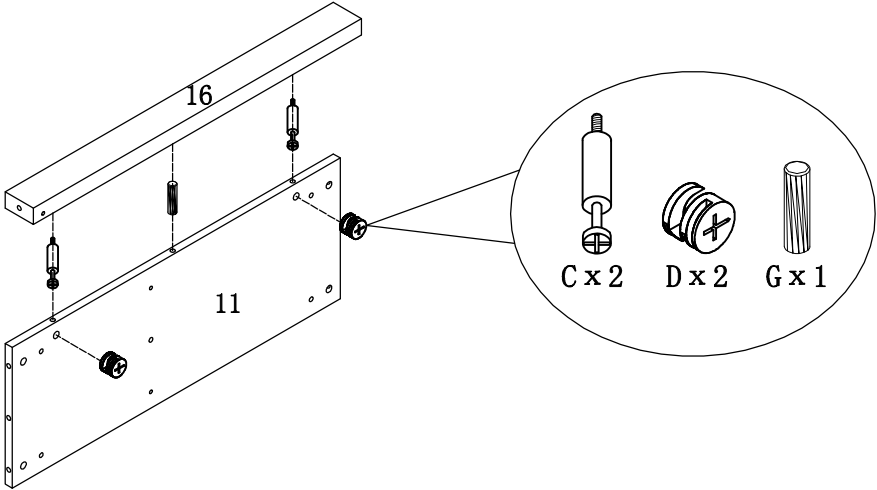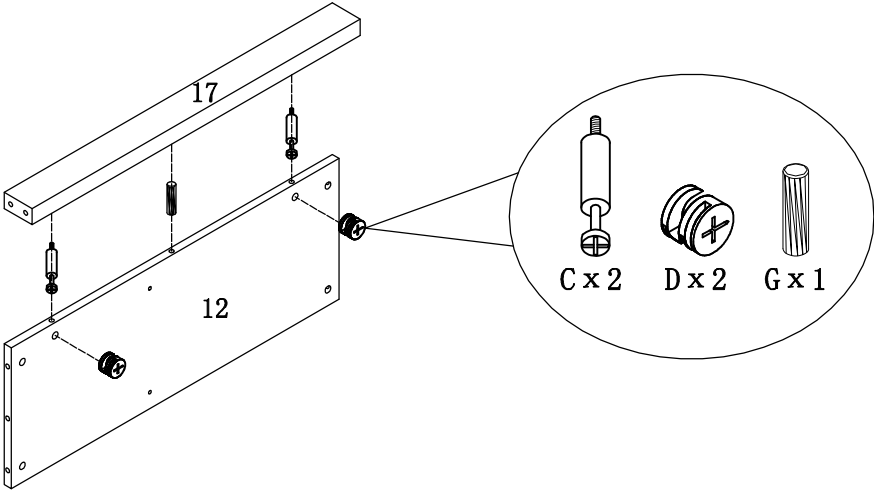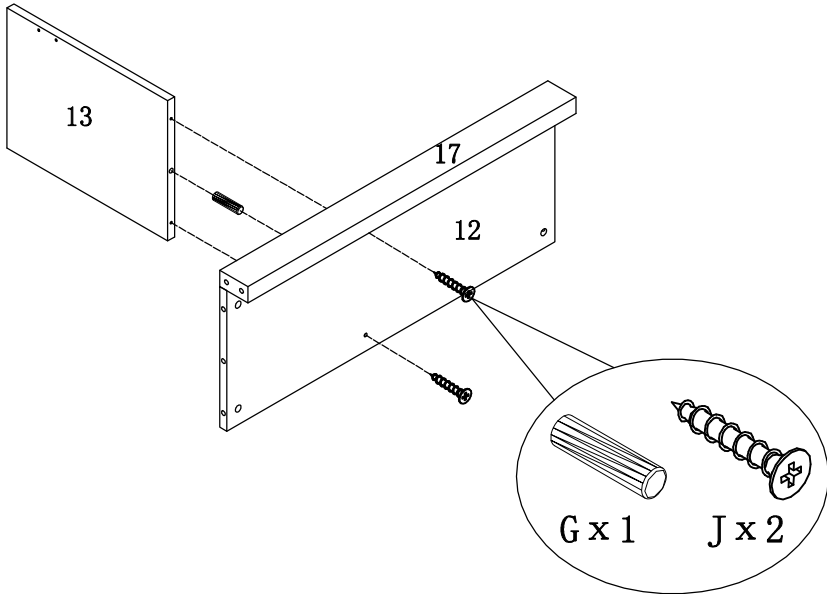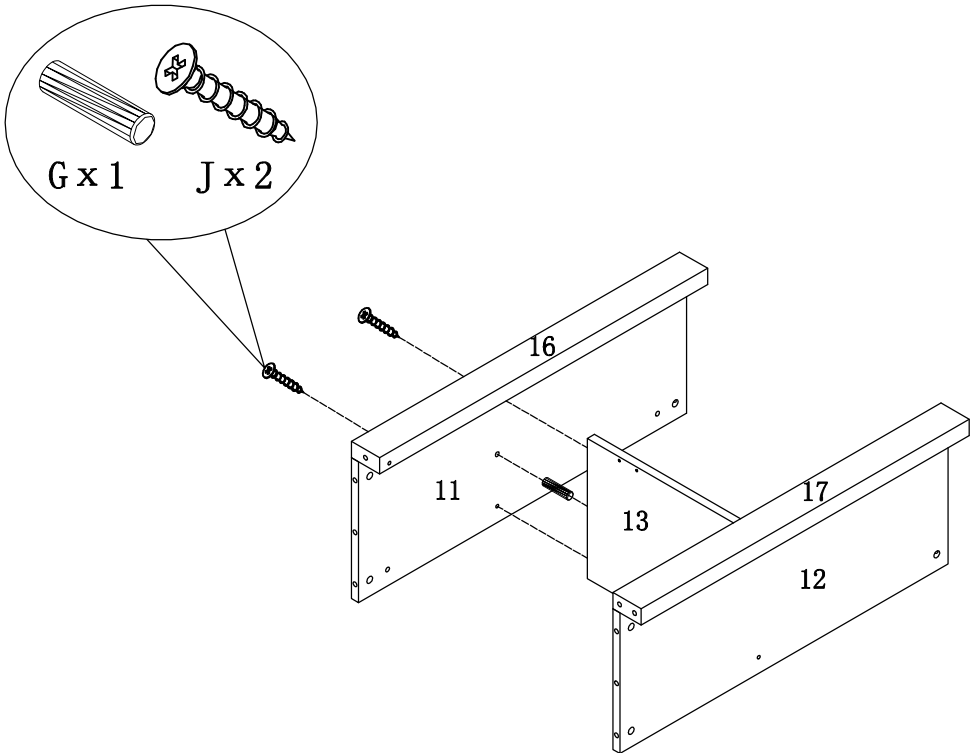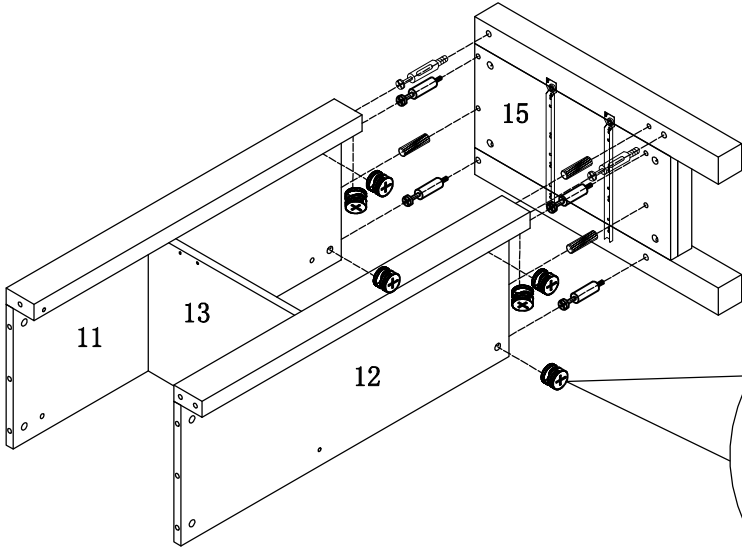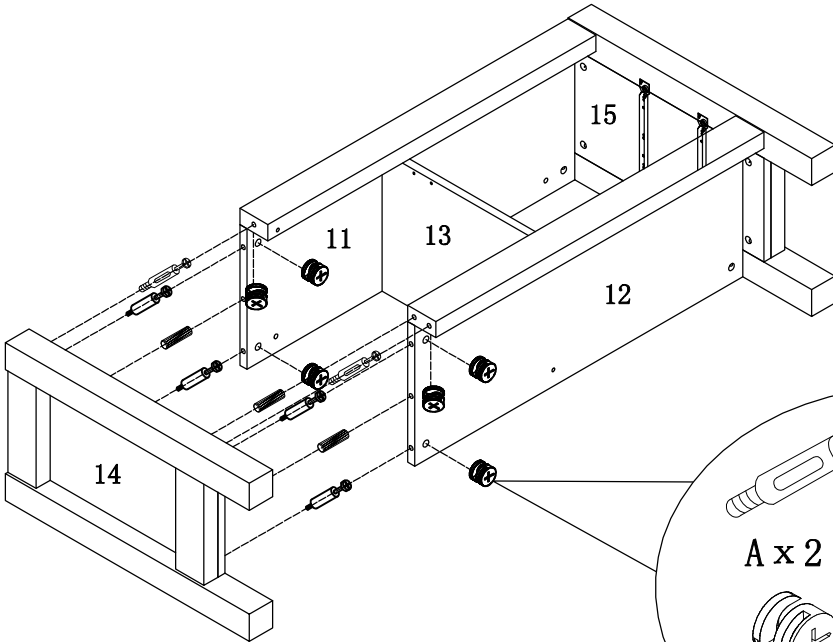
ASSEMBLY INSTRUCTION

ITEM#:161724

STEP16

10

11

12

15

U x 24   V x 4

STEP17

1

7

5

4

11

14

G x 2   Q x 4

ASSEMBLY INSTRUCTION

ITEM#:161724

T x 1

I x 2

H x 2

K x 1   N x 2   R x 1   S x 1
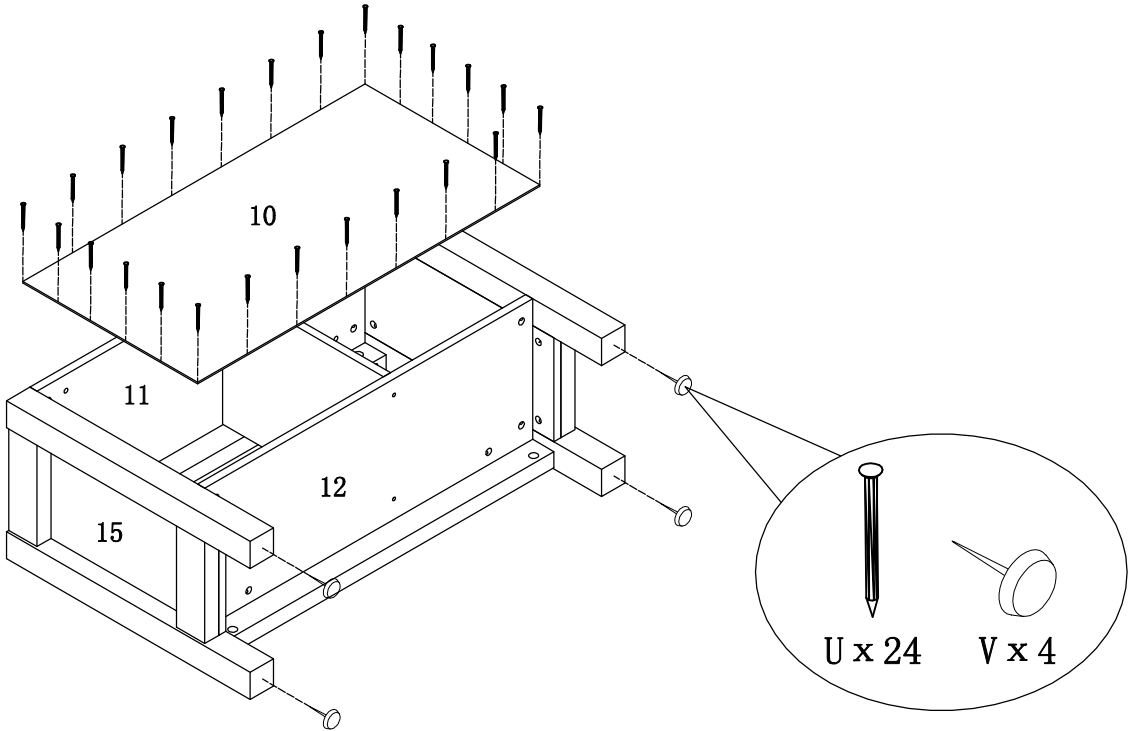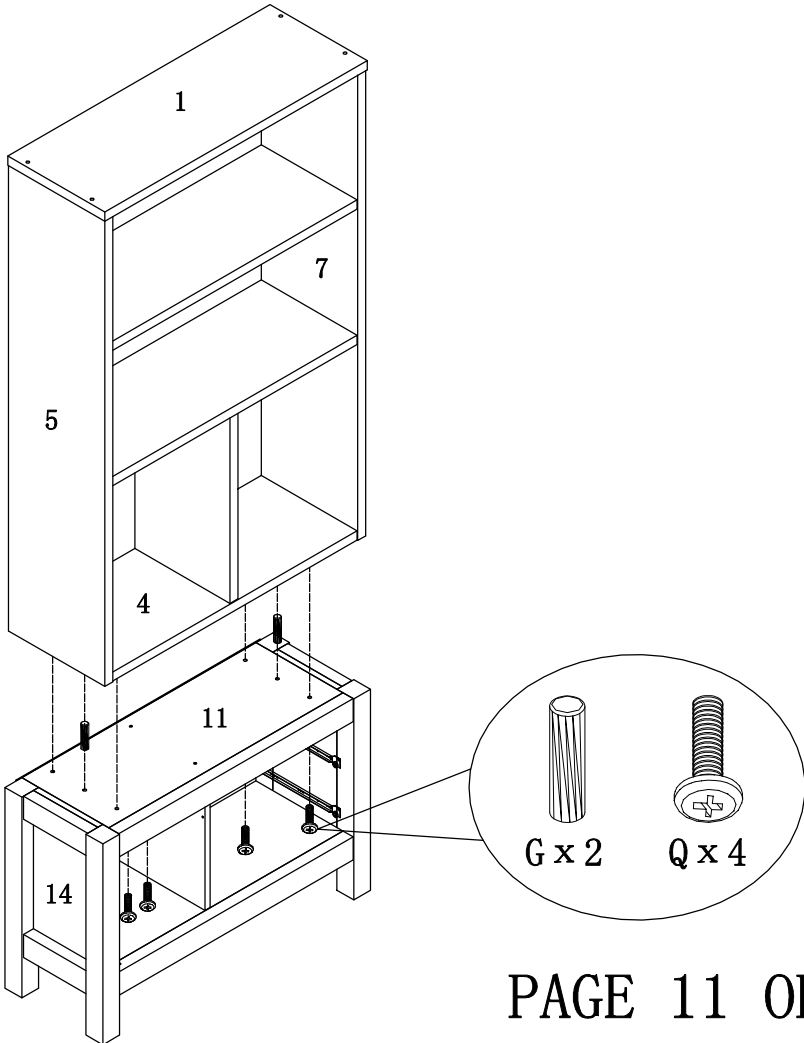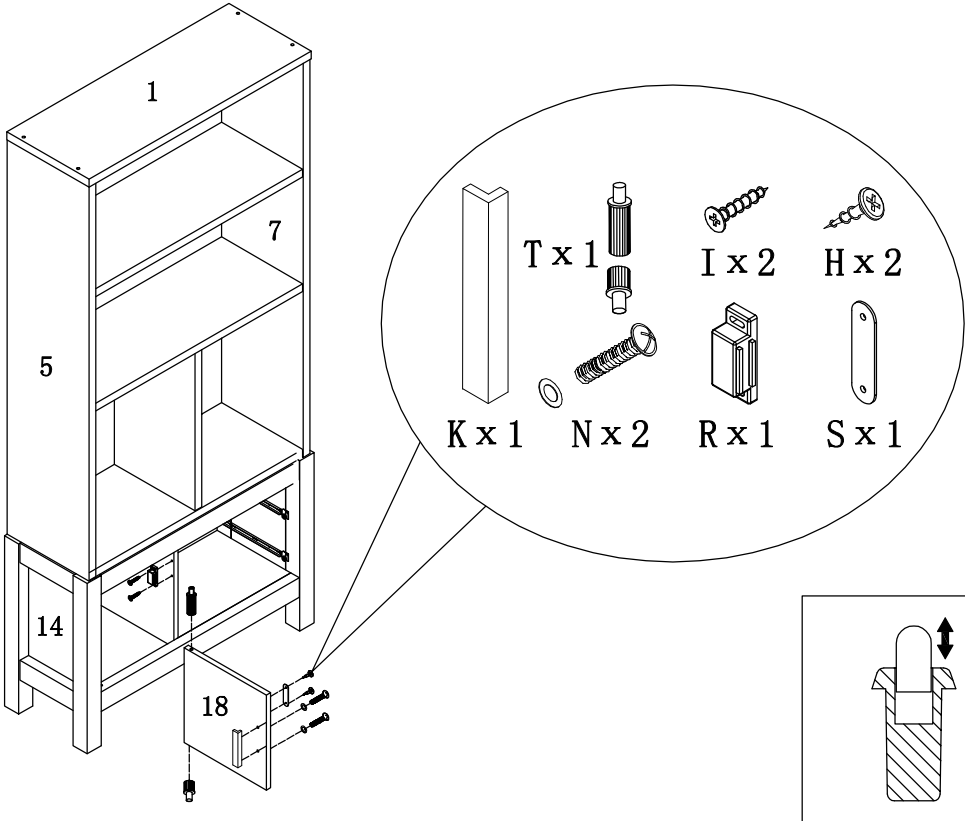
STEP18

STEP19
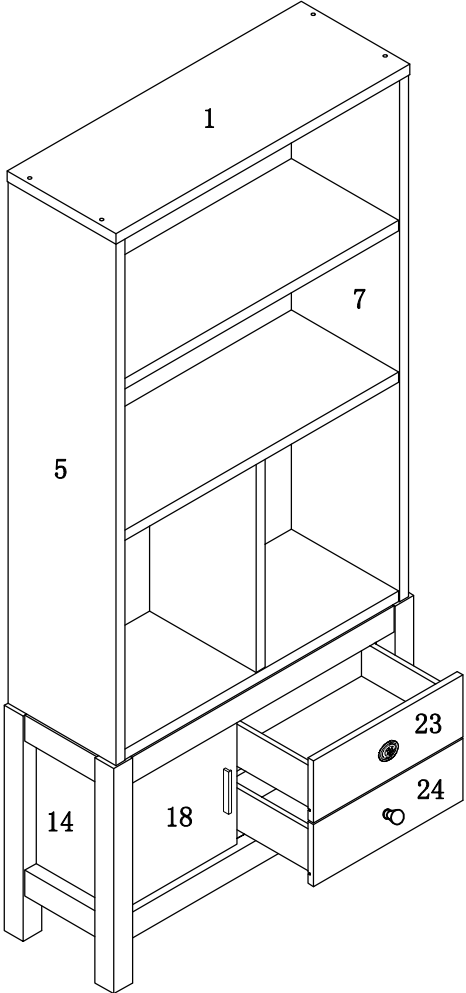
ANTI-TIPPING STRAP INSTRUCTION

HARDWARE(INCLUDED):

DRYWALL ANCHOR ⌀8X40 X 1PC
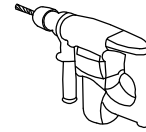
METAL BRACKETS 12×12×1 X 2PCS

DRYWALL SCREW ⌀5X40 X 1PC

STRAP 197×5×1 X 1PC

FLATHEAD SCREW ⌀4X25 X 1PC

TOOLS NEEDED (NOT INCLUDED):

DRILL & DRILL BIT

LIGHT HAMMER

Note: Hardware included only compatible with standard drywalls.
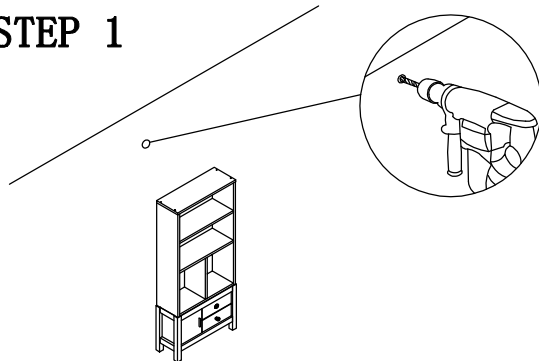
STEP 1
1. Find spot on wall 1″ below top of item.
2. Using a drill bit slightly thinner than anchor , drill hole into drywall.

STEP 2
1. Use a light hammer to tap anchor into hole.
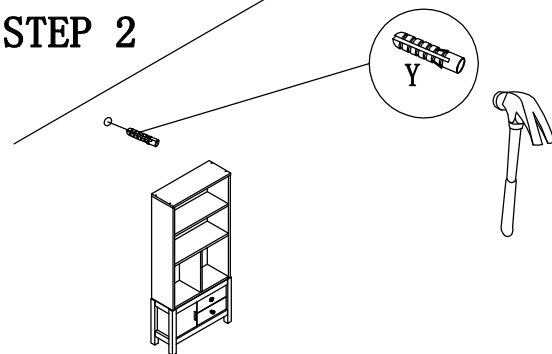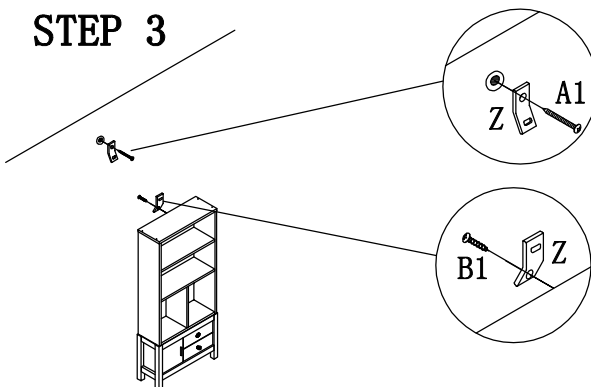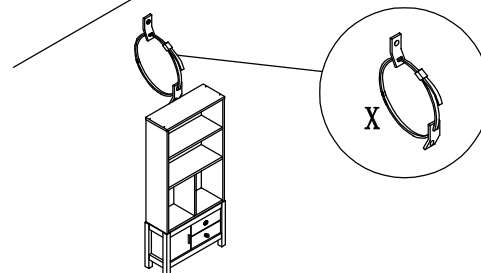2. Anchor should fit snugly. lf hole is too small, drill again to increase hole size .Do not force anchor into wall.

STEP 3
1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item. along top edge.

STEP 4
1. Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2. pull lightly til strap stops.
Assembly is complete.